



CAPTAIN

Pioneer of The Mini Tractor

PARTS CATALOGUE

CAPTAIN 263 540E




CONTENTS

SR. NO.	DESCRIPTION	PAGE NO.
01	MUFFLER ASSEMBLY.....	07
02	RADIATOR COOLANT ASSEMBLY.....	08
03	AIR CLEANER ASSEMBLY.....	09
04	DRY AIR CLEANER ASSEMBLY.....	10
05	ENGINE AND CLUTCH ASSEMBLY.....	11
06	PROPELLER SHAFT ASSEMBLY.....	12
07	CLUTCH HOUSING ASSEMBLY.....	13
08	4WD LINKAGE ASSEMBLY.....	14
09	CLUTCH RELEASE MECHANISM ASSEMBLY.....	15
10	TCA ASSEMBLY.....	16
11	TRANSMISSION HOUSING ASSEMBLY.....	18
12	DIFFERENTIAL CAGE ASSEMBLY.....	19
13	PINION SHAFT ASSEMBLY.....	21
14	MAIN SHAFT ASSEMBLY.....	22
15	PTO SHAFT ASSEMBLY.....	23
16	REVERSE GEAR ASSEMBLY.....	24
17	INPUT SHAFT & 4WD SHAFT ASSEMBLY.....	25
18	FINAL DRIVE LH.....	26
19	FINAL DRIVE RH.....	28
20	WET BRAKE ASSEMBLY.....	30
21	HYDRAULIC BODY ASSEMBLY.....	31
22	DIRECTION CONTROL VALVE ASSEMBLY.....	38
23	HYDRAULIC PUMP & PIPE ASSEMBLY 1.....	39
24	HYDRAULIC PUMP & PIPE ASSEMBLY 2.....	41
25	PC-DC LEVER.....	43
26	FENDER & FOOTREST ASSEMBLY.....	44
27	HML PTO LEVER ASSEMBLY.....	46
28	PARKING BRAKE ASSEMBLY.....	48
29	FENDER BRACKET AND SEAT ASSEMBLY.....	49
30	ROPS ASSEMBLY.....	50
31	BONNET & FRONT MESH ASSEMBLY 1.....	52
32	BONNET & FRONT MESH ASSEMBLY 2.....	54

33	FUEL TANK ASSEMBLY.....	57
34	DASH BOARD ASSEMBLY.....	58
35	FUEL PUMP PIPE 1.....	59
36	FUEL PUMP PIPE 2.....	60
37	HEAT GUARD SEALING ASSEMBLY.....	61
38	POWER STEERING ASSEMBLY.....	62
39	STEERING CYLINDER ASSEMBLY.....	64
40	BRAKE & CLUTCH PEDAL ASSEMBLY.....	65
41	CHASIS FRAME ASSEMBLY.....	67
42	FRONT DIFFERENTIAL CAGE ASSEMBLY.....	69
43	FRONT DIFFERENTIAL PINION SHAFT ASSEMBLY.....	70
44	FLANGE DIFFERENTIAL HOUSING ASSEMBLY LH.....	71
45	FLANGE DIFFERENTIAL HOUSING ASSEMBLY RH.....	72
46	VERTICAL SHAFT HOUSING ASSEMBLY LH.....	73
47	VERTICAL SHAFT HOUSING ASSEMBLY RH.....	75
48	TIE ROD ASSEMBLY.....	77
49	THREE POINT LINKAGE.....	78
50	HAND ACCELERATOR.....	79
51	FOOT ACCELERATOR.....	81
52	DECALS & STICKERS.....	82
53	FRONT & REAR WHEEL ASSEMBLY.....	89
54	FRONT & REAR WHEEL ASSEMBLY (AGRI-WIDE).....	90
55	FRONT & REAR WHEEL ASSEMBLY (TURF).....	91
56	FRONT & REAR WHEEL ASSEMBLY (FLOTATION).....	92
57	FRONT & REAR WHEEL ASSEMBLY (GARDEN GALAXY PRO).....	93
58	FRONT & REAR WHEEL ASSEMBLY (WIDER F-AGRI).....	94
59	ELECTRICAL COMPONENT 1.....	95
60	ELECTRICAL COMPONENT 2.....	96
61	ELECTRICAL COMPONENT 3.....	97
62	DIRECTION CONTROL VALVE 2.....	99
63	BEACON LAMP ASSEMBLY.....	100
64	CANOPY FRAME ASSEMBLY.....	101
65	FRONT WEIGHT ASSEMBLY.....	102
66	REAR WHEEL WEIGHT ASSEMBLY.....	103
67	TOW HOOK ASSEMBLY.....	104

ABBREVIATIONS


AR	AS REQUIRED
ASSY	ASSEMBLY
FT	FULL THREAD
HT	HALF THREAD
FIP	FUEL INJECTION PUMP
HYD	HYDRAULIC
L	LENGTH
LH	LEFT HAND SIDE
RH	RIGHT HAND SIDE
PTO	POWER TAKE OFF
DCV	DIRECTION CONTROL VALVE
PS	POWER STEERING
RM	RAW MATERIAL
RPM	REVOLUTION PER MINUTES
T	TEETH
4WD	FOUR WHEEL DRIVE
HML	HIGH MEDIUM LOW
PC-DC	POSITION CONTRL – DRAFT CONTROL
ROPS	ROLL OVER PROTECTIVE STRUCTURE
TCA	TRANSMISSION CONTROL ASSEMBLY
LED	LIGHT EMITING DIOD
ETS	ENERGIZED TO STOP
Lt.	LITRE
QRC	QUICK RELEASE COUPLING
N/A	NOT APPLICABLE

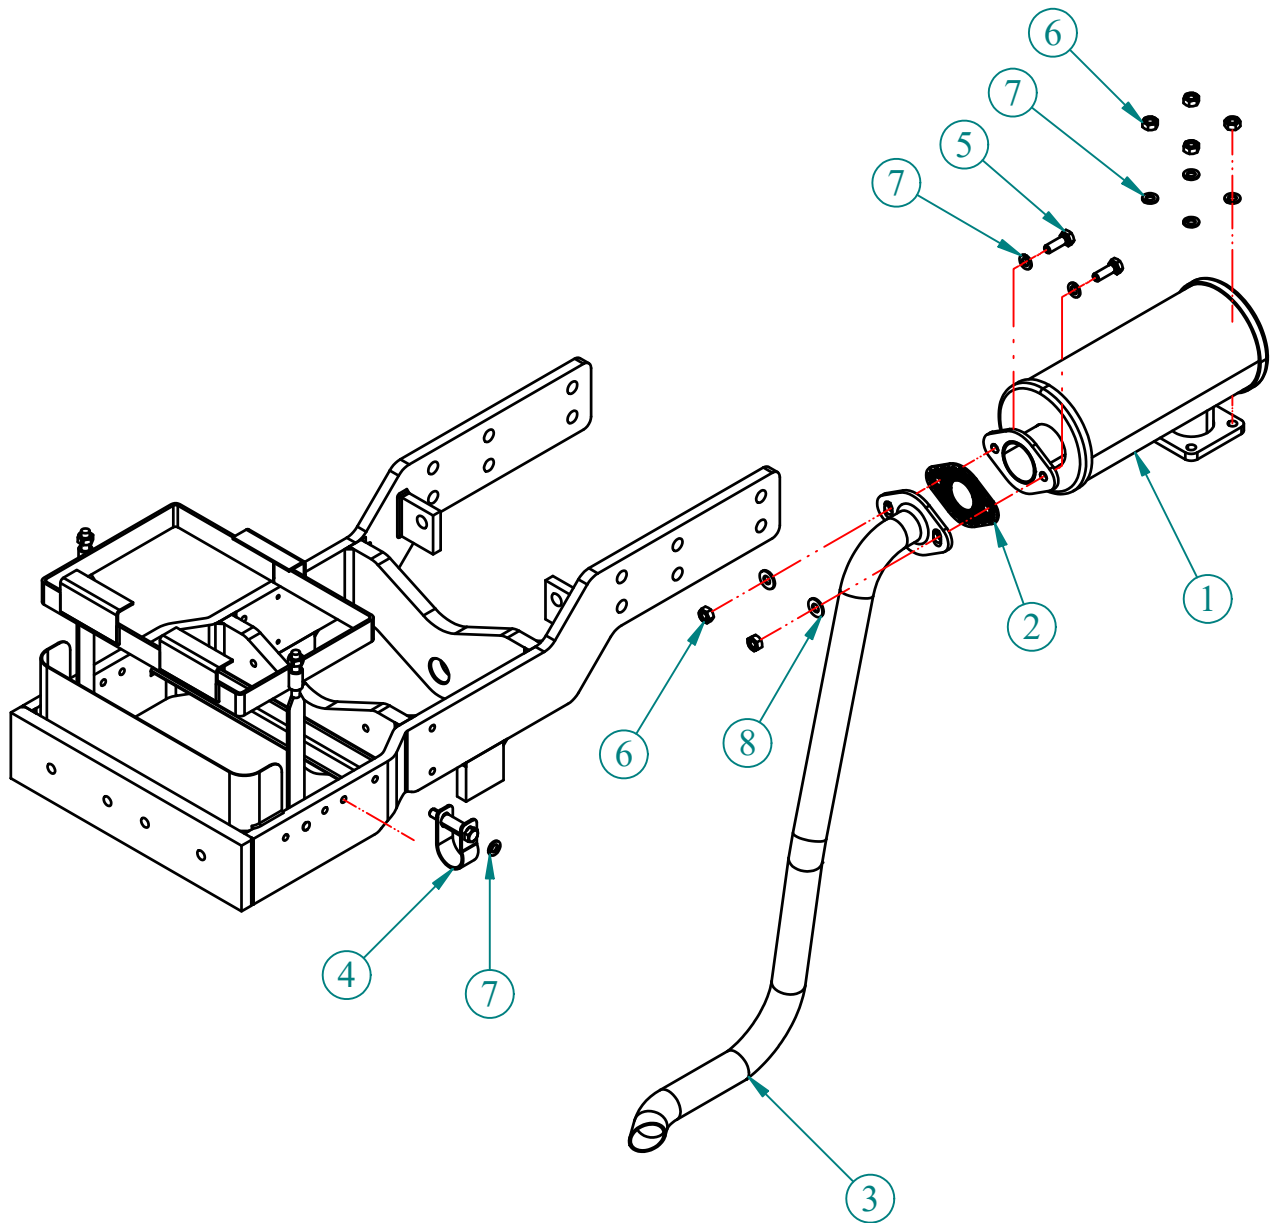

MUFFLER ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :-11305583


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202476	SILENCER (263)	1	
2	11203024	GASKET,EXTENSION PIPE	1	
3	11205341	SILENCER EXTENSION	1	
4	11205953	CLAMP - SILENCER EXTENSION PIPE	1	
5	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
6	11500082	HEX NUT M8	6	
7	11500052	SPRING WASHER - 8mm	7	
8	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	

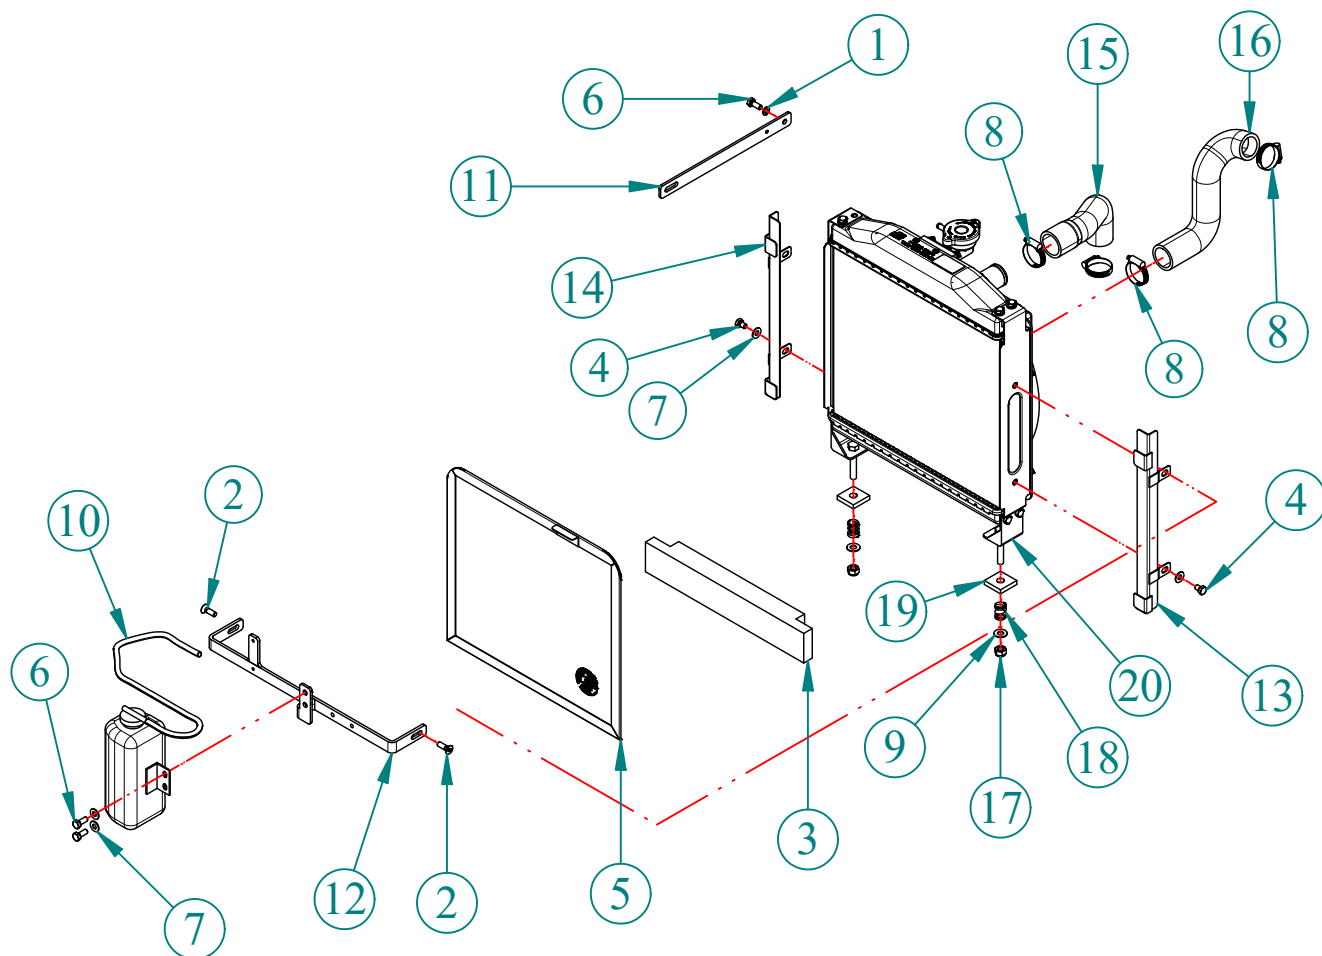

RADIATOR COOLANT ASSEMBLY


MODEL : 263
ASSEMBLY NO. :-11305590

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11500052	SPRING WASHER - 8mm	1	
2	11500766	CSK HEAD SCREW WITH HEX. SOCKET M8x25	2	
3	11205113	FOAM FRONT SEALING	1	
4	11500489	HEX BOLT M8 X 12 (F.T.)	2	
5	11205122	THREADED GUARD (S.M.-2L)	1	
6	11500067	HEX. BOLT M8X20 (F.T)	3	
7	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
8	11201787	CLAMP, HOSE PIPE (2A-50)	4	
9	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
10	11402046	COOLANT RECOVERY TANK ASSEMBLY	1	
11	11202436	SUPPORT, RADIATOR	1	
12	11205339	BRACKET, COOLANT RECOVERY TANK	1	
13	11205115	GUARD SUPPORT LH	1	
14	11205114	GUARD SUPPORT RH	1	
15	11202439	HOSE PIPE DELIVERY, RADIATOR (263)	1	
16	11202438	HOSE PIPE SUCTION, RADIATOR (263)	1	
17	11500676	NYLOCK NUT M10	2	
18	11201642	SPRING, RADIATOR	2	
19	11201643	DAMPER, RADIATOR	2	
20	11402454	RADIATOR ASSEMBLY (2.0 Lt)	1	

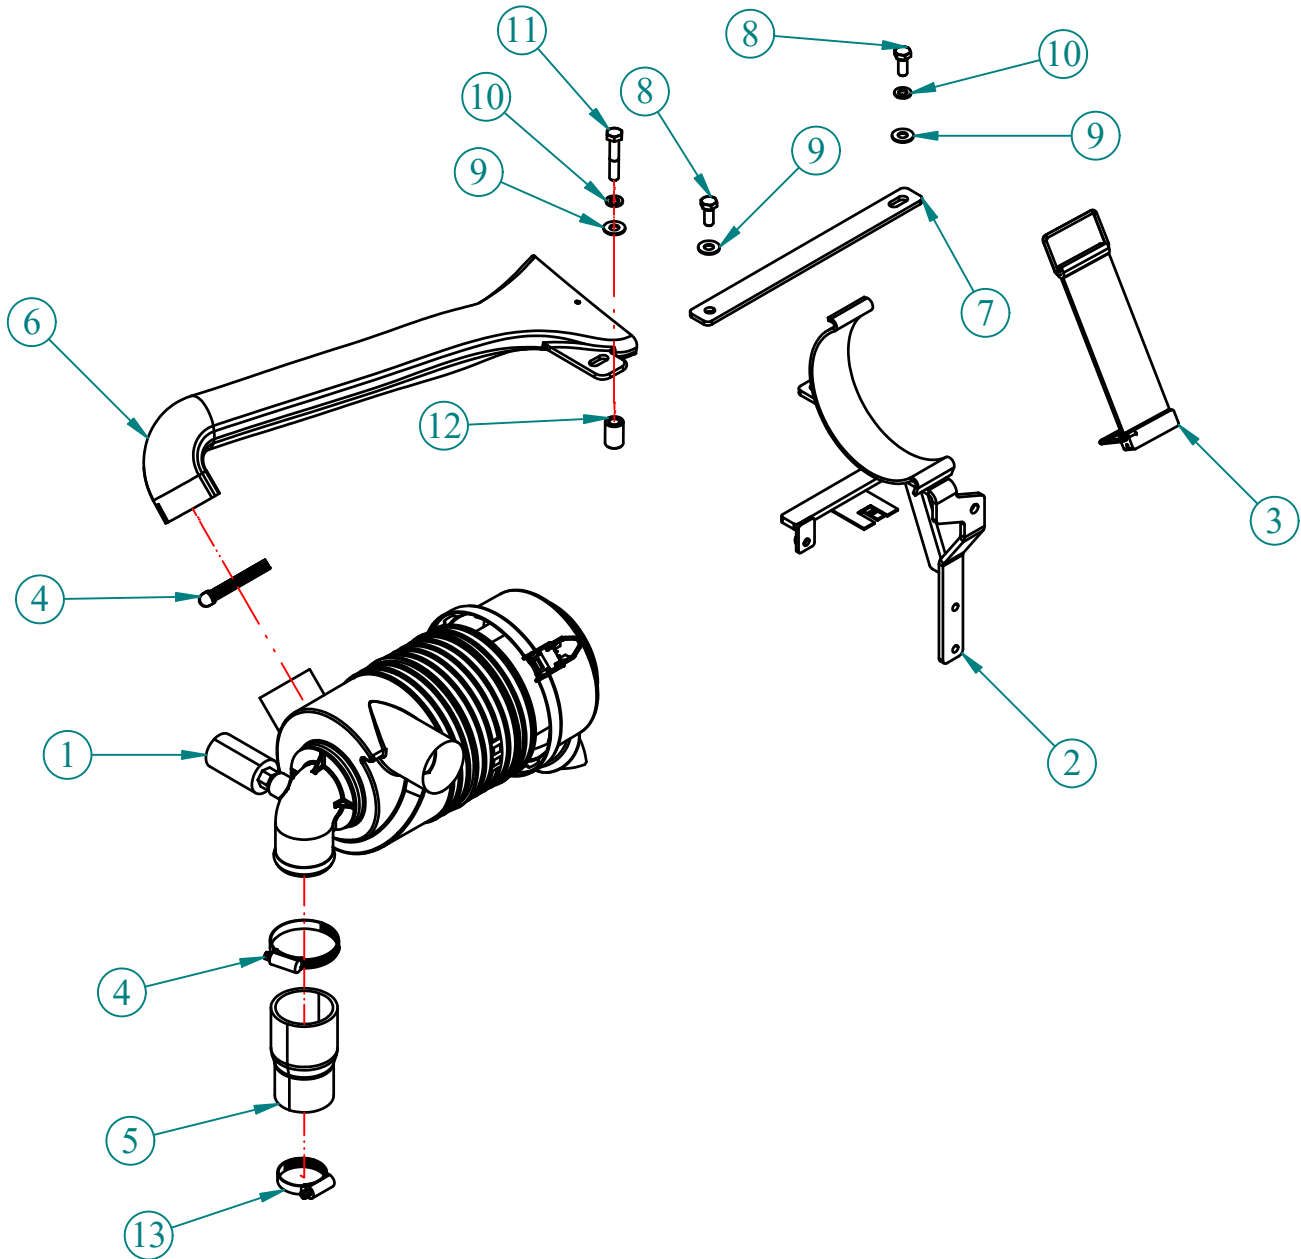

AIR CLEANER ASSEMBLY


MODEL :- 263			ASSEMBLY	NO. :-11305546
Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11403022	DRY AIR CLEANER ASSY. (273)	1	
2	11205338	BRACKET, AIR CLEANER	1	
3	11205524	AIR CLEANER STRAP	1	
4	11200022	CLAMP FOR AIR CLEANER	2	
5	11202437	HOSE PIPE, AIR INTAKE (273)	1	
6	11205363	DUCT AIR CLEANER INLET	1	
7	11205429	AIR CLEANER SUPPORT	1	
8	11500067	HEX. BOLT M8X20 (F.T)	2	
9	11501068	PLAIN WASHER Ø8.5XØ19X1.5	3	
10	11500052	SPRING WASHER - 8mm	2	
11	11505248	HEX.BOLT M8x45(8.8)	1	
12	11205430	SPACER (Ø9xØ16x24)	1	
13	11201787	CLAMP, HOSE PIPE (2A-50)	1	

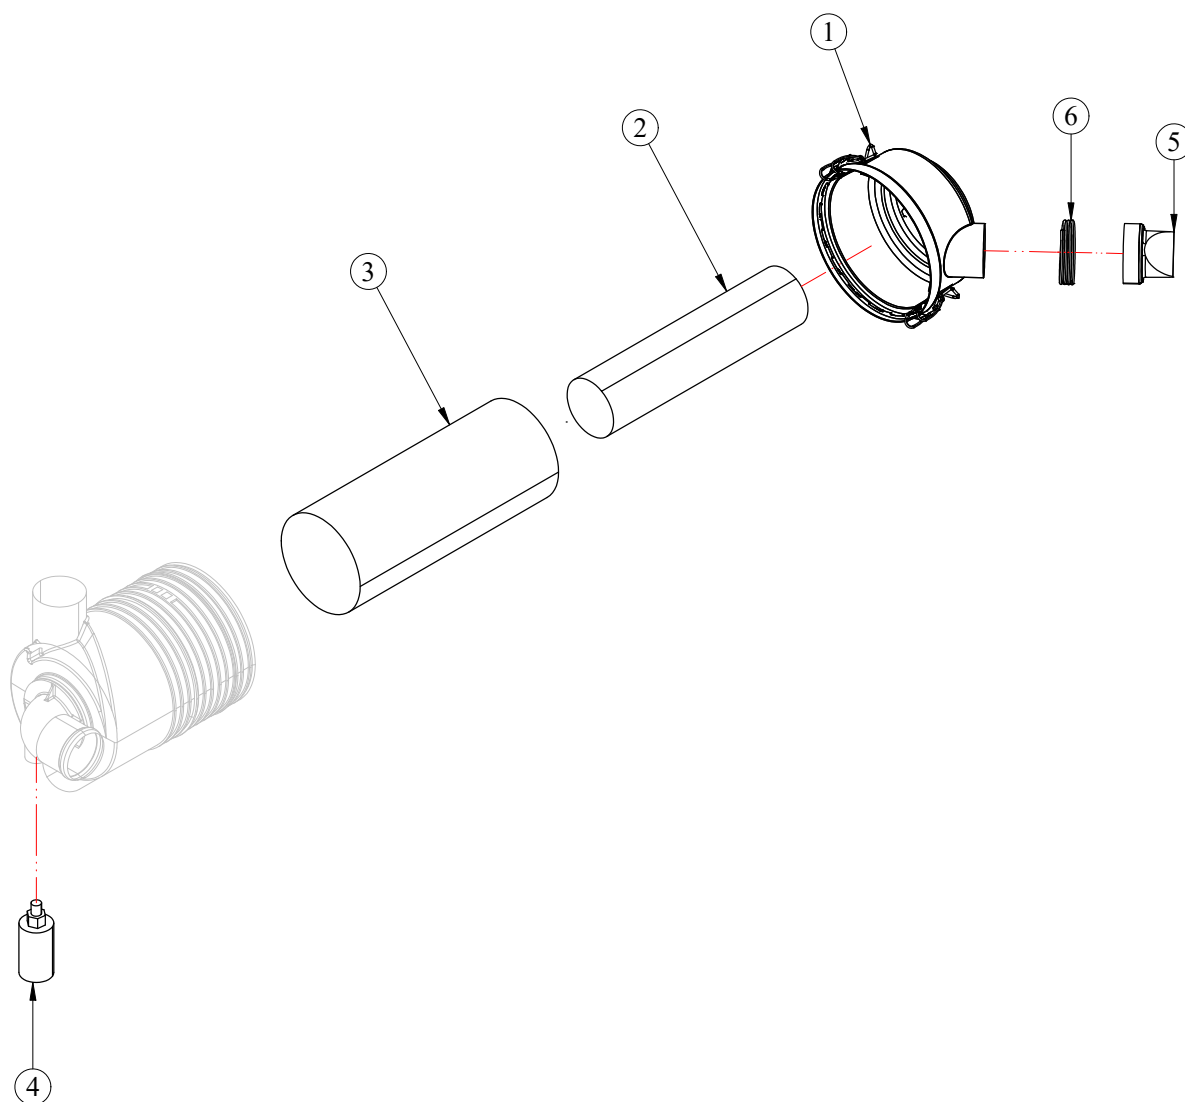

DRY AIR CLEANER ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305556


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11404954	COVER ASSEMBLY	1	
2	11403300	FILTER, ASSEMBLY SECONDARY	1	
3	11403023	PRIMARY AIR ELEMENT (273)	1	
4	11404932	MECHANICAL INDICATOR	1	
5	11404931	VACUATOR VALVE	1	
6	11405407	DUST VALVE CLAMP- AIR CLEANER	1	

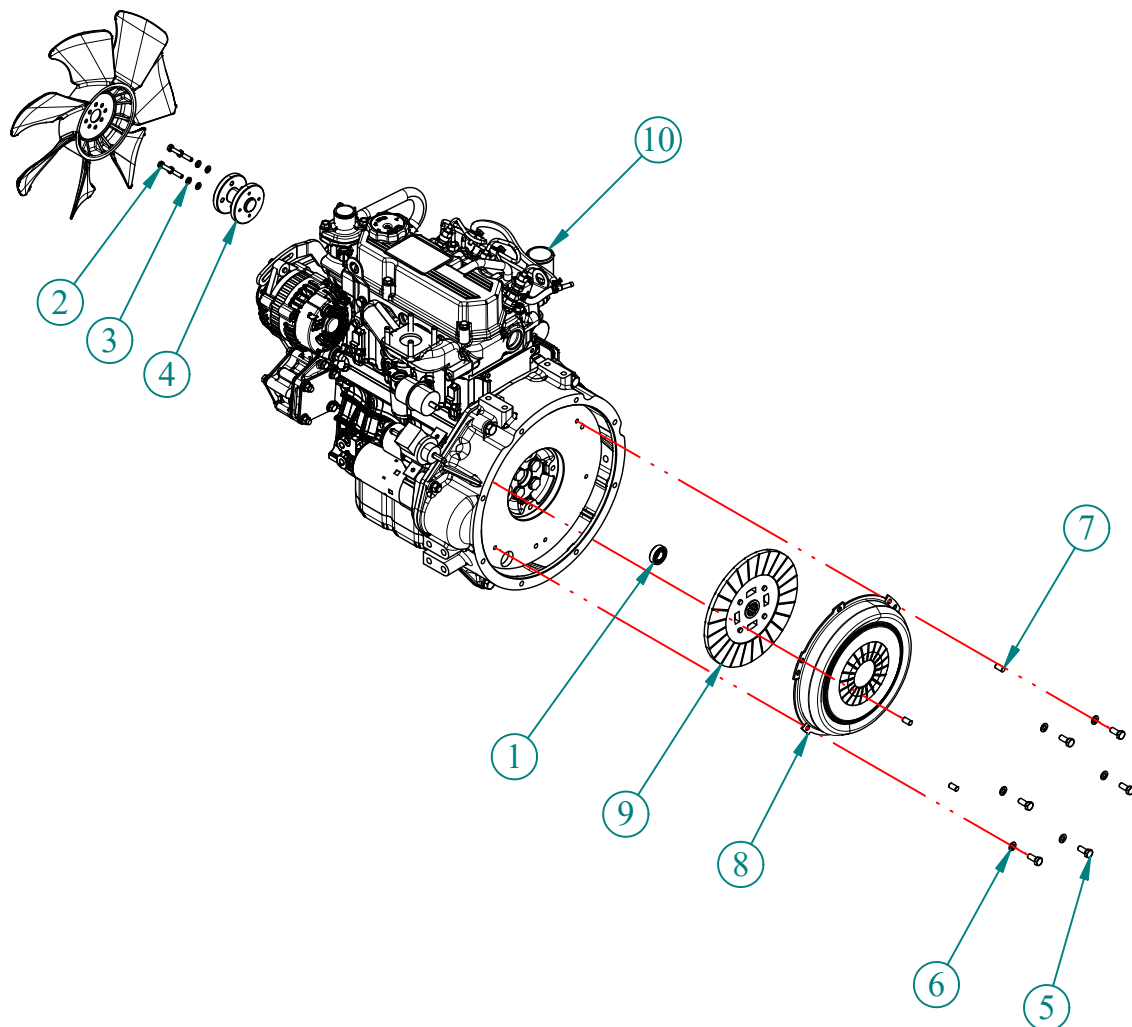

ENGINE AND CLUTCH ASSEMBLY

MODEL : - 263
ASSEMBLY NO. :-11305560


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11505249	BALL BEARING 6002 ZZ	1	
2	11500195	HEX. BOLT M6x25 (F.T.)8.8	4	
3	11500073	SPRING WASHER - 6 mm	4	
4	11202763	DISTANCE, FAN RADIATOR	1	
5	11500067	HEX. BOLT M8X20 (F.T)	6	
6	11500052	SPRING WASHER - 8mm	6	
7	11200119	PIN, DOWEL Ø8 X 16	3	
8	11400625	PRESSURE PLATE Ø215	1	
9	11400626	CLUTCH PLATE Ø215	1	
10	31404562	ENGINE S3L2-18.2/2500-3 CYL (EU STAGE-V)	1	

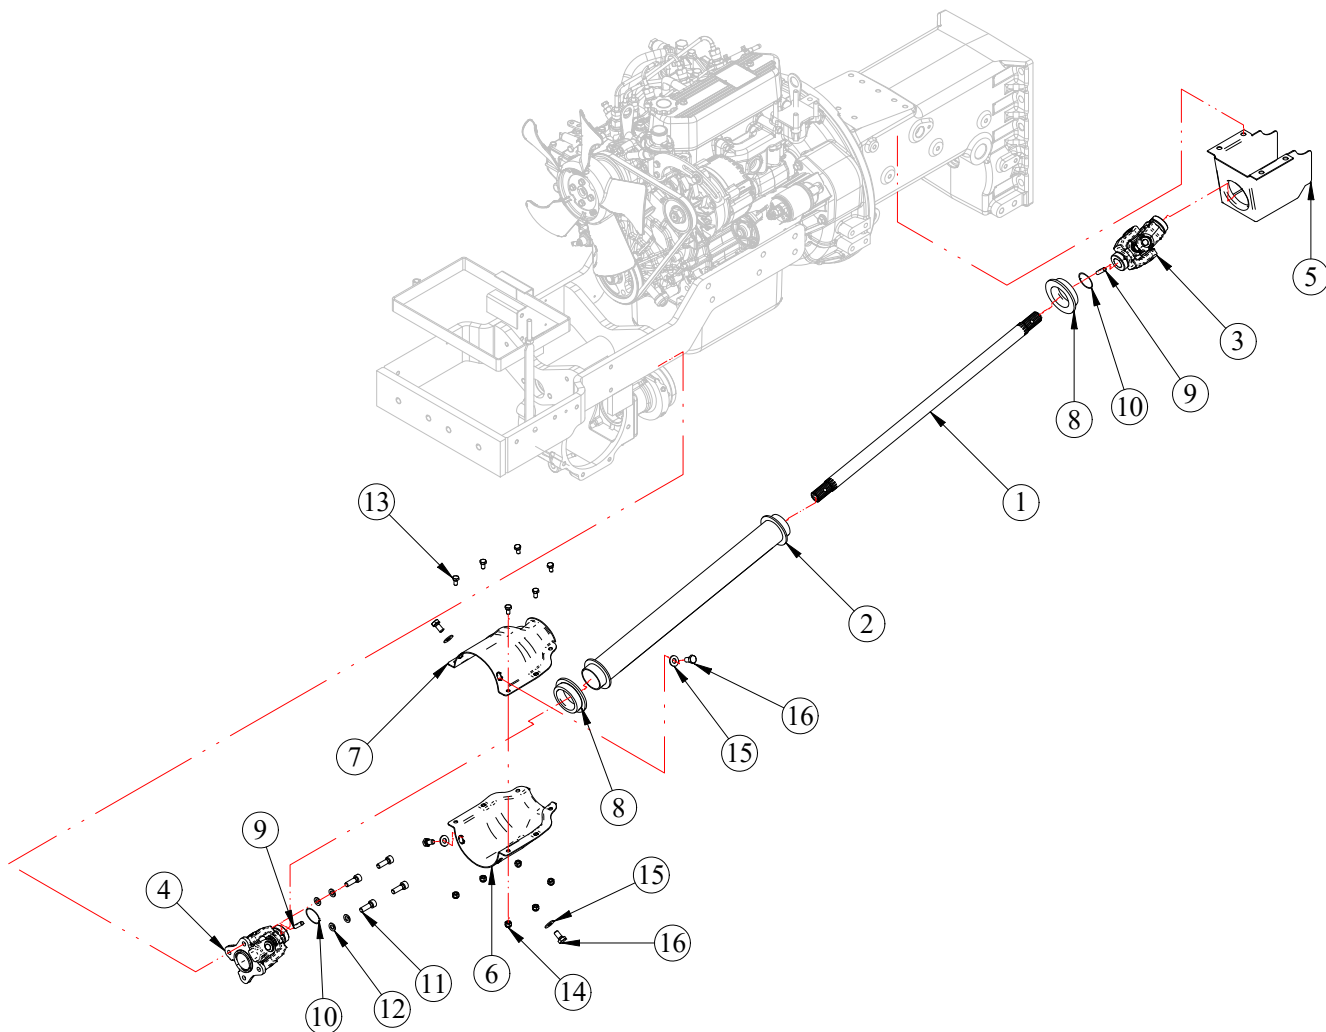

PROPELLER SHAFT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305588


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11204952	SHAFT,PROPLLER (576) (MIT.)	1	
2	11203220	SHAFT COVER, PROPELLER GUARD	1	
3	11404893	UNIVERSAL JOINT ASSY.(YOKE WITH YOKE)	1	
4	11404894	UNIVERSAL JOINT ASSY.(CROSS HOLDER WITH YOKE)	1	
5	11205016	UNIVERSAL JOINT COVER REAR	1	
6	11203222	UNIVERSAL JOINT COVER FRONT BOTTOM	1	
7	11203221	UNIVERSAL JOINT COVER FRONT TOP	1	
8	11204916	RUBBER BUSH SMALL GUARD	2	
9	11504969	DOWEL PIN UNIVERSAL JOINT	2	
10	11504970	SNAP RING FOR SHAFT DIA 32	2	
11	11500157	Allen Bolt M8x25 (F.T.)	4	
12	11500052	SPRING WASHER - 8mm	4	
13	11500484	HEX. BOLT M6 X 12 (F.T.)	6	
14	11500947	NYLOCK NUT M6	6	
15	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
16	11500076	HEX BOLT M8 x 16	4	

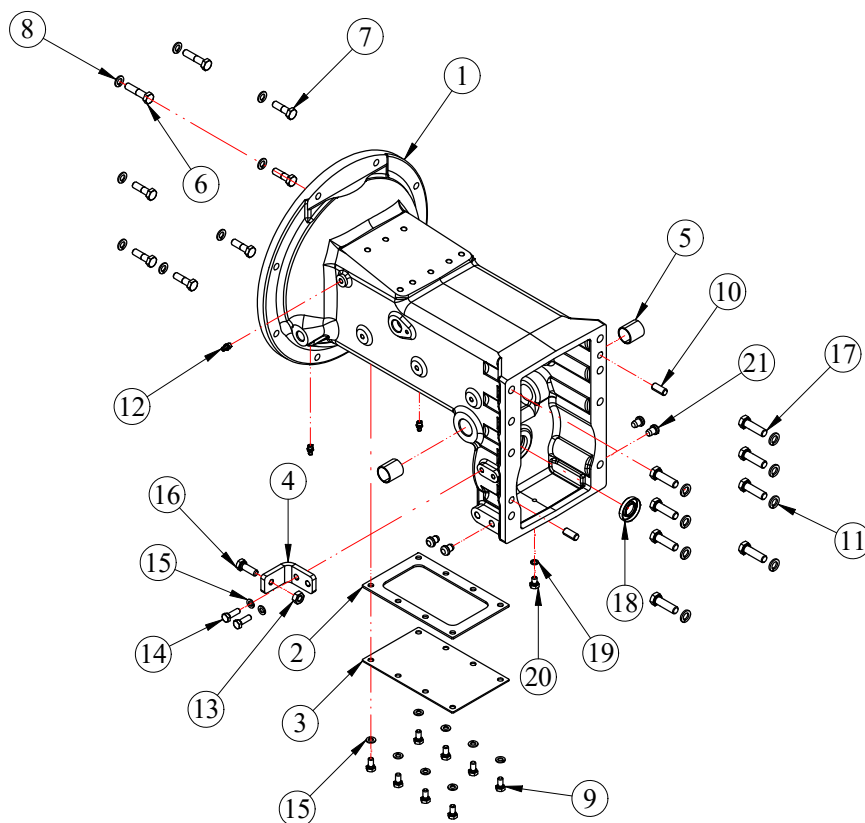

CLUTCH HOUSING ASSEMBLY


MODEL :- 263
ASSEMBLY NO. :- 11305551

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11204872	TRACTOR CENTER HOUSING-MIT.(4WD)	1	
2	11202400	RUBBER GASKET,CLUTCH HOUSING	1	
3	11202399	BOTTOM PLATE, CLUTCH HOUSING	1	
4	11203019	CLUTCH STOPER	1	
5	11202430	BUSH, PEDAL IGUS (Ø25 x Ø28 x 30)	2	
6	11505035	HEX.BOLT 10x45x1.25P(H.T)	2	
7	11503270	HEX BOLT M10x35x1.25P [10.9]	6	
8	11500062	SPRING WASHER - 10mm	8	
9	11500076	HEX BOLT M8 x 16	8	
10	11201458	PIN, DOWEL Ø11X25	2	
11	11500118	SPRING WASHER 12 mm	8	
12	11502088	GREASE NIPPLE M8x1	3	
13	11500024	HEX NUT M10	1	
14	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
15	11500052	SPRING WASHER - 8mm	10	
16	11500232	HEX. BOLT M10 X 30 (F.T.)	1	
17	11501772	HEX. BOLT M12x40 (H.T.)- GRADE- 10.9	8	
18	11502984	OIL SEAL Ø40XØ20X7	1	
19	11500112	COPPER WASHER Ø8XØ12X1	1	
20	11500489	HEX BOLT M8 X 12 (F.T.)	1	
21	11204746	RUBBER GROMMET Ø10.5 FOR FRONT AXLE	4	

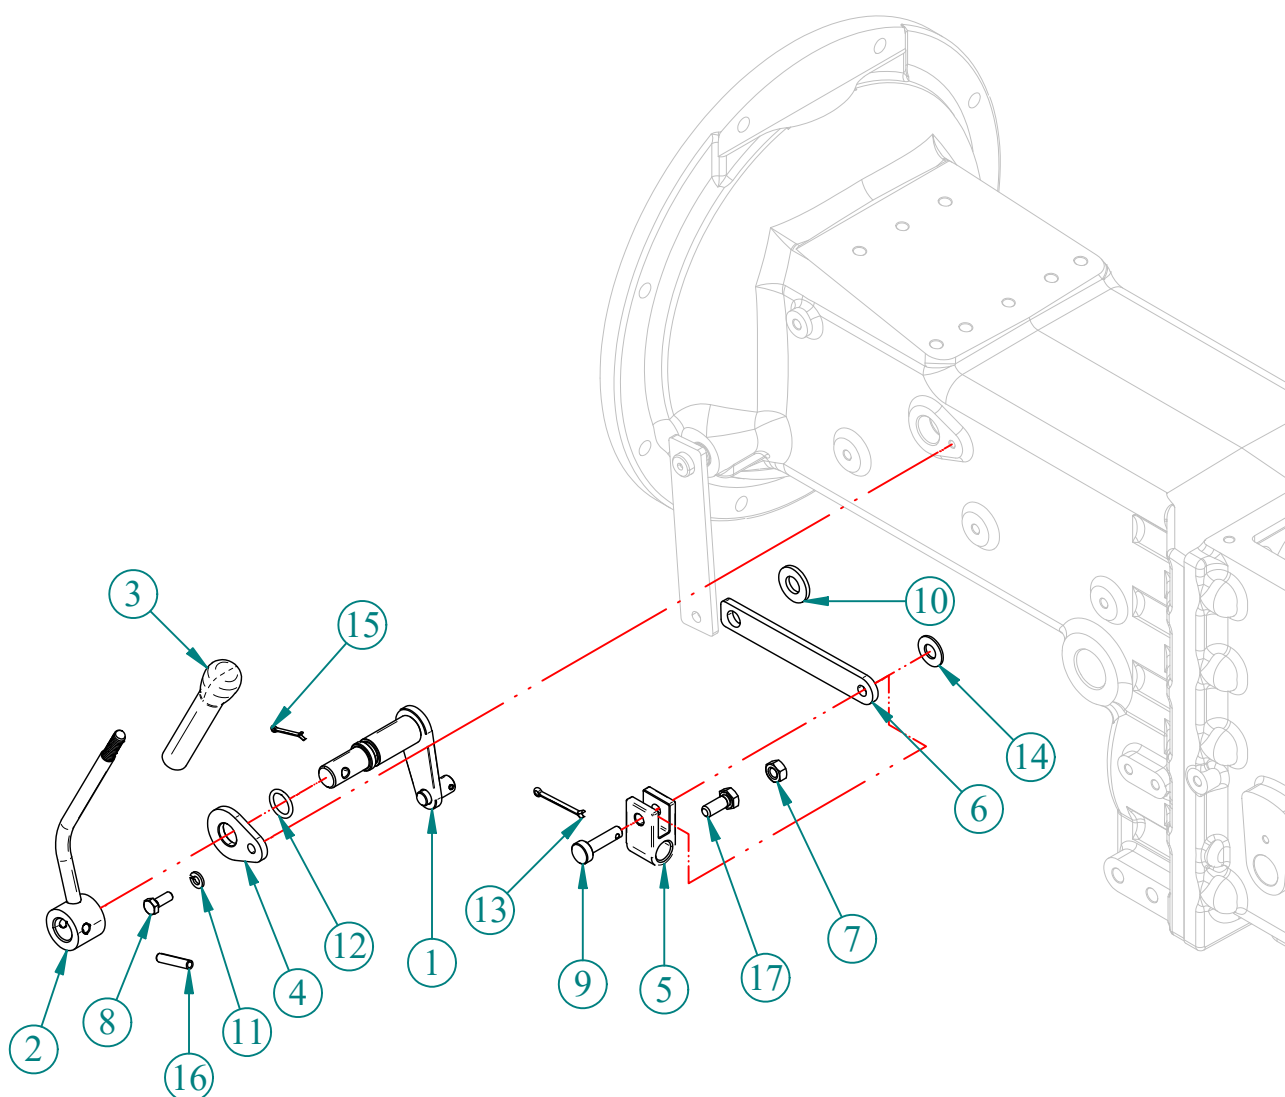

4WD LINKAGE ASSY

MODEL :- 263			ASSEMBLY	NO. :-11305545
Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11203097	SHIFTER,4WD	1	
2	11203098	LEVER, 4WD SHIFTING	1	
3	11202125	GRIP HAND THROTTLE LEVER	1	
4	11202406	LOCK WASHER , DIFFERENTIAL LOCK	1	
5	11203125	SHIFTER, GUIDE , 4WD	1	
6	11203133	LINK ,4WD	1	
7	11500082	HEX NUT M8	1	
8	11500071	HEX. BOLT M6x15 (F.T.)8.8	1	
9	11203135	PIN ,4WD	1	
10	11500080	PLAIN WASHER Ø12.5xØ26x3	1	
11	11500073	SPRING WASHER - 6 mm	1	
12	11504882	O-RING Ø15.54 x 2.62	1	
13	11500357	SPLIT PIN 1/8" x 1.1/2"	1	
14	11500078	PLAIN WASHER Ø10.5xØ22x1.5	1	
15	11500619	SPLIT PIN 3/32" x 1"	1	
16	11502531	SLOTTED SPRING PIN Ø6X30	1	
17	11500067	HEX. BOLT M8X20 (F.T)	1	

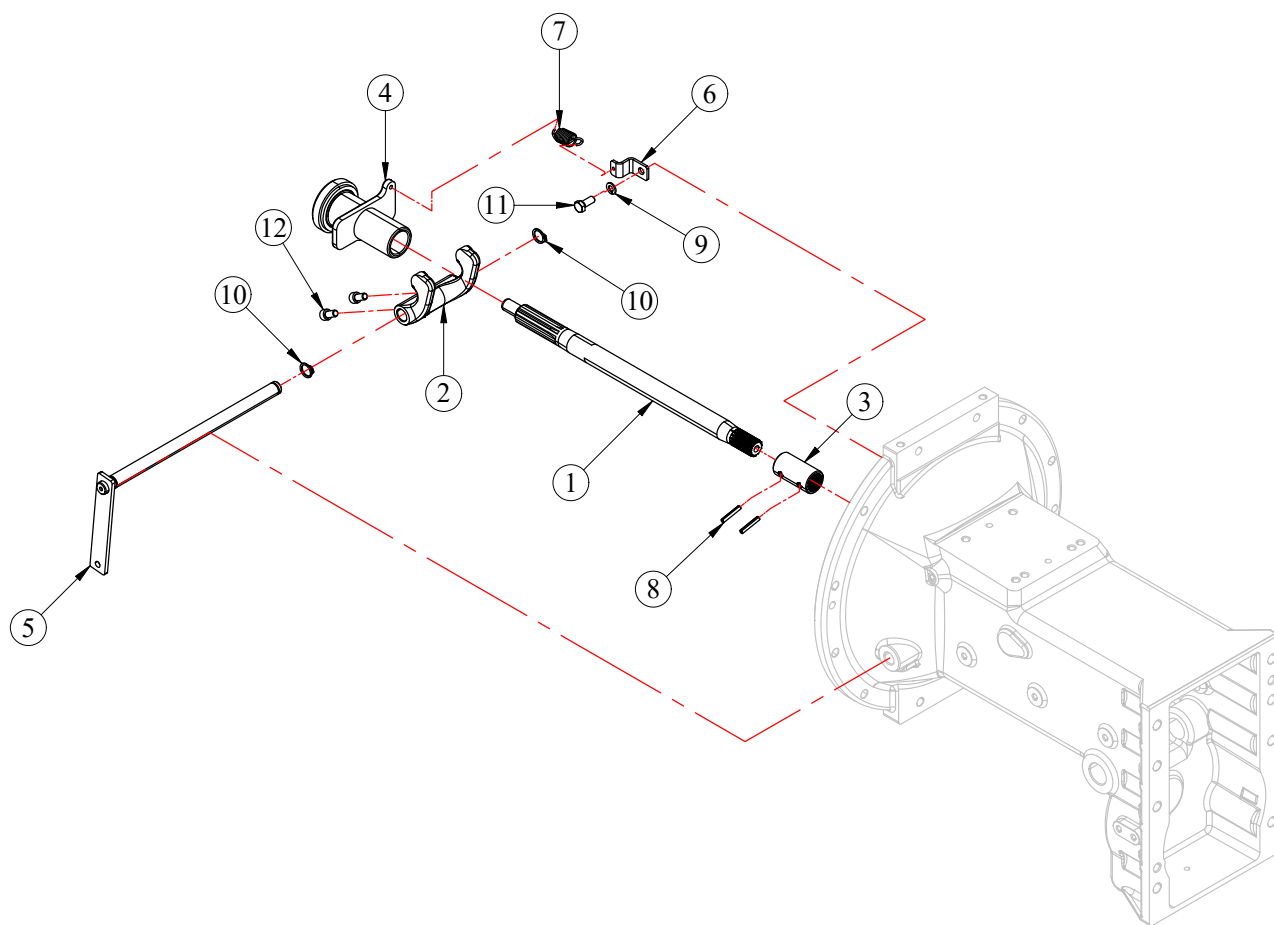


CLUTCH RELEASE MECHANISMS

MODEL :- 263


ASSEMBLY NO. :- 11305552

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202381	SHAFT, INPUT	1	
2	11202468	FORK, CLUTCH RELEASE	1	
3	11202379	COUPLING, INPUT SHAFT	1	
4	11203096	HUB, CLUTCH RELEASE	1	
5	11202469	SHAFT, CLUTCH RELEASE	1	
6	11202401	BRACKET ,SPRING HOLDING	1	
7	11200057	SPRING CLUTCH HUB	1	
8	11502524	SLOTTED SPRING PIN Ø5X30	2	
9	11500052	SPRING WASHER - 8mm	1	
10	11503276	CIRCLIP EXTERNAL Ø16X1.5	2	
11	11500067	HEX. BOLT M8X20 (F.T)	1	
12	11501035	ALLEN BOLT M8X16 (F.T.)	2	

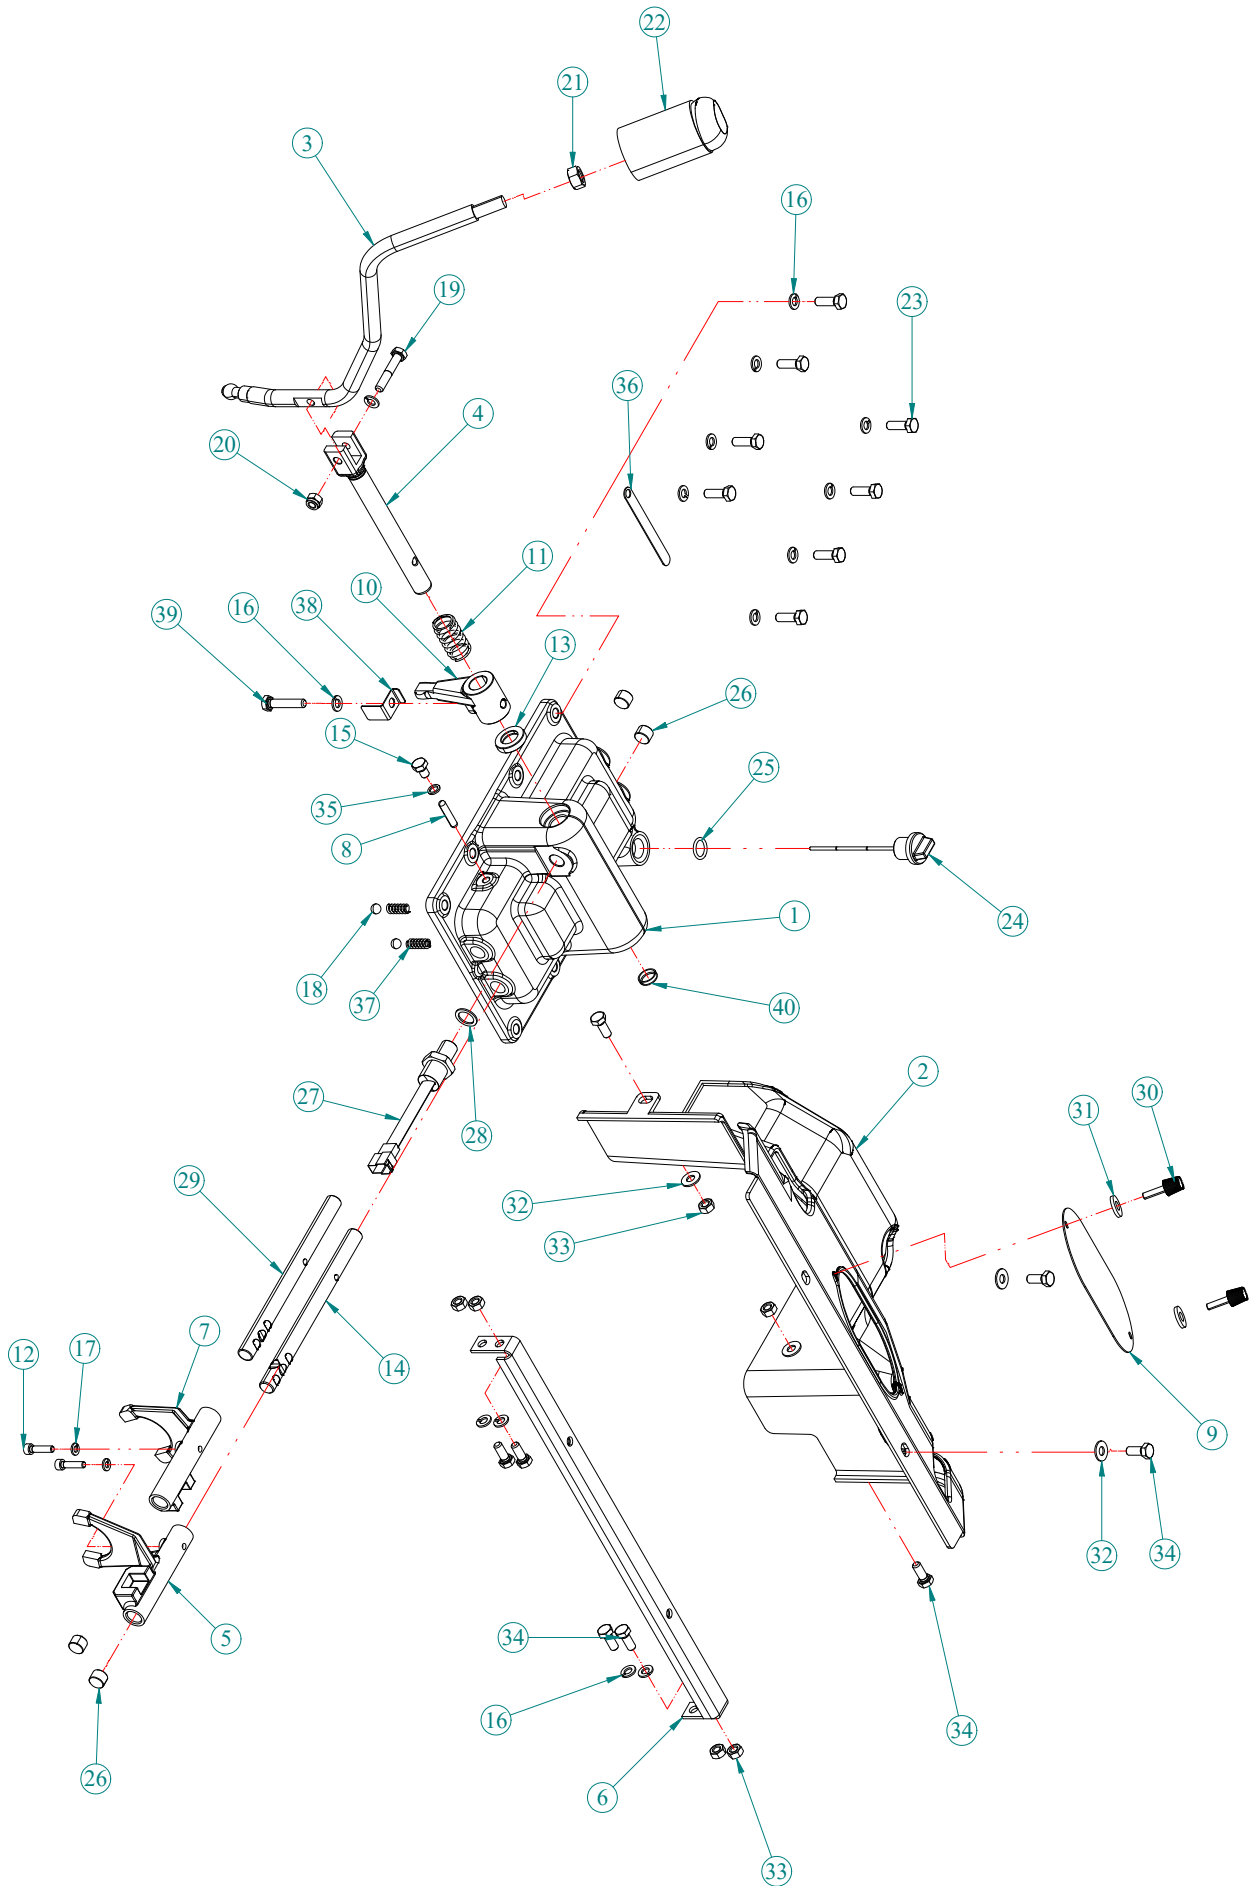

TCA ASSEMBLY
MODEL :- 263
ASSEMBLY NO. :- 11309583

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205230	HOUSING TCA	1	
2	11205425	TCA COVER - 488	1	
3	11205224	LEVER - GEAR SHIFTING	1	
4	11205741	SHAFT,SHIFTING TCA	1	
5	11202350	FORK 1-R	1	
6	11205225	SUPPORT - TCA COVER	1	
7	11202351	FORK 2-3	1	
8	11202990	INTER LOCK PIN, TCA	1	
9	11205320	WINDOW TCA COVER	1	
10	11203099	SHIFTER, TCA	1	
11	11203100	SPRING, L-41	1	
12	11504743	ALLEN BOLT M6X25 (F.T)	2	
13	11502753	OIL SEAL Ø18XØ30X7	1	
14	11202390	SHIFT RAIL 1-R	1	
15	11500489	HEX BOLT M8 X 12 (F.T.)	1	
16	11500052	SPRING WASHER - 8mm	14	
17	11500073	SPRING WASHER - 6 mm	2	
18	11500089	BALL - Ø3/8"	2	
19	11505403	HEX BOLT M8 X 45 HT 10.9	1	
20	11500520	NYLOCK HEX NUT M8	1	
21	11500117	HEX NUT M12	1	
22	11202432	KNOB, GEAR SHIFTING LEVER	1	
23	11500051	HEX. BOLT M8 X 25 (F.T.)	8	
24	11302410	DIPSTICK, TCA	1	
25	11504882	O-RING Ø15.54 x 2.62	1	
26	11200097	SEALING CAP	4	
27	11402494	NEUTRAL SAFETY SWITCH	1	
28	11504908	COPPER WASHER Ø22 X Ø16 X 1.5	1	
29	11202391	SHIFT RAIL 2-3	1	
30	11205321	KNOB M6X25	2	
31	11201535	RUBBER WAHSER Ø9xØ22x3.5	2	
32	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
33	11500082	HEX NUT M8	6	
34	11500067	HEX. BOLT M8X20 (F.T)	8	
35	11500112	COPPER WASHER Ø8XØ12X1	1	
36	11205377	CLIP FOR WIRING HARNESS	1	
37	11200090	SPRING SHIFT RAIL	2	
38	11206735	LOCKING FLAP,SHIFTER TCA	1	
39	11508202	HEX BOLT M8x40 (F.T.)12.9	1	
40	11208434	SEALING CAP Ø18	1	

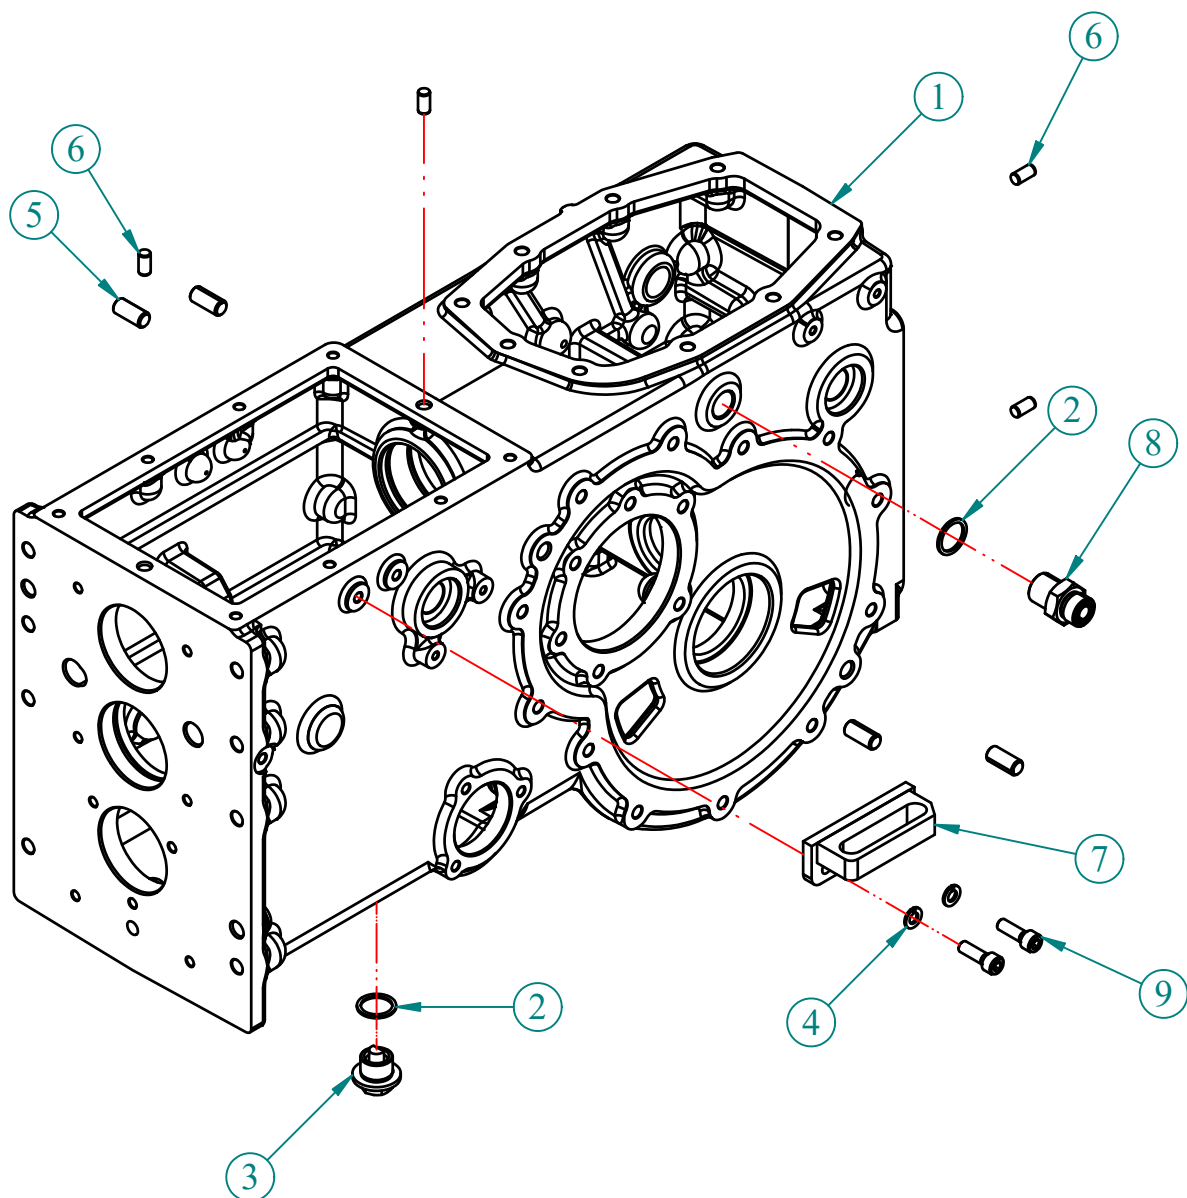


TRANSMISSION HOUSING ASSEMBLY

MODEL :- 263


ASSEMBLY NO. :-11307084

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205229	TRANSMISSION HOUSING (9F+3R)	1	
2	11500430	COPPER WASHER Ø21XØ26X1.5	2	
3	11200121	DRAIN PLUG MAGNETIC	1	
4	11500052	SPRING WASHER - 8mm	2	
5	11201458	PIN, DOWEL Ø11X25	4	
6	11200119	PIN, DOWEL Ø8 X 16	4	
7	11205020	GUIDE PLATE - LEVER GEAR SHIFTING	1	
8	11205327	NIPPLE 1/2" BSP X 13/16" UN	1	
9	11500157	Allen Bolt M8x25 (F.T.)	2	

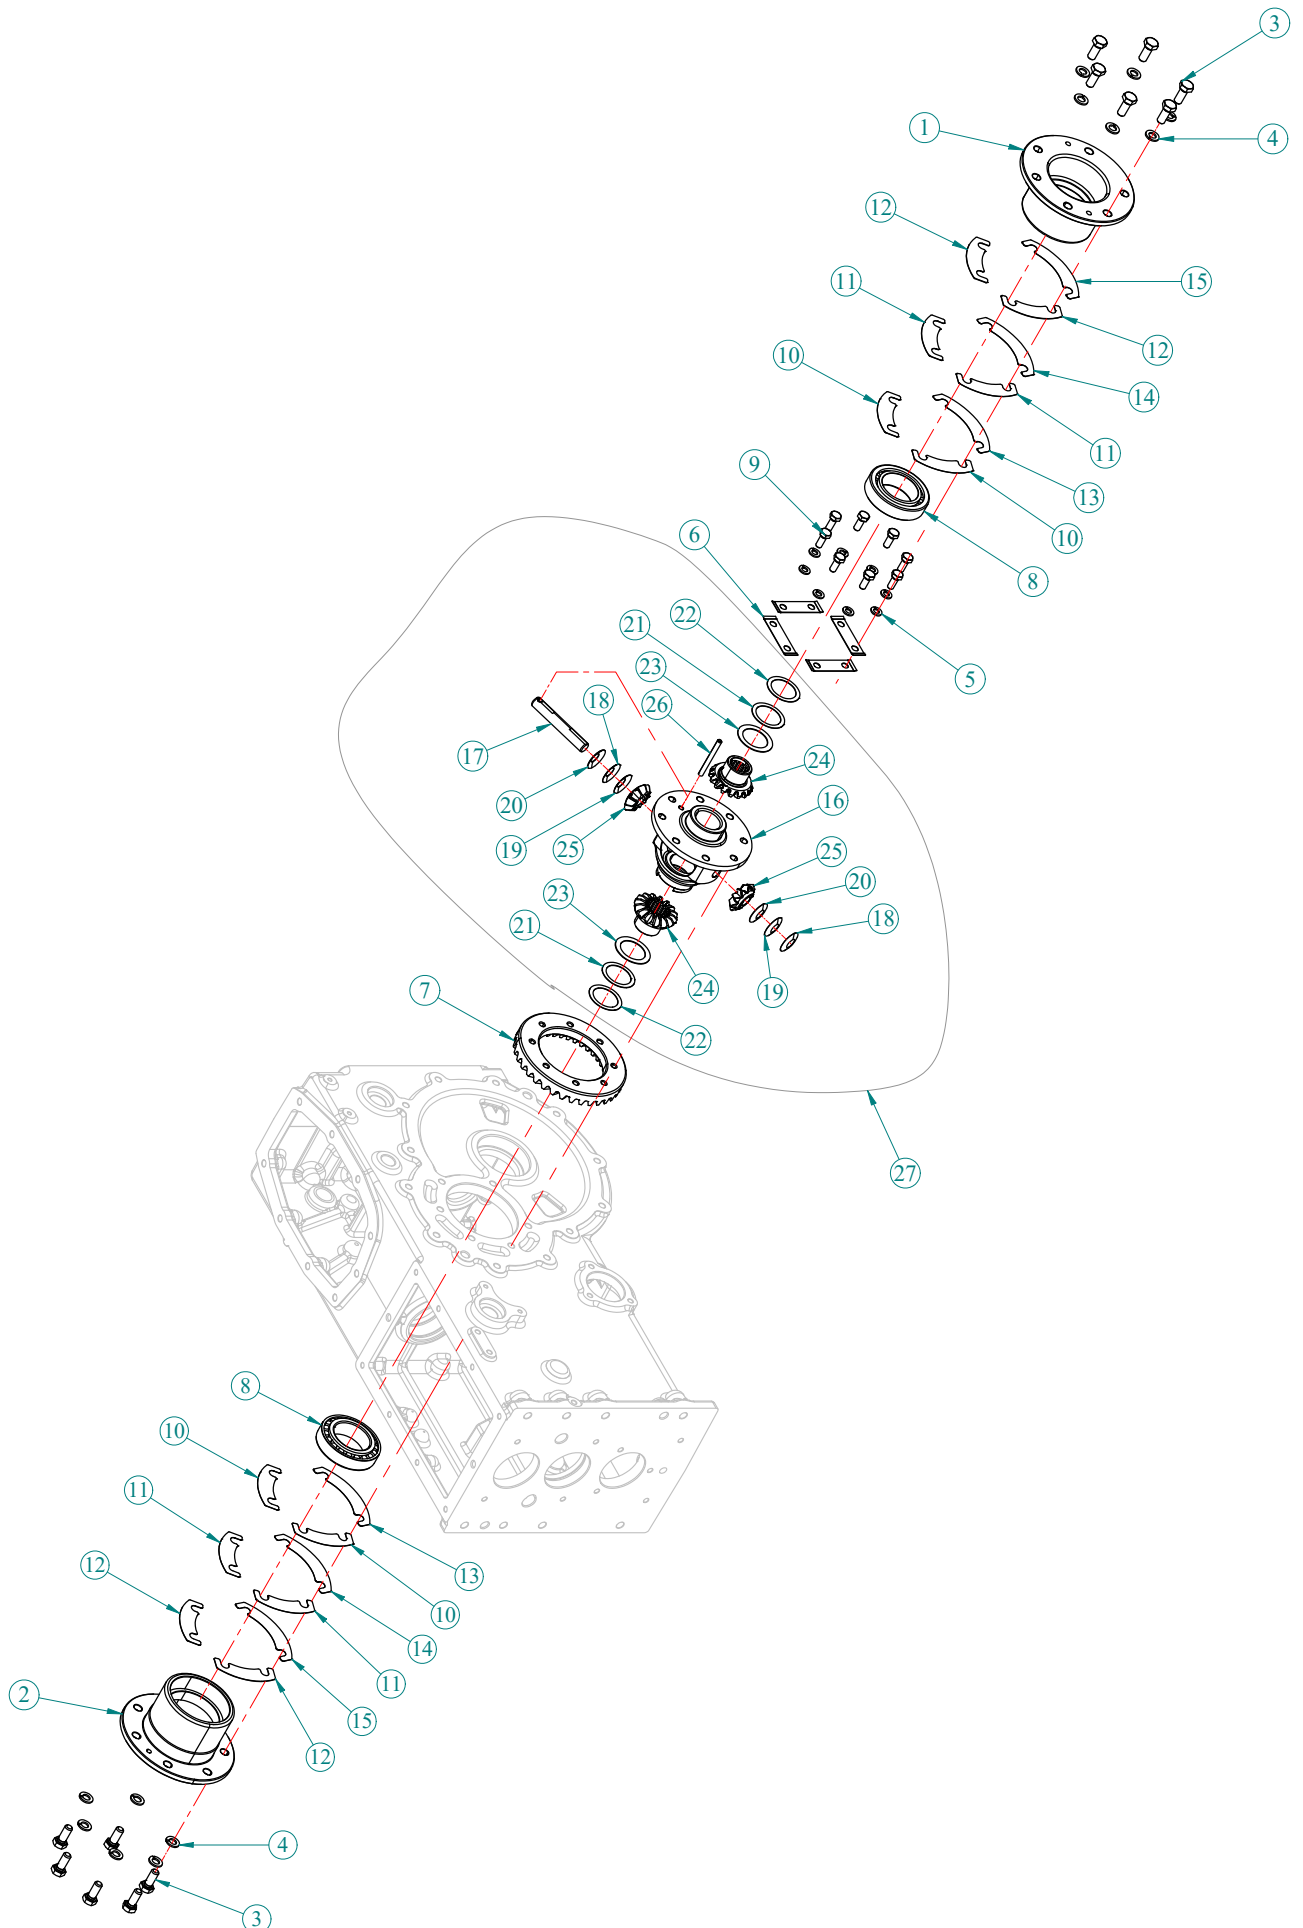

**DIFFERENTIAL CAGE ASSEMBLY****MODEL :- 263****ASSEMBLY NO. :- 11309282**


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208689	FLANGE,BEARING LH V3	1	
2	11208690	FLANGE,BEARING RH V3	1	
3	11500156	HEX. BOLT M10X25 (F.T.)	12	
4	11500062	SPRING WASHER - 10mm	12	
5	11500052	SPRING WASHER - 8mm	8	
6	11202462	LOCK WASHER , CROWN WHEEL	4	
7	11301276	CROWN-PINION SET 6X35	1	
8	11504675	TAPER ROLLER BEARING -JLM104948/10	2	
9	11505602	HEX. BOLT M8X20 (F.T) 10.9 GRADE	8	
10	11206812	SHIM, FLANGE BEARING (0.15) (52.5°)	4	QTY:- AR
11	11206813	SHIM, FLANGE BEARING (0.20) (52.5°)	4	QTY:- AR
12	11206814	SHIM, FLANGE BEARING (0.50) (52.5°)	4	QTY:- AR
13	11206815	SHIM, FLANGE BEARING (0.15) (75°)	2	QTY:- AR
14	11206816	SHIM, FLANGE BEARING (0.20) (75°)	2	QTY:- AR
15	11206817	SHIM, FLANGE BEARING (0.50) (75°)	2	QTY:- AR
16	11202411	CAGE - DIFFERENTIAL	1	
17	11202412	SHAFT, BEVEL GEAR 10T	1	QTY:- AR
18	11202415	SHIM, BEVEL GEAR 10T (0.80)	2	QTY:- AR
19	11205065	SHIM, BEVEL GEAR 10T (1.0)	2	QTY:- AR
20	11202416	SHIM, BEVEL GEAR 10T (1.2)	2	QTY:- AR
21	11202413	SHIM, BEVEL GEAR 16T (0.8)	2	QTY:- AR
22	11205066	SHIM, BEVEL GEAR 16T (1.0)	2	QTY:- AR
23	11202414	SHIM, BEVEL GEAR 16T (1.2)	2	QTY:- AR
24	11202394	BEVEL GEAR 16 T	2	
25	11202393	BEVEL GEAR 10T	2	
26	11502409	SLOTTED SPRING PIN Ø6 x 60	1	
27	11406062	CAGE ASSEMBLY	1	

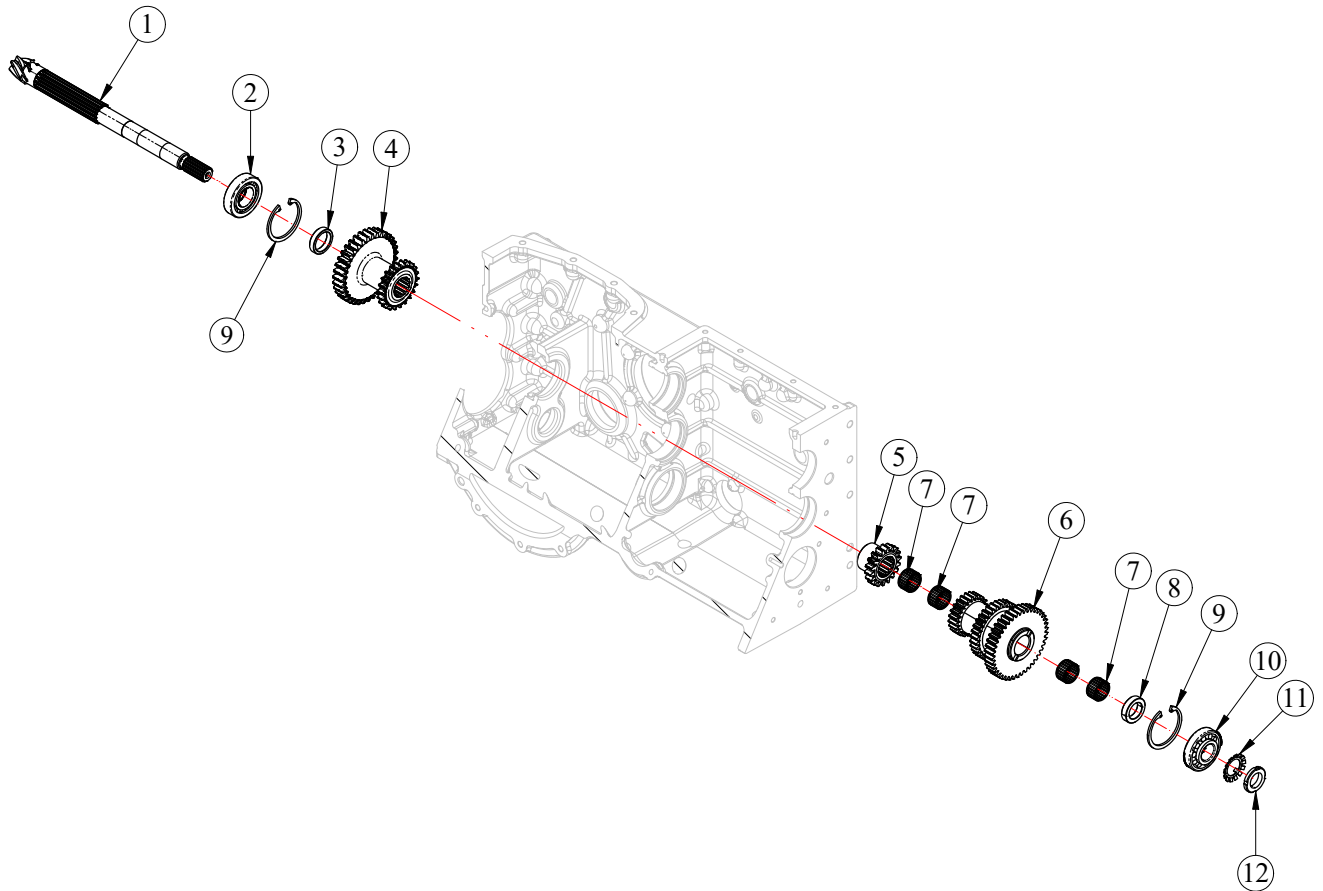

PINION SHAFT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11307086

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11301276	CROWN-PINION SET 6X35	1	
2	11501566	TAPPER ROLLER BEARING 30206	1	
3	11205265	COLLER WASHER Ø38.1 X Ø30.0 X 8.3	1	
4	11205739	GEAR COUNTER (22T - 35T)	1	
5	11205738	GEAR COUNTER (18T)	1	
6	11202362	GEAR COUNTER	1	
7	11502521	NEEDLE BEARING K Ø25XØ30X17	4	
8	11202422	SPACER FOR PINION SHAFT (38.1X 25X10)	1	
9	11502528	CIRCLIP, INTERNAL Ø62X3.00	2	
10	11501462	TAPPER ROLLER BEARING - 30305	1	
11	11203101	LOCKING WASHER Ø25.9	1	
12	11203102	RING NUT M25x1.5P	1	

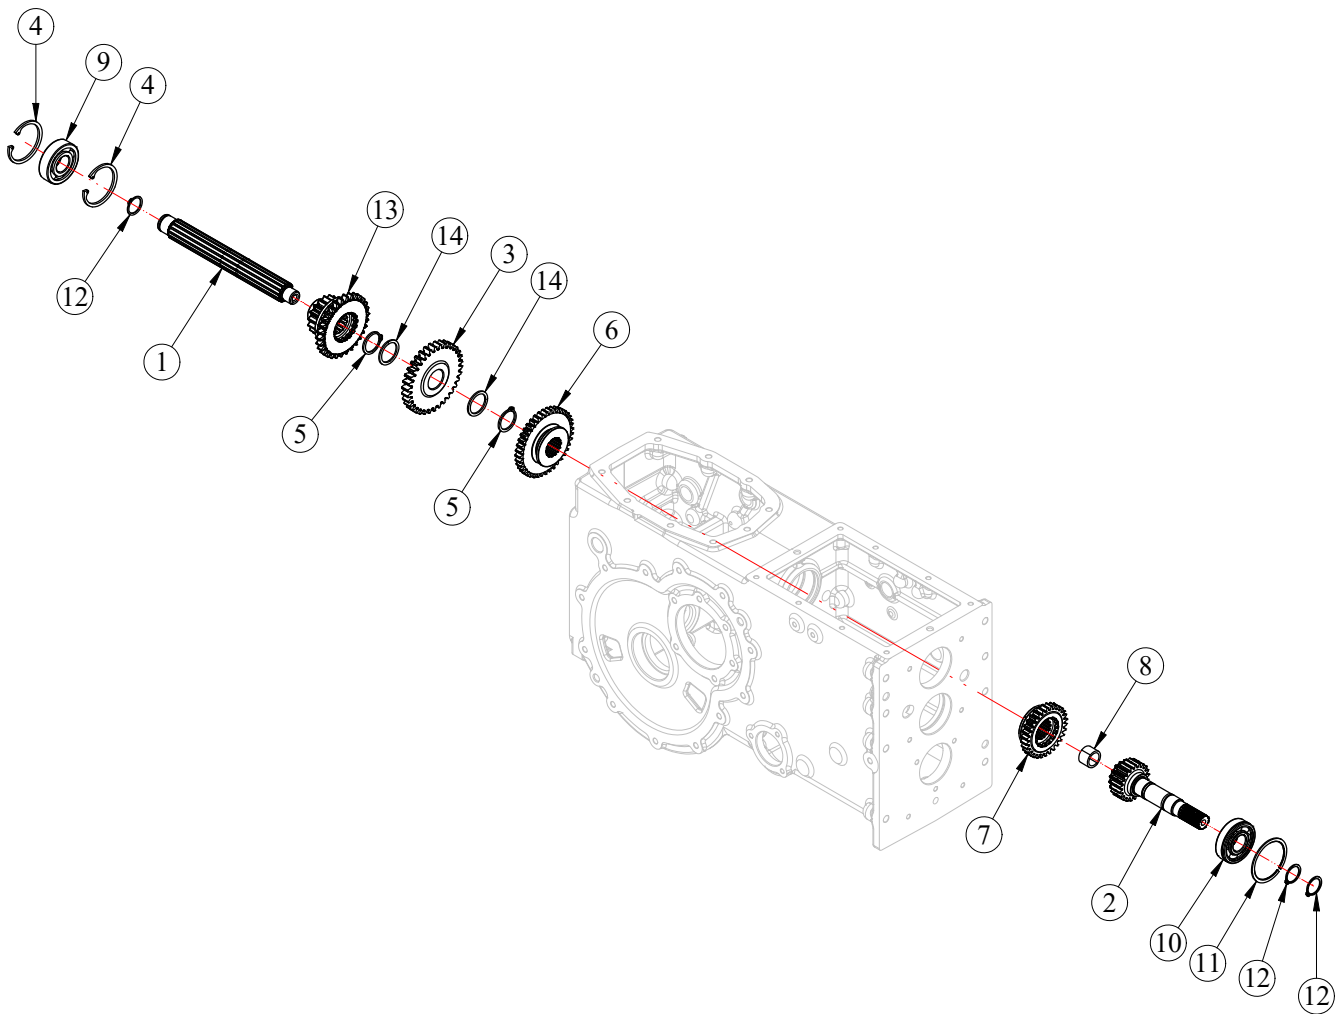


MAIN SHAFT ASSEMBLY

MODEL :- 263

ASSEMBLY NO. :- 11307087


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205740	MAIN SHAFT	1	
2	11205715	DRIVING SHAFT (21T)	1	
3	11205826	GEAR H (34T)	1	
4	11502528	CIRCLIP, INTERNAL Ø62X3.00	2	
5	11503052	CIRCLIP, EXTERNAL Ø30X2	2	
6	11202358	GEAR (40 T)	1	
7	11202357	GEAR (30T)	1	
8	11502522	NEEDLE BEARING K Ø20XØ26X17	1	
9	11501466	BALL BEARING 6305	1	
10	11505713	BALL BEARING 6305 N	1	
11	11505714	BEARING LOCK 6305N	1	
12	11501451	CIRCLIP, EXTERNAL Ø25x1.2	3	
13	11205737	GEAR M-L (30T-17T)	1	
14	11202424	WASHER (P.T.O.) Ø38 X Ø30.5 X 2	2	

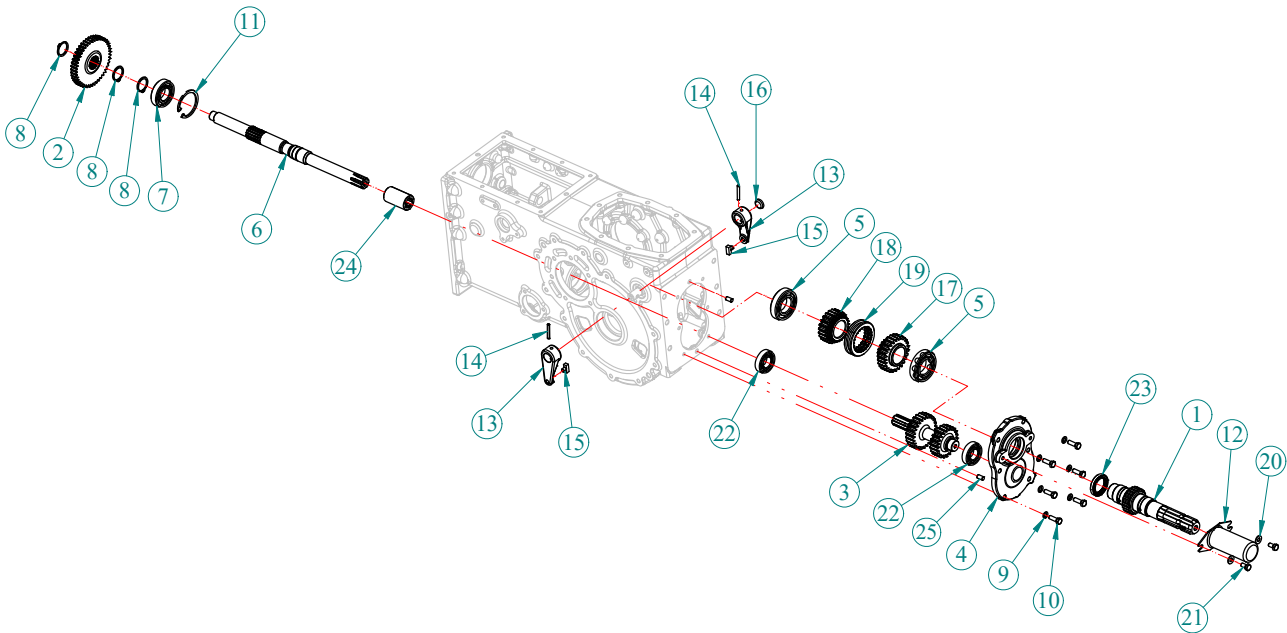

PTO SHAFT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11309270

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205334	SHAFT PTO 2-SPEED	1	
2	11205346	GEAR PTO 45T 2-SPEED	1	
3	11205335	PTO DRIVING GEAR 2P-SPEED (22T / 25T)	1	
4	11205226	HOUSING PTO 2 SPEED	1	
5	11501463	BALL BEARING 6207	2	
6	11205333	SHAFT PTO OUTPUT 2-SPEED	1	
7	11501118	BALL BEARING 6206	1	
8	11503052	CIRCLIP, EXTERNAL Ø30X2	3	
9	11500052	SPRING WASHER - 8mm	6	
10	11500051	HEX. BOLT M8 X 25 (F.T.)	6	
11	11502528	CIRCLIP, INTERNAL Ø62X3.00	1	
12	11206642	COVER, PTO SHAFT	1	
13	11205254	LEVER GUIDE 2-SPEED PTO	2	
14	11506549	SLOTTED PIN Ø6x40	2	
15	11205253	PAD, SHIFTER PTO	2	
16	11205926	SEALING CAP	1	
17	11205336	PTO GEAR 26T 2-SPEED	1	
18	11205337	PTO GEAR 23T 2-SPEED	1	
19	11202013	SLEEVE 22T	1	
20	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
21	11500076	HEX BOLT M8 x 16	2	
22	11500164	BALL BEARING 6205	2	
23	11505362	OIL SEAL Ø35x Ø50x8 (NBR)	1	
24	11201335	COLLAR	1	
25	11200119	PIN, DOWEL Ø8 X 16	2	

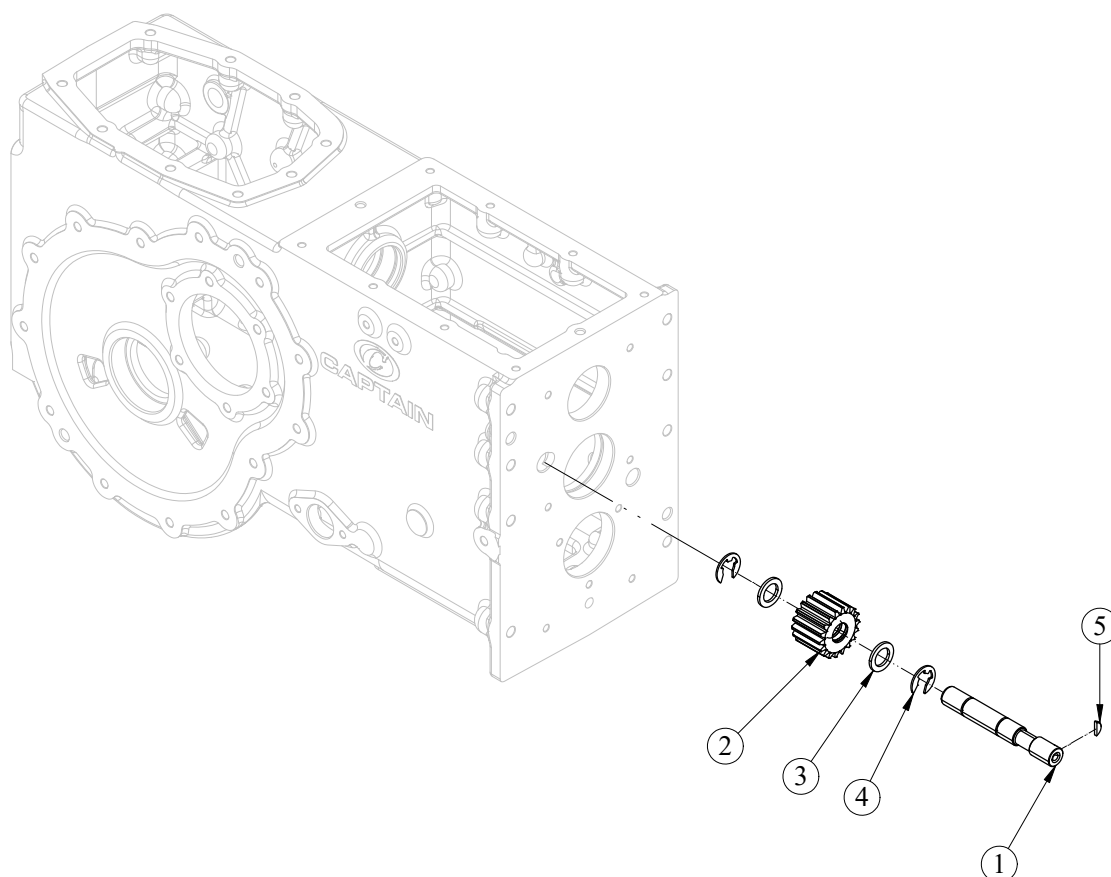


REVERSE GEAR ASSEMBLY

MODEL :- 263

ASSEMBLY NO. :- 11305591


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202506	SHAFT, REVERSE GEAR	1	
2	11302361	GEAR REVERSE (18T)	1	
3	11202534	WASHER - REVERSE GEAR Ø18XØ28X2.5	2	
4	11503225	CIRCLIP EXTERNAL E-15	2	
5	11200127	KEY, REVERSE GEAR	1	

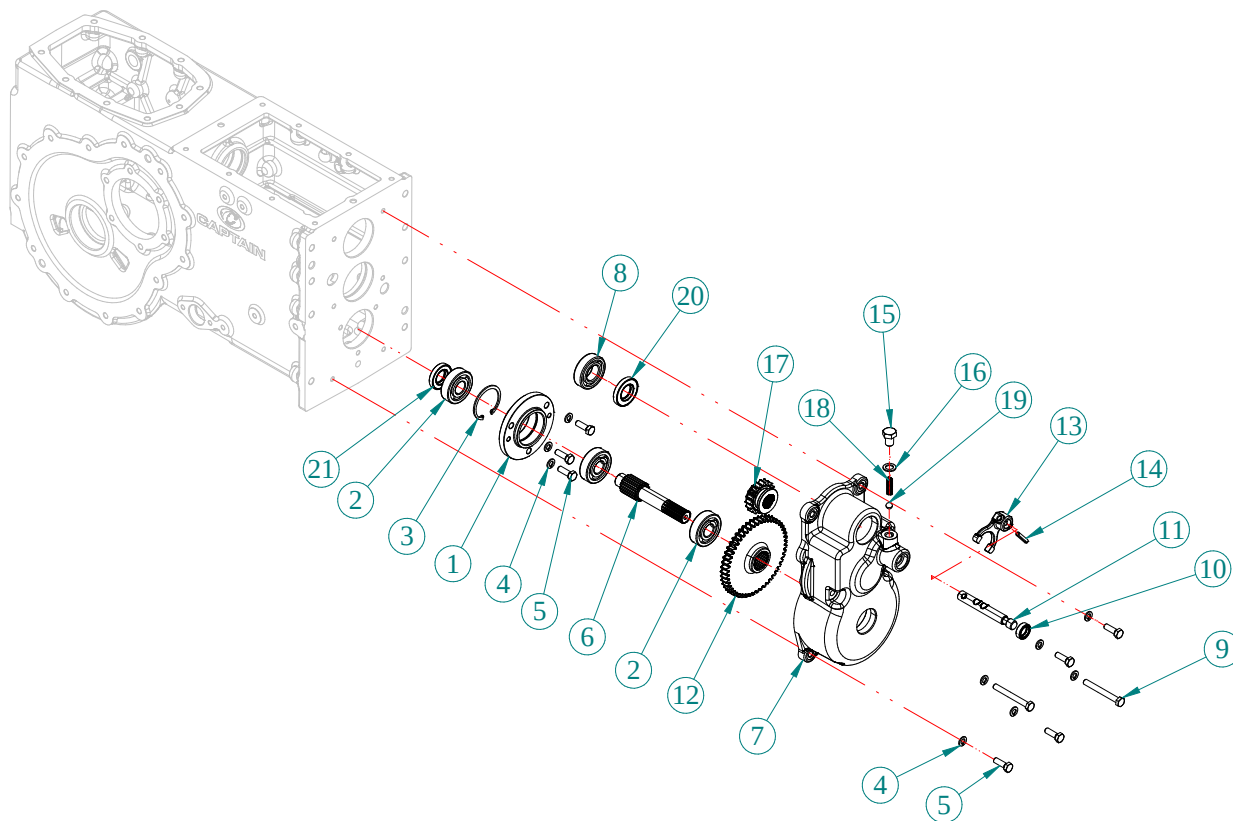

INPUT SHAFT & 4WD SHAFT ASSEMBLY


MODEL :- 263
ASSEMBLY NO. :- 11305581

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202387	BEARING CUP	1	
2	11502518	BALL BEARING 6304	3	
3	11502529	CIRCLIP, INTERNAL Ø52X2.00	1	
4	11500052	SPRING WASHER - 8mm	9	
5	11500051	HEX. BOLT M8 X 25 (F.T.)	7	
6	11202371	DRIVE SHAFT 4WD (14T)	1	
7	11205788	HOLDER BEARING (4WD)	1	
8	11500164	BALL BEARING 6205	1	
9	11505132	HEX. BOLT M8 X 70 (H.T.)	2	
10	11502538	OIL SEAL Ø14xØ24x7	1	
11	11203124	RAIL SHAFT, 4WD	1	
12	11204667	GEAR, 4WD (50-T)	1	
13	11202354	FORK, 4WD	1	
14	11502531	SLOTTED SPRING PIN Ø6X30	1	
15	11208686	HEX BOLT _SP TYPE M12X16.5	1	
16	11500007	COPPER WASHER Ø12xØ19x1.5	1	
17	11204665	GEAR, 4WD (18-T)	1	
18	11200191	SPRING, LENGTH -22	1	
19	11500089	BALL - Ø3/8"	1	
20	11502539	OIL SEAL Ø22XØ45X7	1	
21	11502984	OIL SEAL Ø40XØ20X7	1	

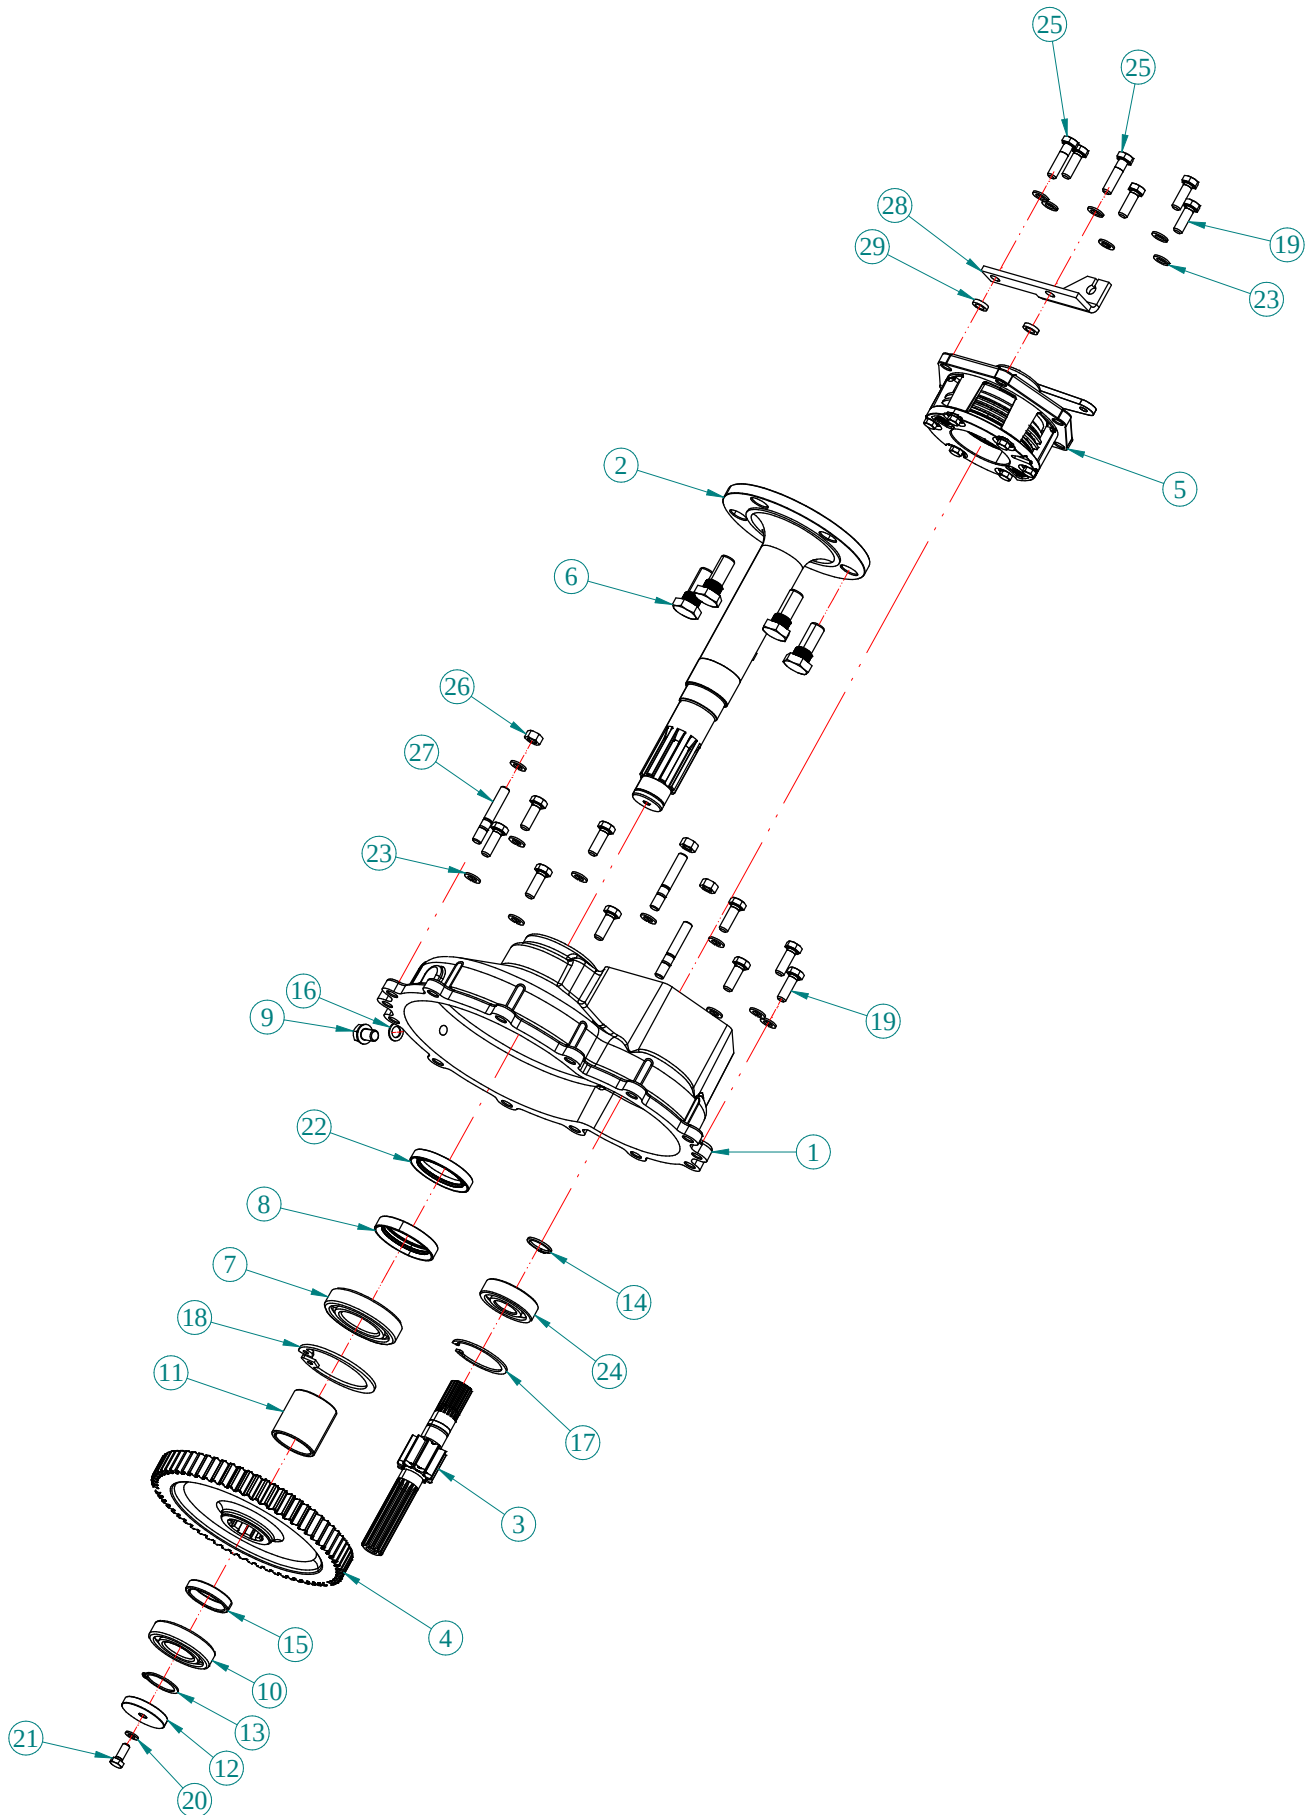


FINAL DRIVE LH
MODEL :-263
ASSEMBLY NO. :- 11309272

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205228	CASE REAR AXLE HOUSING LH	1	
2	11204946	SHAFT, REAR AXLE (352)	1	
3	11204668	BULL SHAFT -3.25 (10-T)	1	
4	11204669	GEAR, BULL (67-T)	1	
5	11405496	WET BRAKE LH	1	
6	11202777	BOLT, REAR AXLE	5	
7	11501464	BALL BEARING 6209	1	
8	11501471	OIL SEAL (Ø70 X Ø50 X 12)	1	
9	11504997	DRAIN PLUG (M12x1.5x16)	1	
10	11501463	BALL BEARING 6207	1	
11	11203116	DISTANCE, (Ø42.1XØ50.8X53)	1	
12	11201367	DISTANCE, REAR AXLE	1	
13	11501456	CIRCLIP, EXTERNAL (Ø35X1.5)	1	
14	11503273	CIRCLIP EXTERNAL Ø25X2	1	
15	11203117	DISTANCE, (Ø42.1xØ51x10)	1	
16	11500007	COPPER WASHER Ø12xØ19x1.5	1	
17	11501126	CIRCLIP, INTERNAL Ø62X2	1	
18	11501457	CIRCLIP, INTERNAL Ø85X3	1	
19	11500232	HEX. BOLT M10 X 30 (F.T.)	13	
20	11500052	SPRING WASHER - 8mm	1	
21	11500067	HEX. BOLT M8X20 (F.T)	1	
22	11503198	OIL SEAL (Ø70 x Ø50 x 10)	1	
23	11500062	SPRING WASHER - 10mm	18	
24	11501466	BALL BEARING 6305	1	
25	11500814	HEX BOLT M10X40 (H.T.) [10.9]	2	
26	31506845	HEX NUT M10 [Class 10]	3	
27	11508580	STUD M10 X 50	3	
28	11205401	BRACKET - BRAKE CABLE RH	1	
29	11205502	WASHER, BRACKET BRAKE CABLE	2	

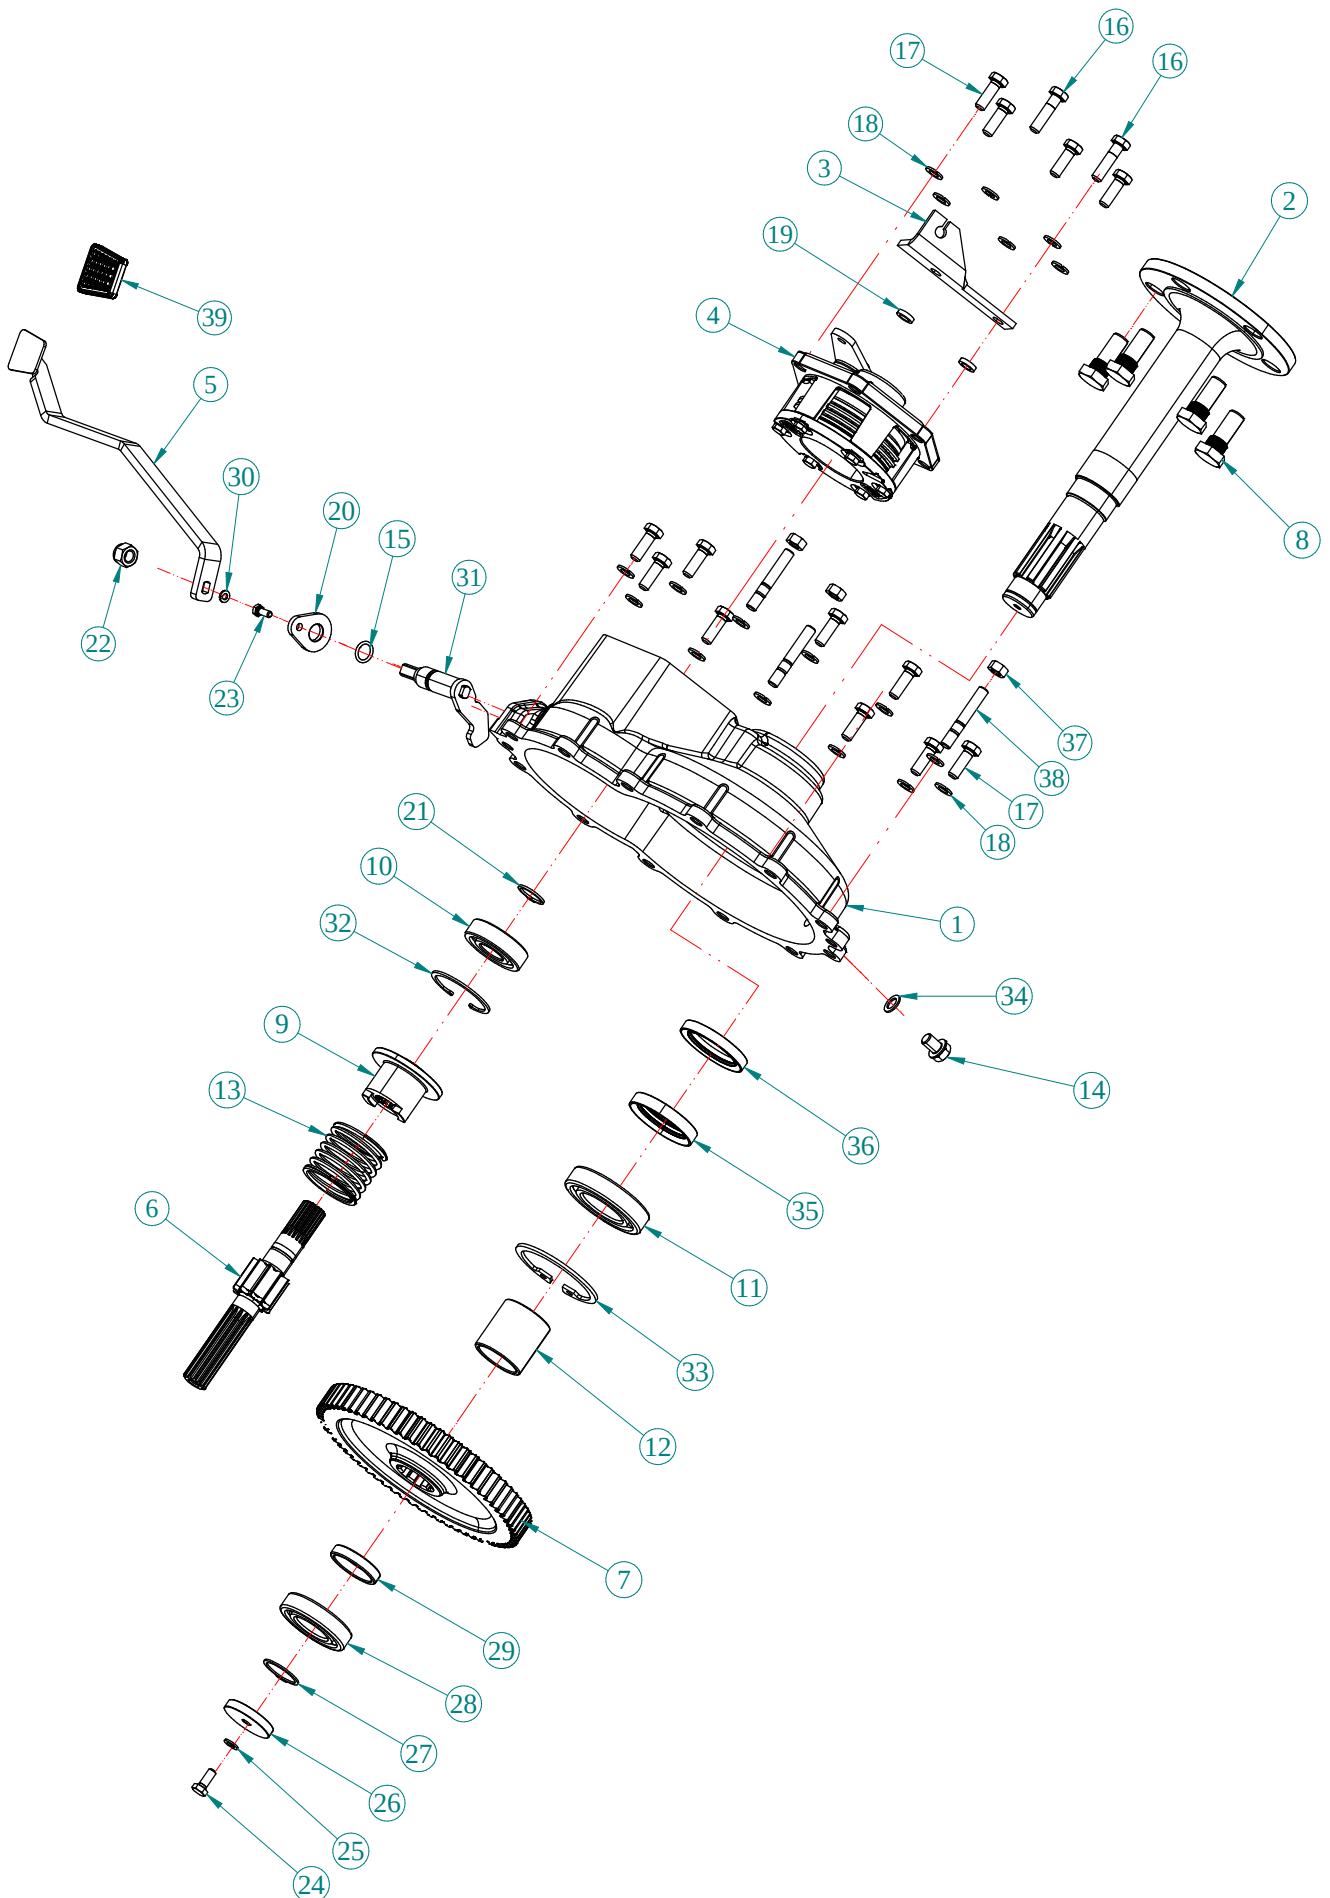

FINAL DRIVE RH
MODEL :- 263
ASSEMBLY NO. :- 11309273

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205227	CASE REAR AXLE HOUSING RH	1	
2	11204946	SHAFT, REAR AXLE (352)	1	
3	11205401	BRACKET - BRAKE CABLE RH	1	
4	11405495	WET BRAKE RH	1	
5	11205392	PEDAL - DIFFERENTIAL LOCK	1	
6	11204668	BULL SHAFT -3.25 (10-T)	1	
7	11204669	GEAR, BULL (67-T)	1	
8	11202777	BOLT, REAR AXLE	5	
9	11202380	DIFFERENTIAL LOCK	1	
10	11501466	BALL BEARING 6305	1	
11	11501464	BALL BEARING 6209	1	
12	11203116	DISTANCE, (Ø42.1XØ50.8X53)	1	
13	11202814	SPRING, DIFFERENTIAL LOCK	1	
14	11504997	DRAIN PLUG (M12x1.5x16)	1	
15	11504882	O-RING Ø15.54 x 2.62	1	
16	11500814	HEX BOLT M10X40 (H.T.) [10.9]	2	
17	11500232	HEX. BOLT M10 X 30 (F.T.)	13	
18	11500062	SPRING WASHER - 10mm	18	
19	11205502	WASHER, BRACKET BRAKE CABLE	2	
20	11202406	LOCK WASHER , DIFFERENTIAL LOCK	1	
21	11503273	CIRCLIP EXTERNAL Ø25X2	1	
22	11501024	NYLOCK HEX. NUT M12	1	
23	11500071	HEX. BOLT M6x15 (F.T.)8.8	1	
24	11500067	HEX. BOLT M8X20 (F.T)	1	
25	11500052	SPRING WASHER - 8mm	1	
26	11201367	DISTANCE, REAR AXLE	1	
27	11501456	CIRCLIP, EXTERNAL (Ø35X1.5)	1	
28	11501463	BALL BEARING 6207	1	
29	11203117	DISTANCE, (Ø42.1xØ51x10)	1	
30	11500073	SPRING WASHER - 6 mm	1	
31	11202509	SHAFT, DIFFERENTIAL LOCK	1	
32	11501126	CIRCLIP, INTERNAL Ø62X2	1	
33	11501457	CIRCLIP, INTERNAL Ø85X3	1	
34	11500007	COPPER WASHER Ø12xØ19x1.5	1	
35	11501471	OIL SEAL (Ø70 X Ø50 X 12)	1	
36	11503198	OIL SEAL (Ø70 x Ø50 x 10)	1	
37	31506845	HEX NUT M10 [Class 10]	3	
38	11508580	STUD M10 X 50	3	
39	11203130	PEDAL PAD (FOOT THROTTLE)	1	

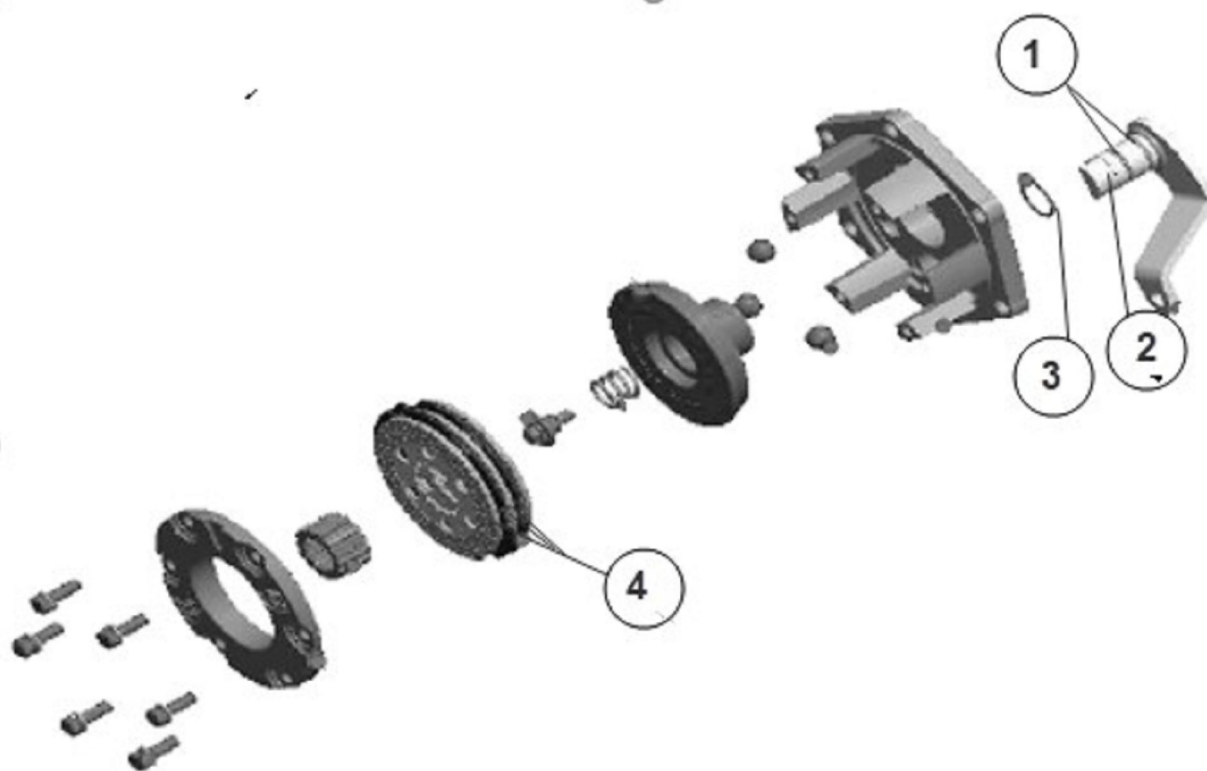


WET BRAKE ASSEMBLY RH & LH

MODEL :- 263

ASSEMBLY NO.:-11305620


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405603	O-RING	2	
2	11405604	O-RING	1	
3	11405606	SNAP RING	1	
4	11404802	FRICTION DISC	3	

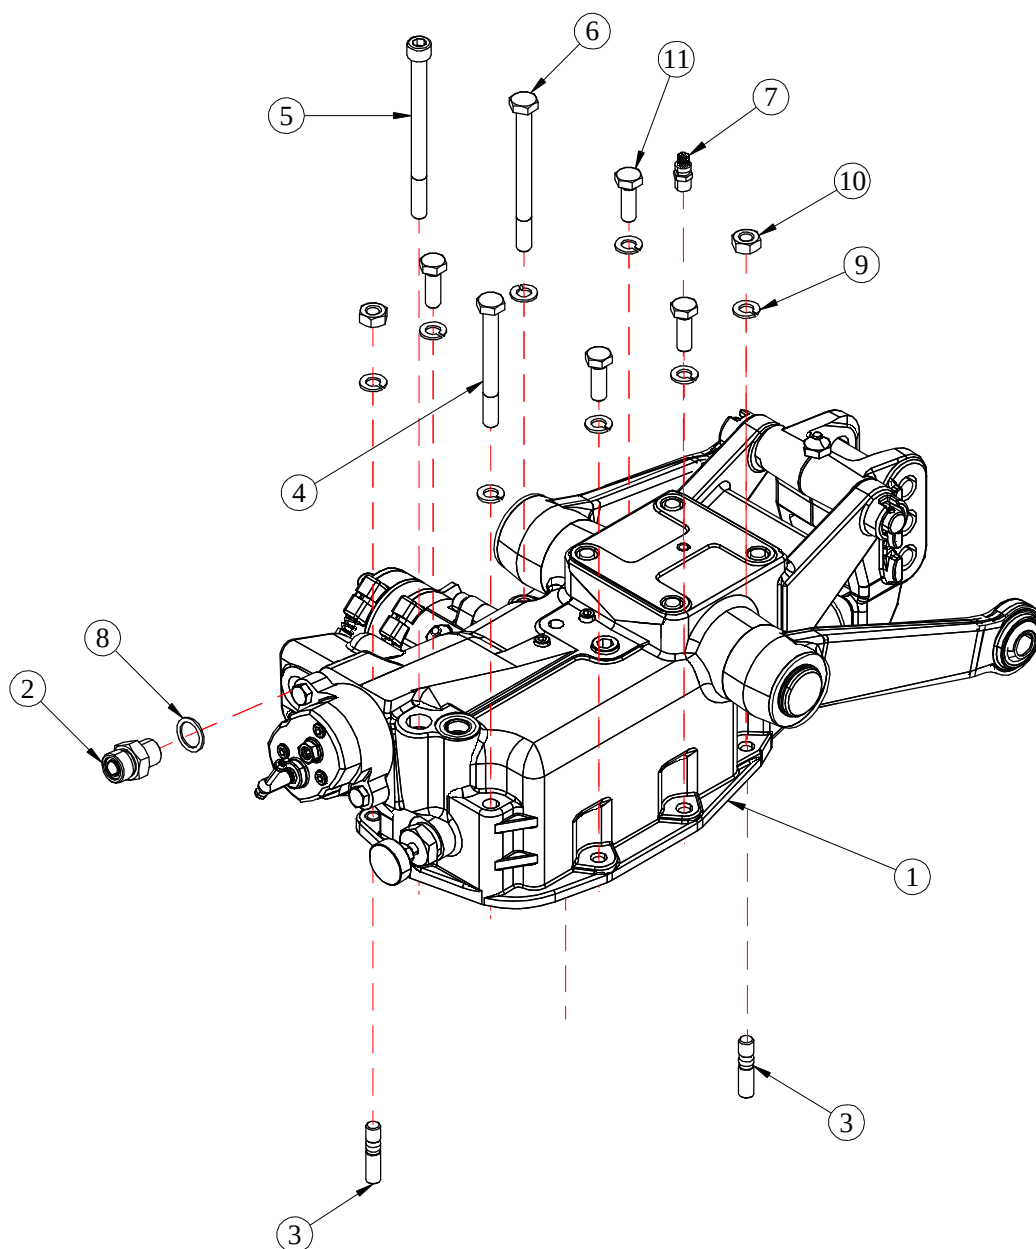

HYDRAULIC BODY ASSEMBLY

ASSEMBLY NO. :- 11305578


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402484	HYDRAULIC ASSY. (MITA)	1	
2	11205328	NIPPLE M18 x 13/16" UN	1	
3	11501571	STUD M10 X 30	2	
4	11502535	HEX. BOLT (M10X95 10.9)	1	
5	11502537	ALLEN BOLT M10 (M10X130-10.9)	1	
6	11502536	HEX. BOLT M10 (M10X115-10.9)	1	
7	11203294	AIR BREATHER BOLT 1/8"-27 NTPF	1	
8	11502338	COPPER WASHER Ø18XØ24X1.5	1	
9	11500062	SPRING WASHER - 10mm	8	
10	11500024	HEX NUT M10	2	
11	11500232	HEX. BOLT M10 X 30 (F.T.)	4	

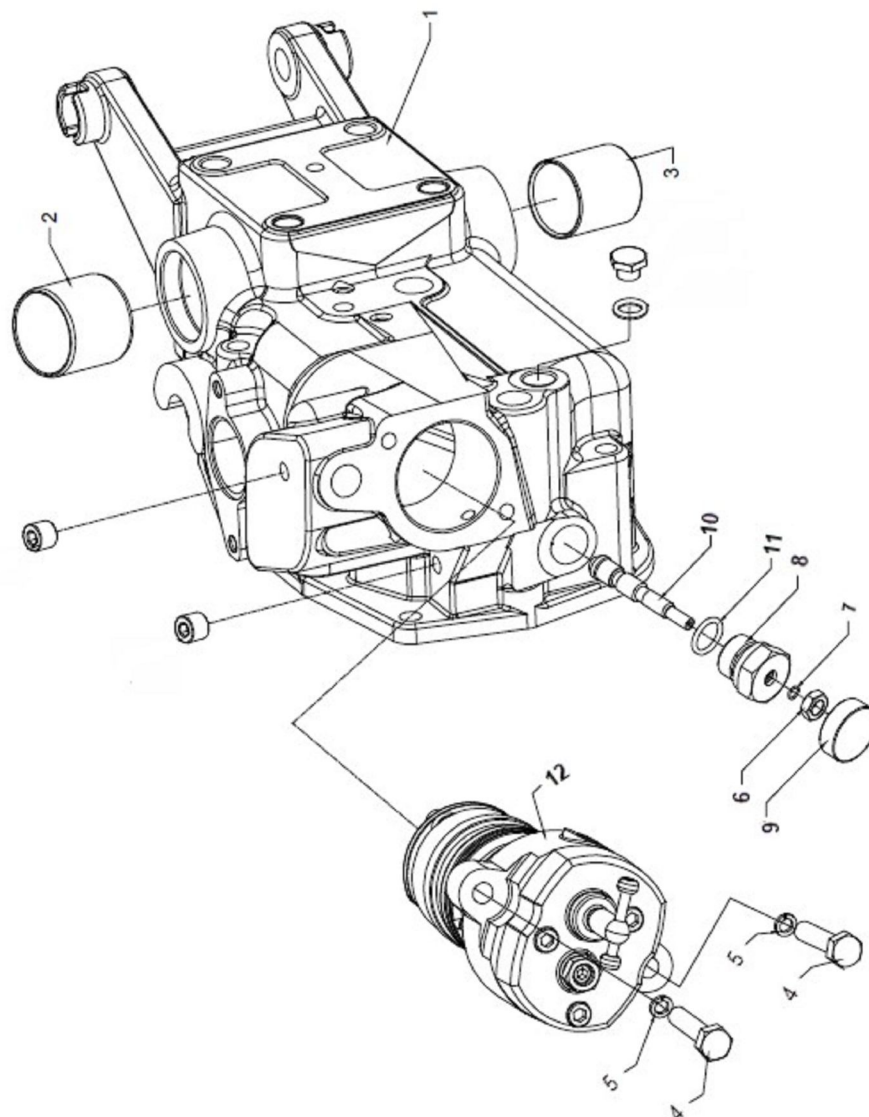

HOUSING ASSEMBLY

ASSEMBLY NO.:-11305578A


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11409064	HOUSING ASSY POS, 1-2-3-4	1	NOT FOR SALE
2	11405802	BRONZINA DU 44/40*40 BUSH	1	
3	11405803	BRONZINA BUSH	1	
4	11405804	SCREW M8x35 DIN 931-8G	2	
5	11405886	GROWER D=8.1 DIN7980-ZINC	2	
6	11405806	LOCK NUT	1	
7	11405807	O-RING D7.8 T1.78	1	
8	11405808	PLUG	1	
9	11405809	PRE-SELECTOR KNOB	1	
10	11405810	PRE-SELECTOR	1	
11	11405811	O-RING	1	
12	11405812	CONTROL VALVE ASSEMBLY	1	

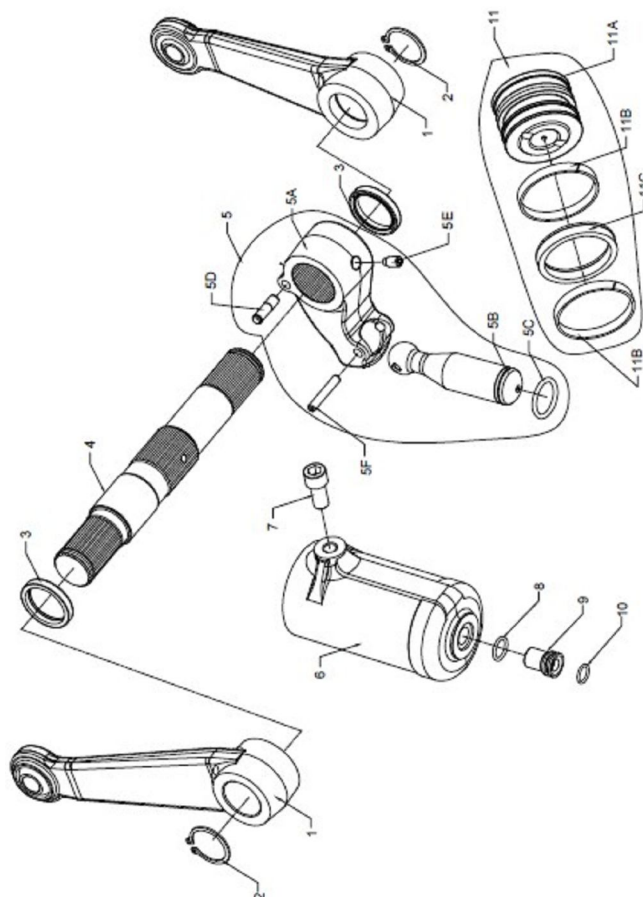

CYLINDER ASSEMBLY


ASSEMBLY NO.:-11305578B

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405813	ARM	2	
2	11405814	CIRCLIP E34 UNI 7435 90	2	
3	11405815	ARM SEAL 35/45x7	2	
4	11405816	MAIN SHAFT	1	
5	11405817	KIT CRANK	1	
5A	11405819	CRANK	1	
5B	11405820	CON ROD	1	
5C	11405821	O RING	1	
5D	11405834	PIN	1	
5E	11405835	GRUB SCREW M8x16	1	
5F	11405836	ELASTIC PIN 6x40	1	
6	11405818	CYLINDER	1	
7	11405837	ALLEN BOLT M12x25	1	
8	11405838	O RING	1	
9	11405839	PLUG	1	
10	11405840	O RING	1	
11	11405841	KIT PISTON	1	
11A	11405842	PISTON	1	
11B	11405843	PISTON GUIDE RING	2	
11C	11405844	PISTON SEAL B2555216/1/D	1	

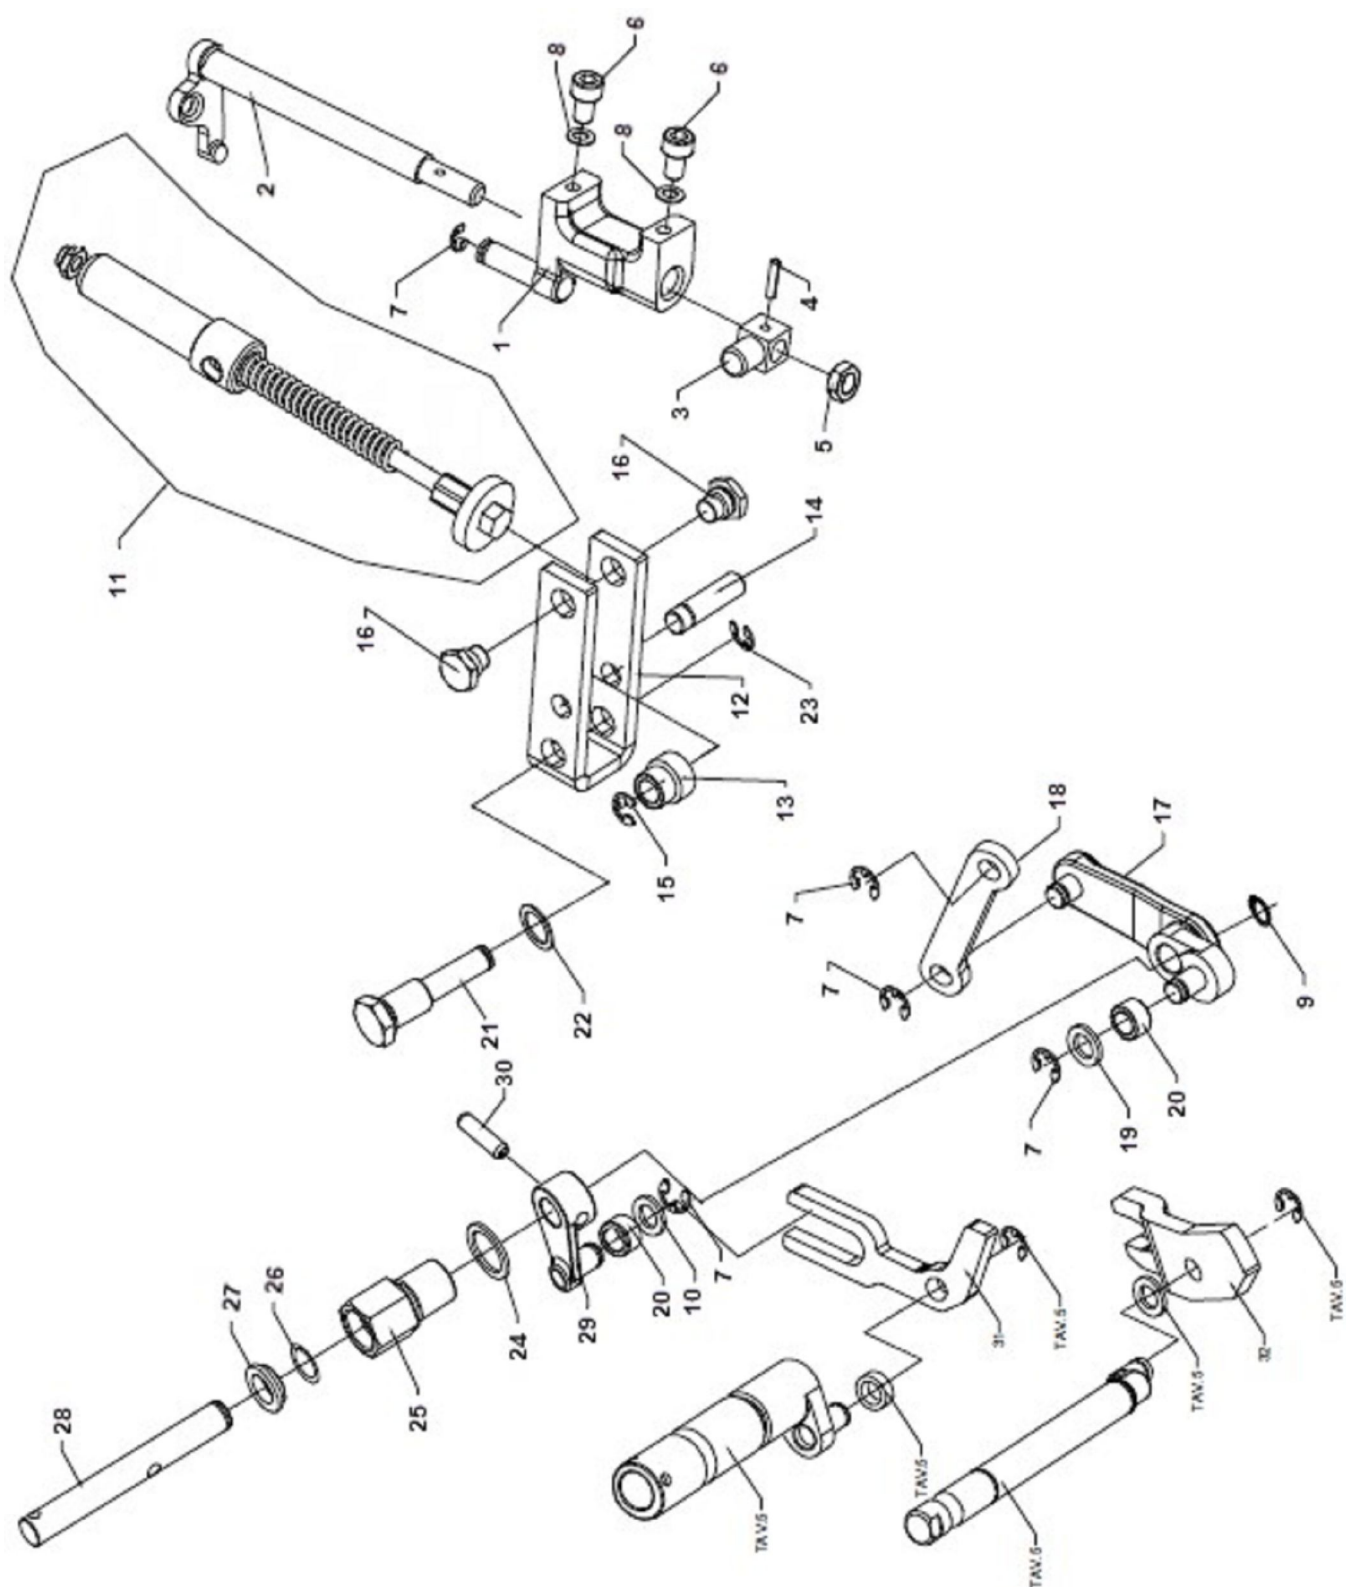

INTERNAL LEVER ASSEMBLY
ASSEMBLY NO.:-11305578C


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405845	LIMIT SWITCH SUPPORT WITH PIN	1	
2	11405846	LIMIT SWITCH LEVER	1	
3	11405847	PIN	1	
4	11405848	ELASTIC PIN DIA 3x14	1	
5	11405849	NUT M8	5	
6	11405850	ALLEN BOLT M6x16	2	
7	11405917	RADIAL CIRCLIP 6MM	5	
8	11405873	COPPER WASHER 6.4x10x1	2	
9	11405874	CIRCLIP	1	
10	11405918	PLAN WASHER	1	
11	11405876	PUSH ROD KIT	1	
12	11405852	LEVER	1	
13	11405853	WHEEL	1	
14	11405854	PIN	1	
15	11405855	RADIAL CIRCLIP 5MM	1	
16	11405856	SUPPORT PIN	2	
17	11405857	COMPENSATOR	1	
18	11405858	LINK	1	
19	11405859	COPPER WASHER 8.5x14x1.5	1	
20	11405860	ROLLER '8/12x7	1	
21	11405861	SUPPORT PIN	1	
22	11405862	COPPER WASHER 14.5/20x1	1	
23	11405888	SEEGER RS D7 DIN 6799	1	
24	11405864	WASHER	1	
25	11405865	SUPPORT PIN	1	
26	11405866	OR 11.91x2.62 sh80/90	1	
27	11405867	WASHER	1	
28	11405868	PIN	1	
29	11405869	LEVER WITH PIN	1	
30	11405870	ELASTIC PIN D4x24	1	
31	11405871	INTERNAL DRAFT LEVER	1	
32	11405872	LEVER	1	

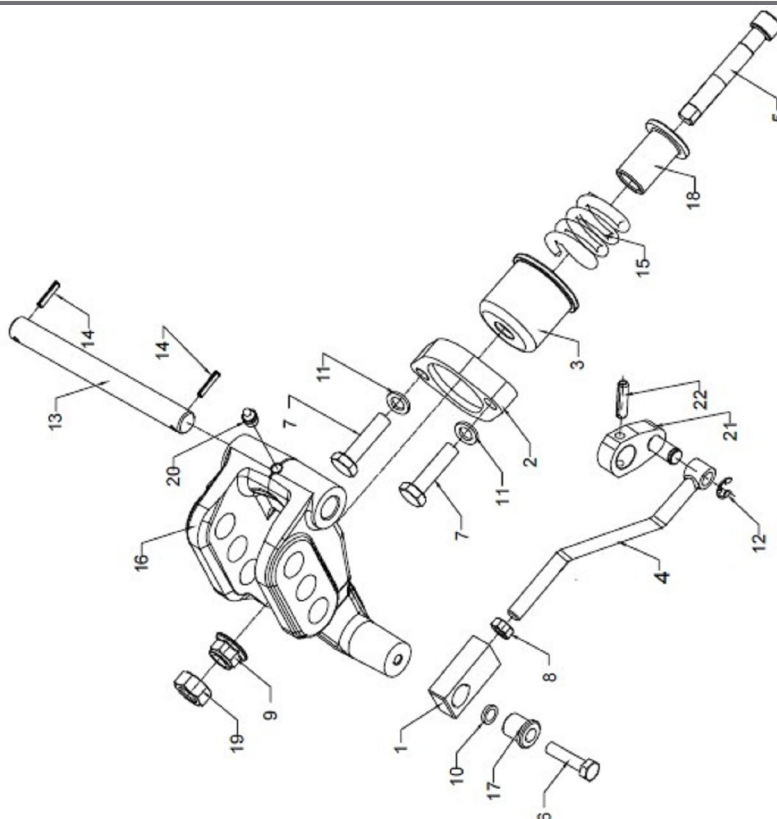

TOP LINK BRACKET ASSEMBLY

ASSEMBLY NO.:-11305578D


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405877	PLATE	1	
2	11405878	FLANGE	1	
3	11405879	COVER	1	
4	11405880	TIE ROD	1	
5	11405881	SCREW	1	
6	11405804	SCREW M8x35 DIN 931-8G	1	
7	11405883	SCREW M10x35 DIN 931-8G	2	
8	11405884	NUT M10 8G	1	
9	11405885	NUT M12	1	
10	11405886	GROWER D=8.1 DIN7980-ZINC	1	
11	11405887	GROWER D10.2 DIN 7980	2	
12	11405888	SEEGER RS D7 DIN 6799	1	
13	11405889	PIN	1	
14	11405890	ELASTIC PIN	2	
15	11405891	SPRING D24x46 FIELD D7.5	1	
16	11405892	BRACKET	1	
17	11405893	BUSH D8/20x19	1	
18	11405894	BUSH D12.5/35x42.5	1	
19	11405895	LOCK NUT	1	
20	11405896	GREASE NIPPLE	1	
21	11405897	CRANK WITH PIN	1	
22	11405870	ELASTIC PIN D4x24	1	

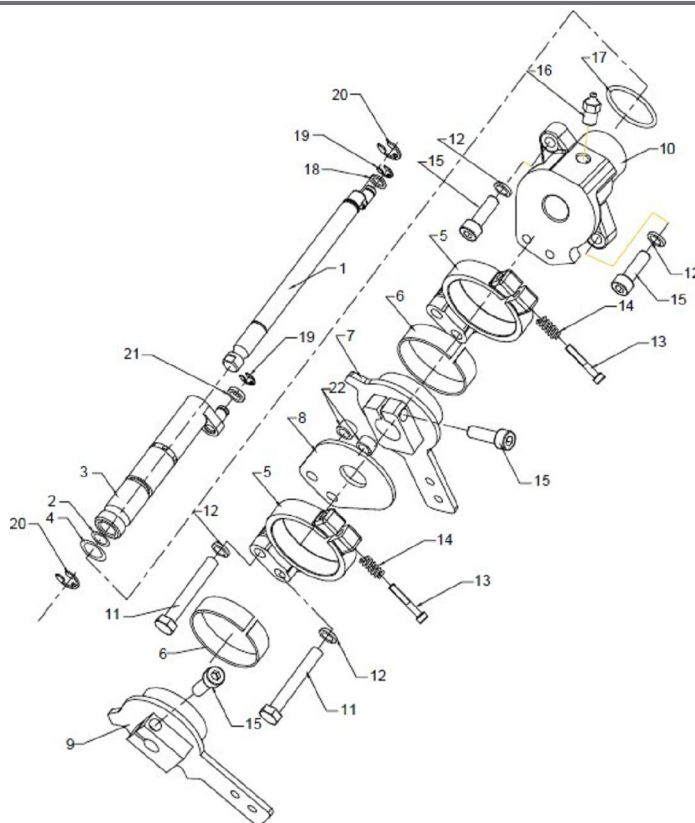

CONTROL LEVERS ASSEMBLY

ASSEMBLY NO.:-11305578E


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405899	POSITION SHAFT	1	
2	11405900	O-RING	1	
3	11405901	DRAFT TUBE	1	
4	11405902	O-RING	1	
5	11405903	CLUB HUB	2	
6	11405904	CLUTCH 50/53x13.5	2	
7	11405905	LEVER	1	
8	11405906	FLANGE	1	
9	11405907	CONTROL LEVER	1	
10	11405908	SUPPORT	1	
11	11405909	VITE M8x70 SCREW	2	
12	11405886	GROWER D=8.1 DIN7980-ZINC	4	
13	11405911	VITE M6x40 UNI5971 Zn 8.8 SCREW	2	
14	11405912	MOLLA FRIZIONE SPRING	2	
15	11405913	VITE M8x30 UNI5971 Zn 8.8 SCREW	4	
16	11405914	INGR. DIRITTO M10x1 FITTING	1	
17	11405915	O-RING	1	
18	11405918	PLAN WASHER	1	
19	11405917	RADIAL CIRCLIP 6MM	2	
20	11405874	CIRCLIP	2	
21	11405919	WASHER	1	
22	11405920	BUSH	2	

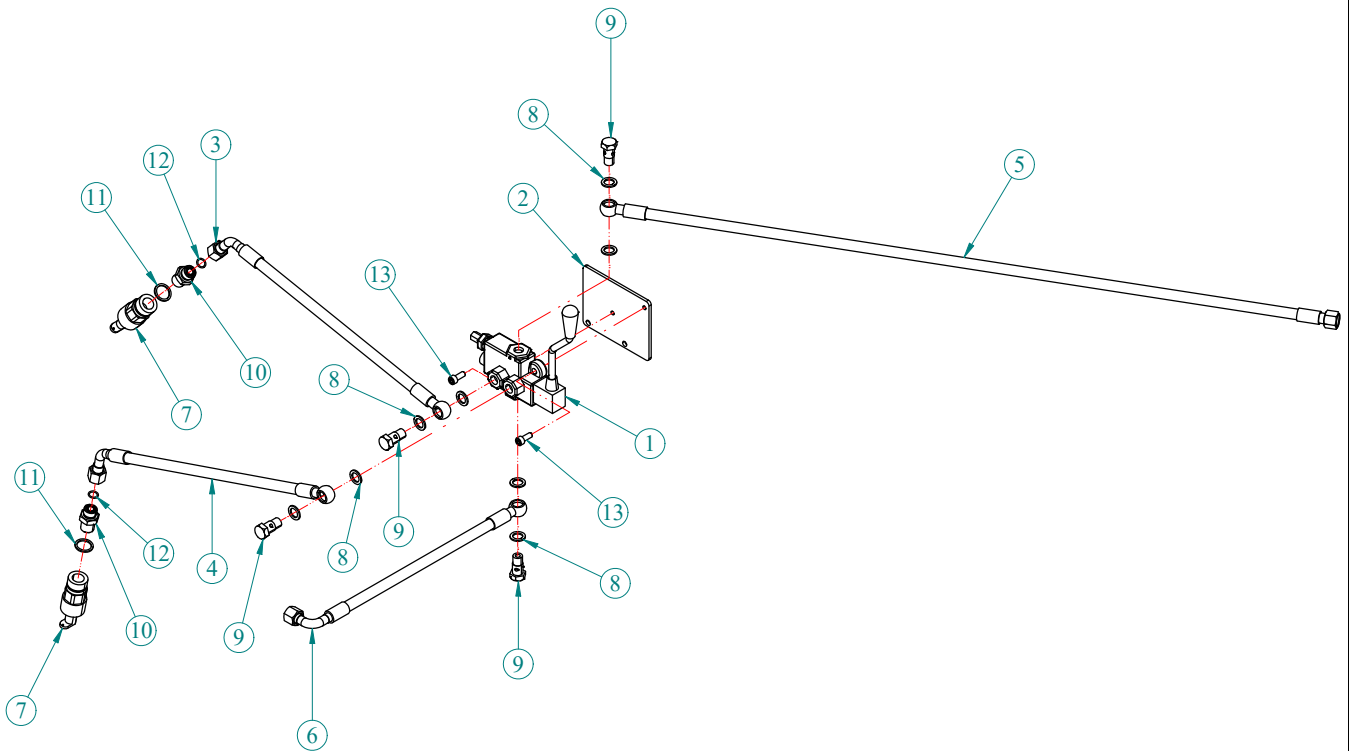

DIRECTION CONTROL VALVE ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305555


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202328	HYDRAULIC DISTRIBUTOR VALVE (RETAIN TYPE)	1	
2	11205353	DCV MOUNTING BRACKET	1	
3	11205273	PIPE(DCV TO QRC-1)	1	
4	11205324	PIPE(DCV TO QRC-2)	1	
5	11205274	SECONDARY PIPE PUMP TO DCV	1	
6	11205275	PIPE FROM DCV TO LIFT	1	
7	11202334	FEMALE QRC	2	
8	11402783	DOWTY SEAL 3/8	8	
9	11502336	BANJO BOLT 3/8	4	
10	11205327	NIPPLE 1/2" BSP X 13/16" UN	2	
11	21504513	RUBBER WASHER DAUTI SEAL 1/2" (BSP)	2	
12	11205329	O-RING 12.42X1.78	2	
13	11500599	ALLEN BOLT M8x20 (F.T)	2	

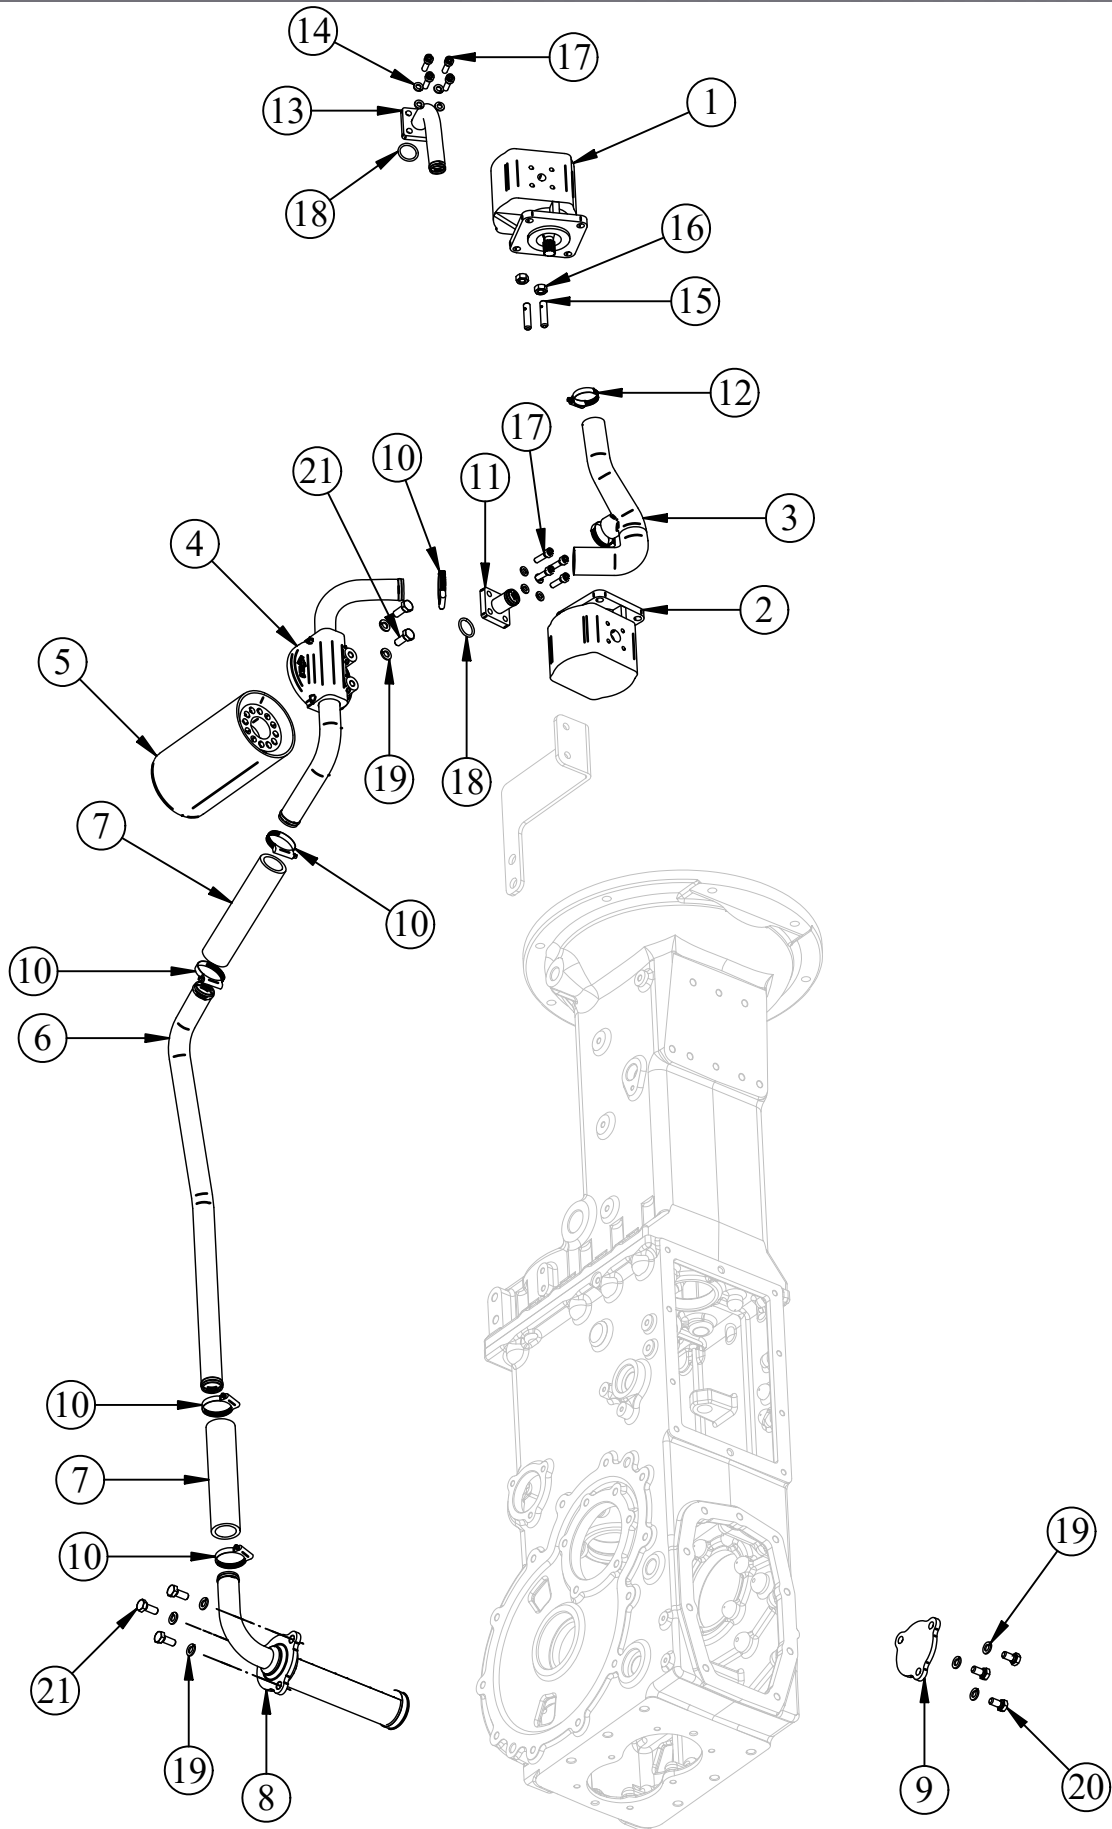

HYDRAULIC PUMP & PIPE ASSY 1

MODEL :- 263
ASSEMBLY NO. :-11307088


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402455	GEAR PUMP HYDRAULIC (ACW)	1	
2	11402456	GEAR PUMP HYDRAULIC (CW)	1	
3	11205158	T- HOSE SUCTION PIPE	1	
4	11206788	SUCTION FILTER HEAD	1	
5	11405481	SUCTION FILTER ASSY	1	
6	11206790	SUCTION PIPE	1	
7	11205155	SUCTION HOSE (150mm)	2	
8	11205261	STRAINER FILTER Ø45	1	
9	11205259	SEALING FLANGE, STRAINER FILTER Ø45	1	
10	11205251	CLAMP 40mm (IS: 4762)	5	
11	11205160	PUMP CONECTION (HYD)	1	
12	11201445	CLAMP 25mm (IS: 4762)	2	
13	11205159	PUMP CONECTION (PS)	1	
14	11500073	SPRING WASHER - 6 mm	8	
15	11502260	GRUB BOLT M8x35	2	
16	11500082	HEX NUT M8	2	
17	11500881	ALLEN BOLT M6x20 (F.T.)	8	
18	11500415	O-RING Ø20 x Ø2.5	2	
19	11500052	SPRING WASHER - 8mm	8	
20	11500076	HEX BOLT M8 x 16	3	
21	11500067	HEX. BOLT M8X20 (F.T)	5	

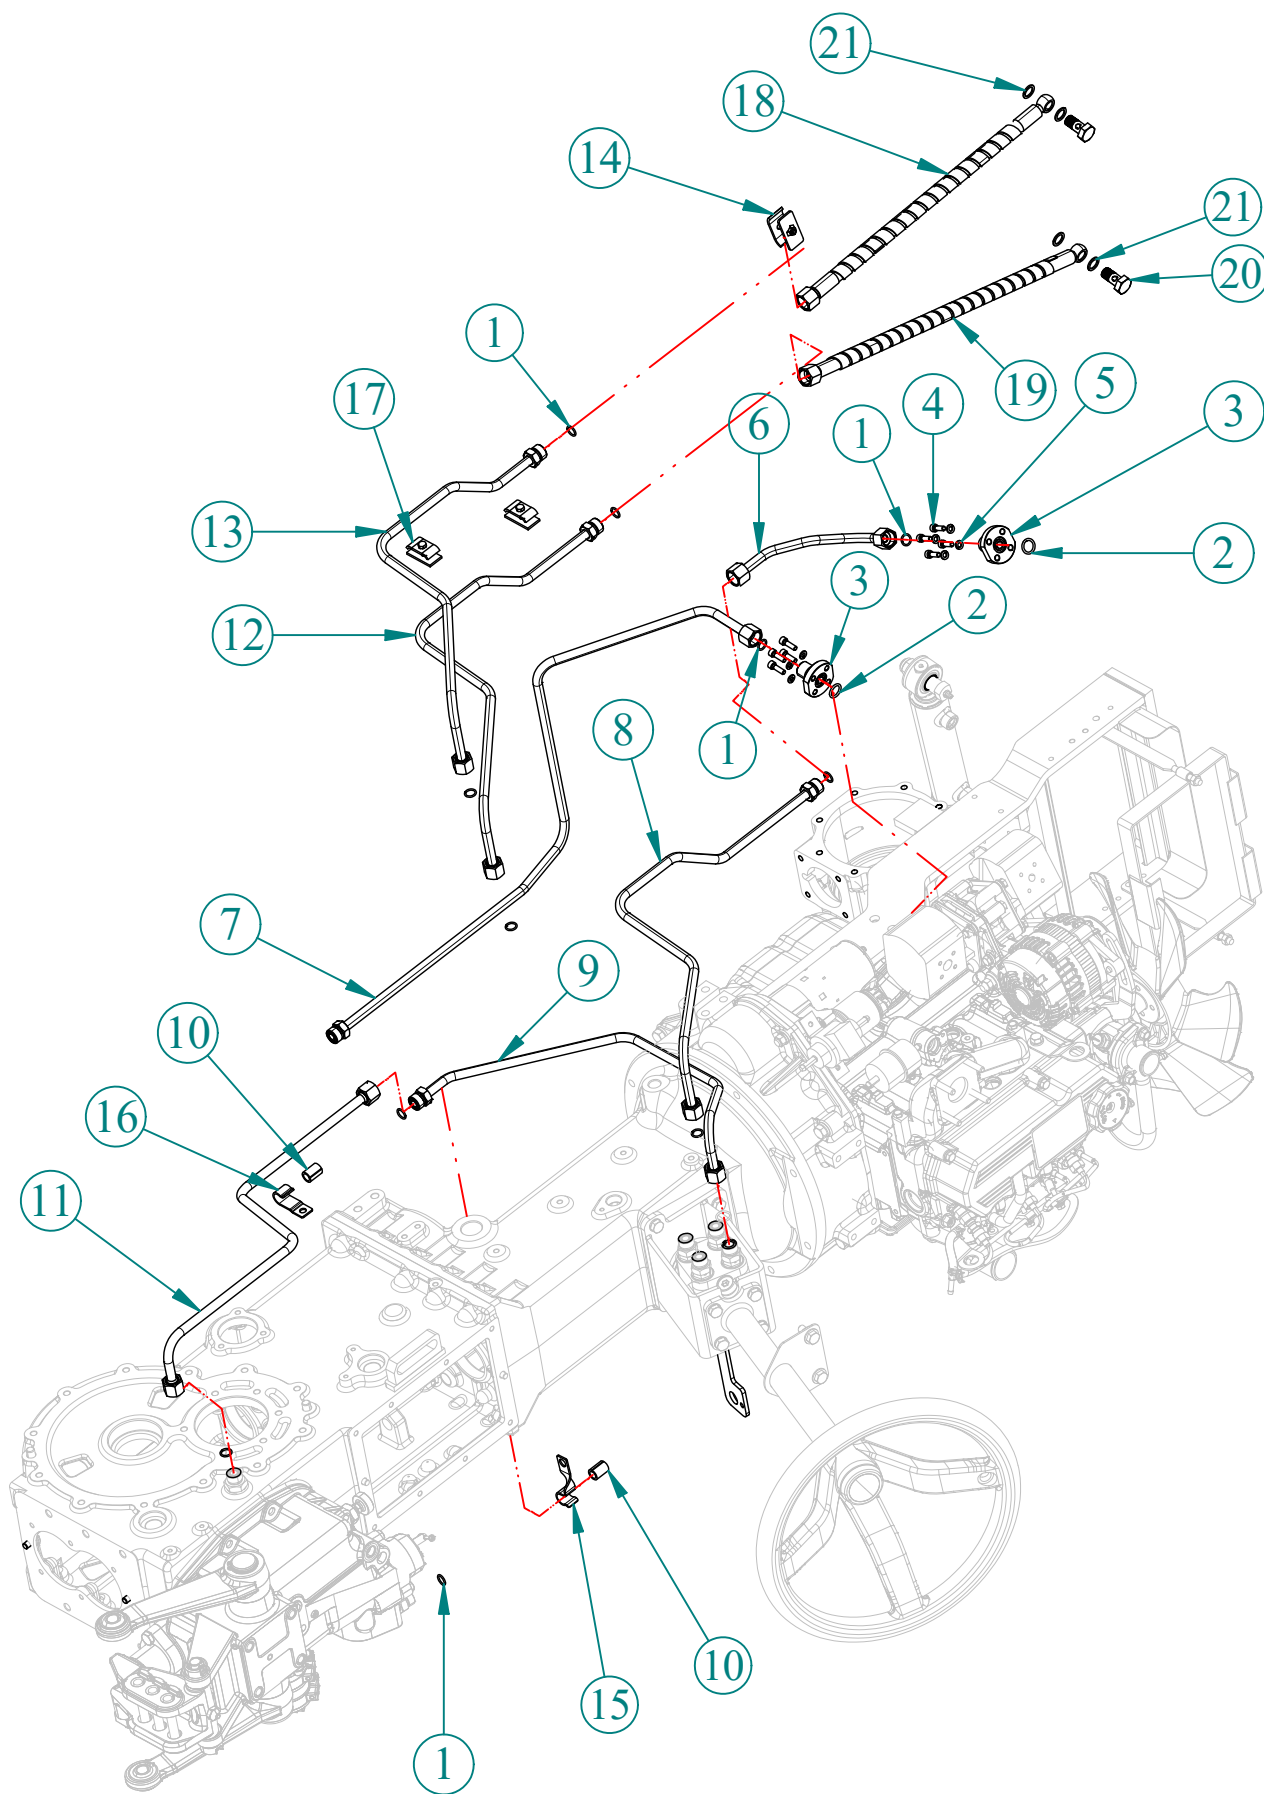

HYDRAULIC PUMP & PIPE ASSY 2

MODEL :- 263
ASSEMBLY NO. :-11309274


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205329	O-RING 12.42X1.78	13	
2	11504882	O-RING Ø15.54 x 2.62	2	
3	11205325	PUMP CONNECTION 13/16" UN	2	
4	11500881	ALLEN BOLT M6x20 (F.T.)	8	
5	11500073	SPRING WASHER - 6 mm	8	
6	11205235	PRIMARY PIPE PUMP TO STEERING	1	
7	11205241	PRIMARY DELIVERY PIPE	1	
8	11205236	SECONDARY PIPE PUMP TO STEERING	1	
9	11205237	PRIMARY PIPE STEERING TO REAR TRANSMISSION	1	
10	11205523	RUBBER PROTECTION - PIPE Ø12	2	
11	11208474	SECONDARY PIPE STEERING TO REAR TRANSMISSION	1	
12	11205239	PRIMARY STEERING PIPE - L	1	
13	11205240	PRIMARY STEERING PIPE - R	1	
14	11208609	CLAMP FOR FLEXIBLE STEERING PIPE	1	
15	11205243	CLAMP - PRIMARY DELIVERY PIPE	1	
16	11205242	CLAMP - PRIMARY PIPE STEERING TO REAR	1	
17	11202293	CLAMP FOR PS PIPE	2	
18	11208425	FLEXIBLE STEERING PIPE-R	1	
19	11208426	FLEXIBLE STEERING PIPE L	1	
20	11205286	BANJO BOLT 9/16" - 18 UNF 2A L-30	2	
21	11205317	COPPER WASHER Ø14.5XØ20X1.5	4	

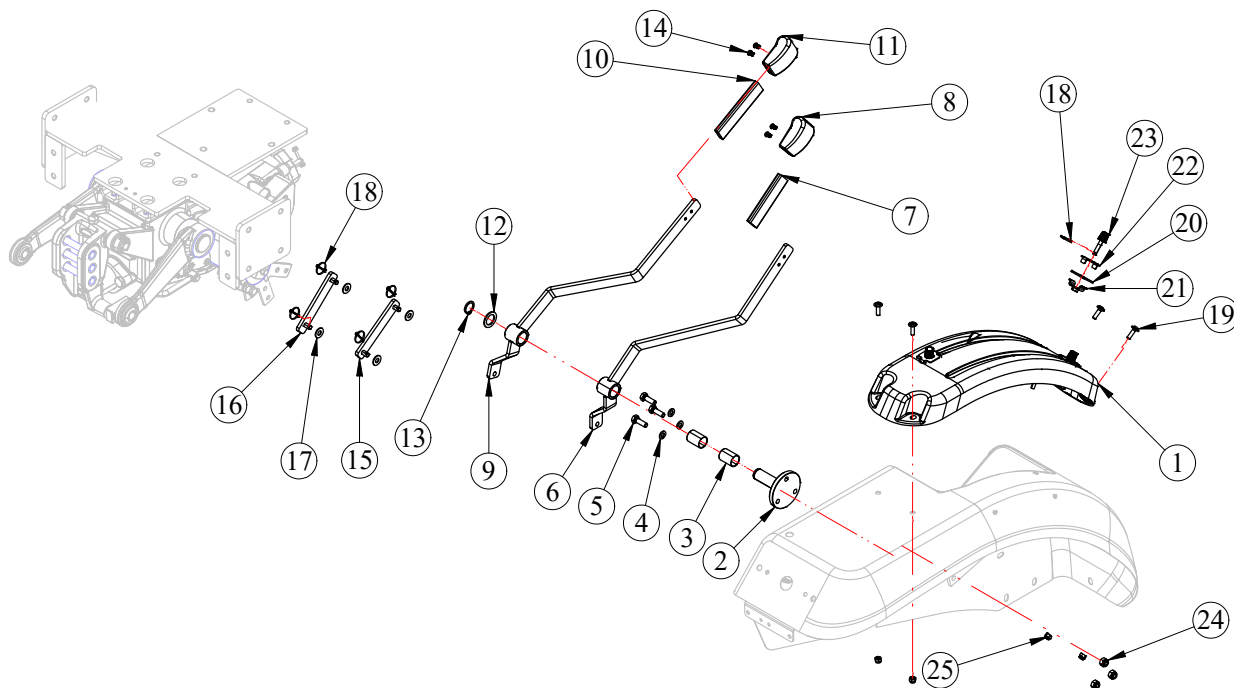

PC-DC LEVER


MODEL :- 263
ASSEMBLY NO. :- 11305585

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11203000	FENDER COVER RH	1	
2	11203110	LEVER, GUIDE	1	
3	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	2	
4	11500052	SPRING WASHER - 8mm	3	
5	11500051	HEX. BOLT M8 X 25 (F.T.)	3	
6	11205222	LEVER - POSITION CONTROL	1	
7	11204697	COVER H-M-L PLASTIC	1	
8	11203152	KNOB PC	1	
9	11205223	LEVER - DRAFT CONTROL	1	
10	11204696	COVER DC PLASTIC	1	
11	11203153	KNOB DC	1	
12	11203206	PLAIN WASHER Ø20.3xØ30x2	1	
13	11503297	CIRCLIP, EXTERNAL Ø20x1.75	1	
14	11503131	PAN HEAD SCREW M5X8	4	
15	11203204	LINK, PC	1	
16	11203205	LINK, DC	1	
17	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
18	11500619	SPLIT PIN 3/32" x 1"	7	
19	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	4	
20	11205431	PAD RUBBER SPACER PC-DC	3	
21	11205433	PLATE STOPPER PC-DC (BOTTOM)	3	
22	11205432	PLATE STOPPER PC-DC (TOP)	3	
23	11205434	KNOB STOPPER PC-DC	3	
24	11500520	NYLOCK HEX NUT M8	3	
25	11500947	NYLOCK NUT M6	4	

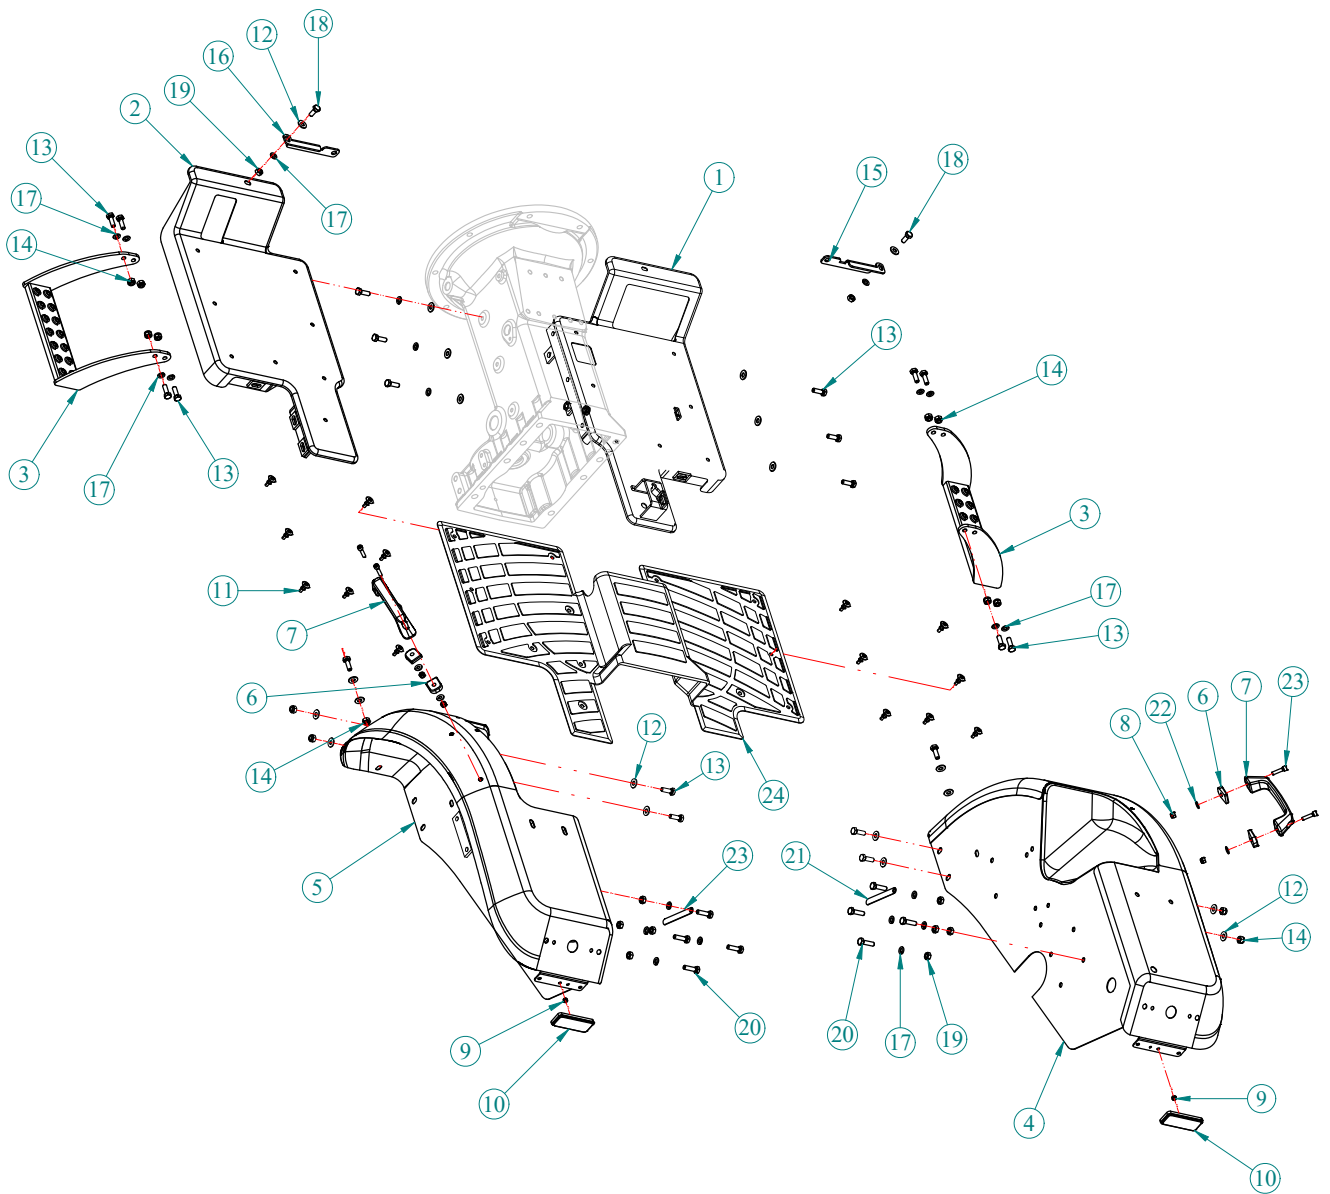


FENDER FOOTREST ASSY
MODEL :- 263
ASSEMBLY NO. :- 11308344

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205214	FOOT REST - RH	1	
2	11205215	FOOT REST - LH	1	
3	11205019	FOOT STEP	2	
4	11202804	FENDER RH	1	
5	11202803	FENDER LH	1	
6	11202080	RUBBER DAMPER, HANDLE	4	
7	11202086	HANDLE GRIP, FENDER	2	
8	11500947	NYLOCK NUT M6	4	
9	11500931	NYLOCK HEX. NUT M5	2	
10	11405161	REFLEX REFLECTOR	2	
11	11205711	PUSH RIVET 8mm	15	
12	11501068	PLAIN WASHER Ø8.5XØ19X1.5	20	
13	11500051	HEX. BOLT M8 X 25 (F.T.)	20	
14	11500520	NYLOCK HEX NUT M8	14	
15	11205217	SUPPORT - FOOTREST RH	1	
16	11205216	SUPPORT - FOOTREST LH	1	
17	11500052	SPRING WASHER - 8mm	24	
18	11500067	HEX. BOLT M8X20 (F.T)	2	
19	11500082	HEX NUT M8	10	
20	11500580	HEX BOLT M8x30 (F.T) [8.8]	8	
21	11205377	CLIP FOR WIRING HARNESS	2	
22	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	
23	11504743	ALLEN BOLT M6X25 (F.T)	4	
24	11205426	FLOOR RUBBER MAT BIG	1	

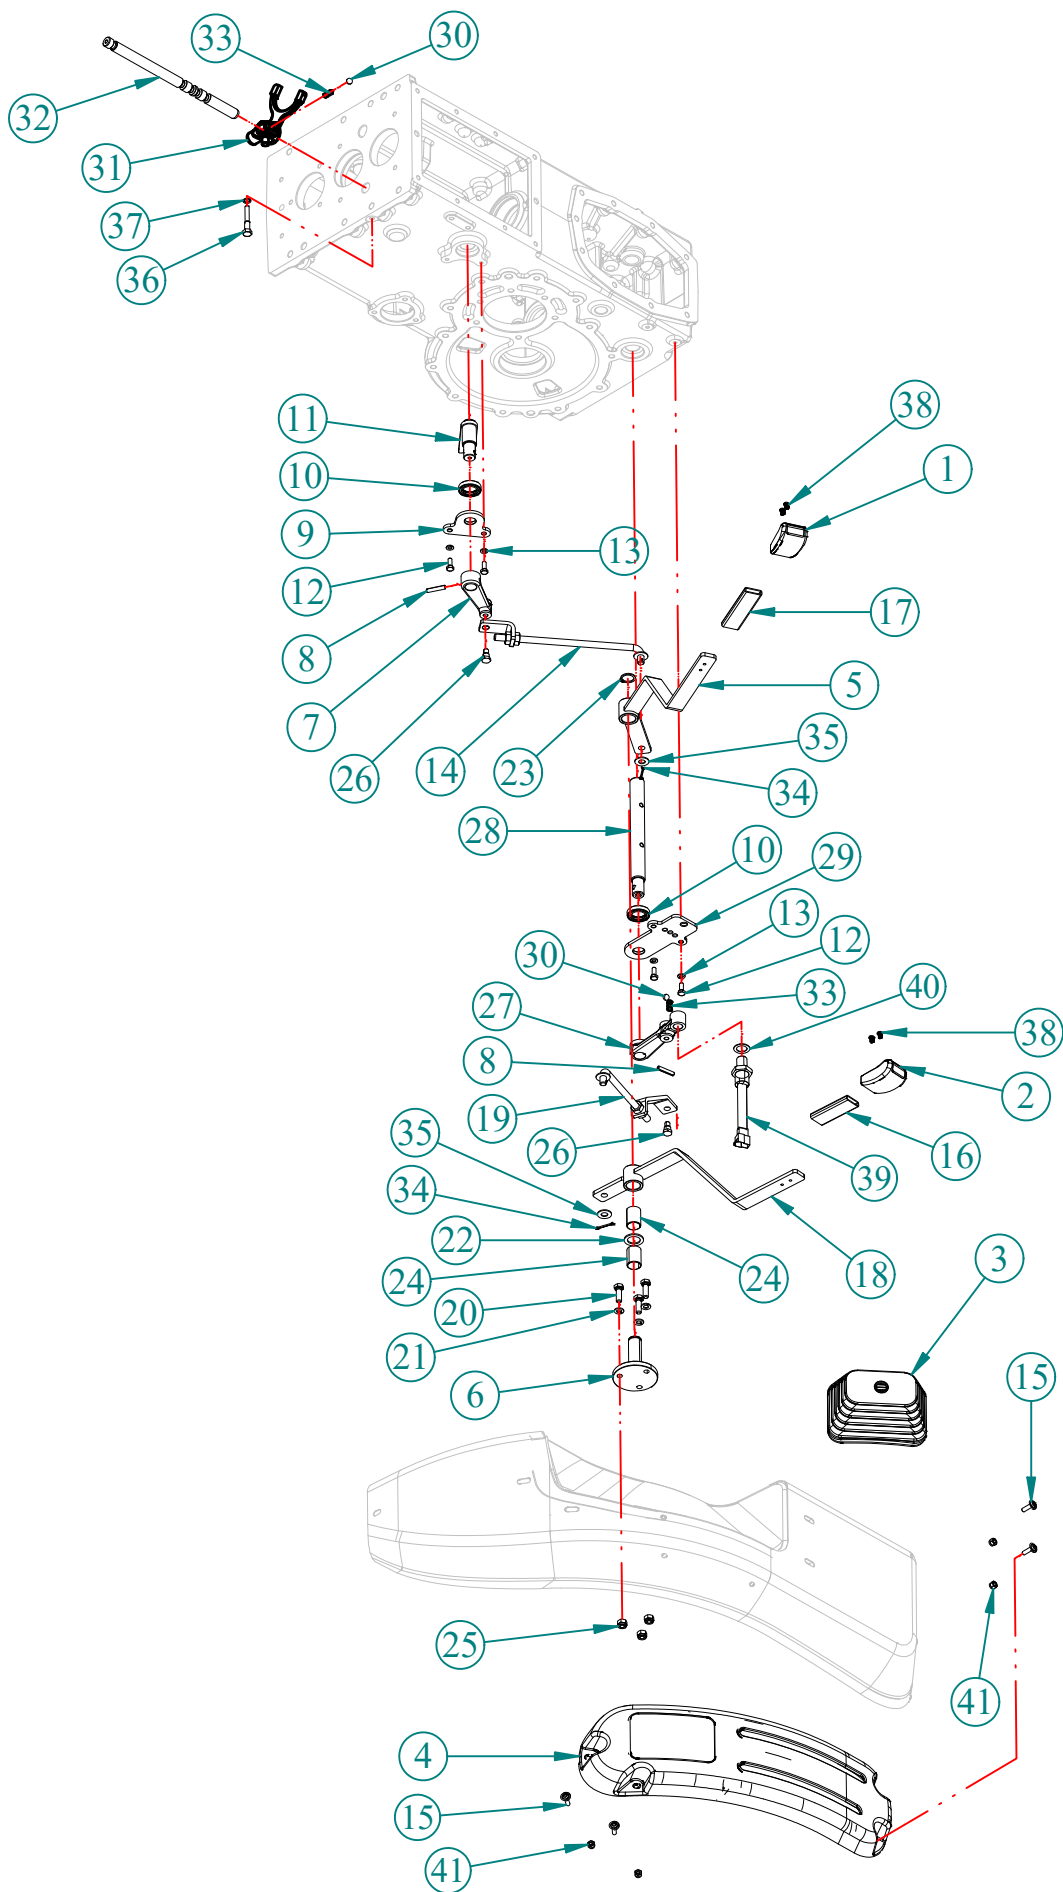

HML PTO LEVER ASSEMBLY
MODEL :- 263
ASSEMBLY NO. :-11309277

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11206963	KNOB H-M-L	1	
2	11207045	KNOB PTO	1	
3	11205428	RUBBER BOOT	1	
4	11202999	FENDER COVER LH	1	
5	11206959	LEVER HML	1	
6	11203110	LEVER, GUIDE	1	
7	11205257	SHIFTER, POSITION LEVER	1	
8	11502531	SLOTTED SPRING PIN Ø6X30	2	
9	11205264	PLATE, H-M-L LOCKING	1	
10	11505758	OIL SEAL Ø22xØ35x7	2	
11	11205921	SHIFTER H-M-L	1	
12	11500071	HEX. BOLT M6x15 (F.T.)8.8	4	
13	11500073	SPRING WASHER - 6 mm	4	
14	11206961	LINKAGE MOUNTING ROD HML	1	
15	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	4	
16	11204699	COVER PTO PLASTIC	1	
17	11204697	COVER H-M-L PLASTIC	1	
18	11206960	LEVER PTO	1	
19	11206962	LINKAGE MOUNTING ROD PTO	1	
20	11500051	HEX. BOLT M8 X 25 (F.T.)	3	
21	11500052	SPRING WASHER - 8mm	3	
22	11203206	PLAIN WASHER Ø20.3xØ30x2	1	
23	11503297	CIRCLIP, EXTERNAL Ø20x1.75	1	
24	11203195	BUSH, LEVER IGUS (Ø20 x Ø22 x 30)	2	
25	11500520	NYLOCK HEX NUT M8	3	
26	11205004	SPECIAL BOLT, SHIFTER LINKAGE	2	
27	11205923	SHIFTER, POSITION LEVER (PTO)	1	
28	11205255	SHAFT RAIL 2-SPEED PTO	1	
29	11205924	PLATE - PTO LOCKING	1	
30	11500089	BALL - Ø3/8"	2	
31	11205263	FORK H-M-L	1	
32	11205798	SHAFT FORK H-M-L	1	
33	11203109	SPRING L-15.6	2	
34	11500619	SPLIT PIN 3/32" x 1"	2	
35	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
36	11205922	SPECIAL BOLT RAIL SHAFT LOCKING	1	
37	11500112	COPPER WASHER Ø8XØ12X1	1	
38	11503131	PAN HEAD SCREW M5X8	4	
39	11402494	NEUTRAL SAFETY SWITCH	1	
40	11500427	COPPER WASHER Ø16.5xØ25x1	1	
41	11500947	NYLOCK NUT M6	4	

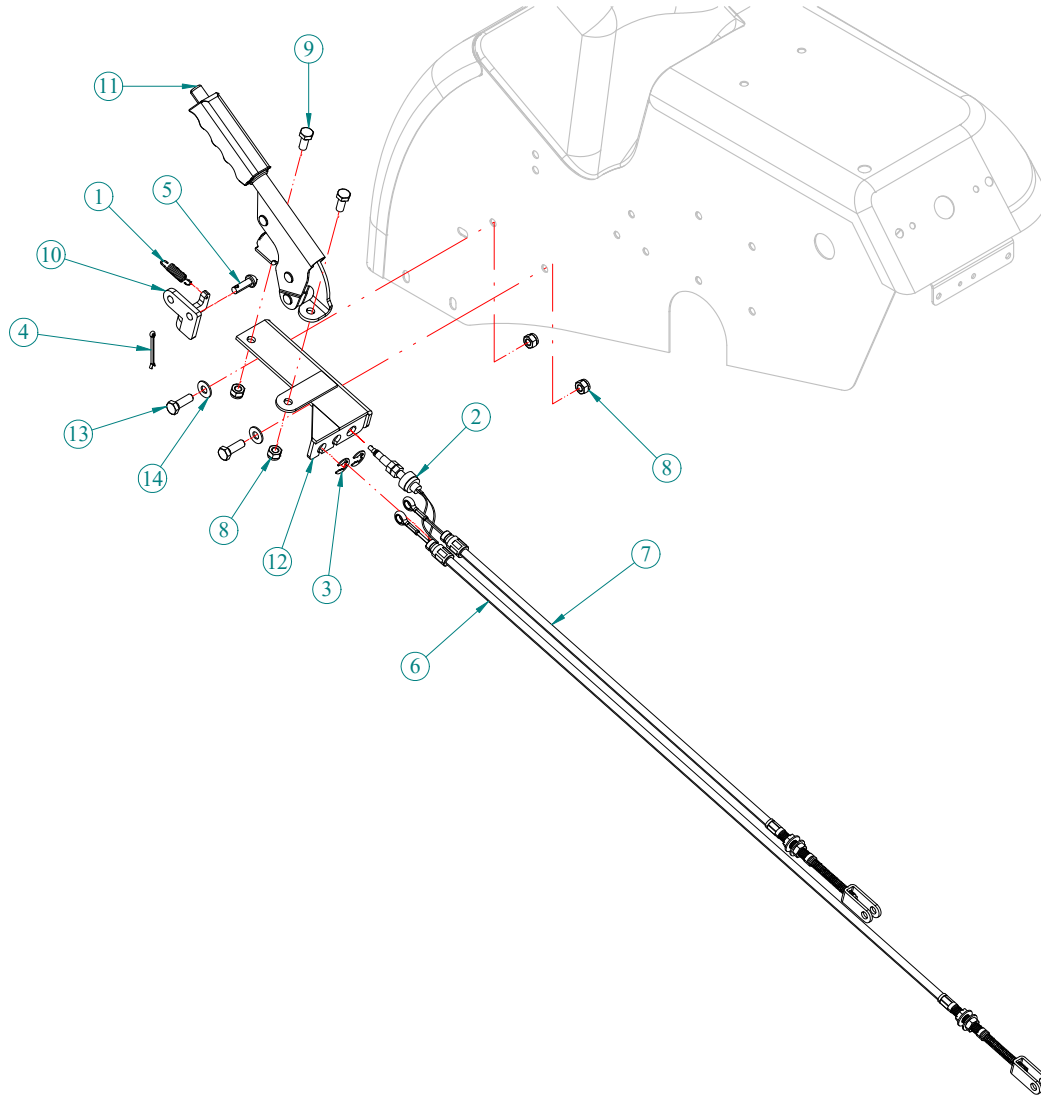


PARKING BRAKE ASSEMBLY

MODEL :- 263

ASSEMBLY NO. :- 11305584


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201530	SPRING ACCELERATOR LEVER	1	
2	11402078	ASSEMBLY BRAKE SWITCH	1	
3	11503026	EXTERNAL CIRCLIP ID 10	2	
4	11500357	SPLIT PIN 1/8" x 1.1/2"	1	
5	11200066	PIN CLUTCH	1	
6	11205277	CABLE HAND BRAKE BIG	1	
7	11205276	CABLE HAND BRAKE SMALL	1	
8	11500520	NYLOCK HEX NUT M8	4	
9	11500067	HEX. BOLT M8X20 (F.T)	2	
10	11205544	FLAP - PARKING BRAKE	1	
11	11402794	PARKING BRAKE	1	
12	11205393	BRACKET - HAND BRAKE	1	
13	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
14	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	

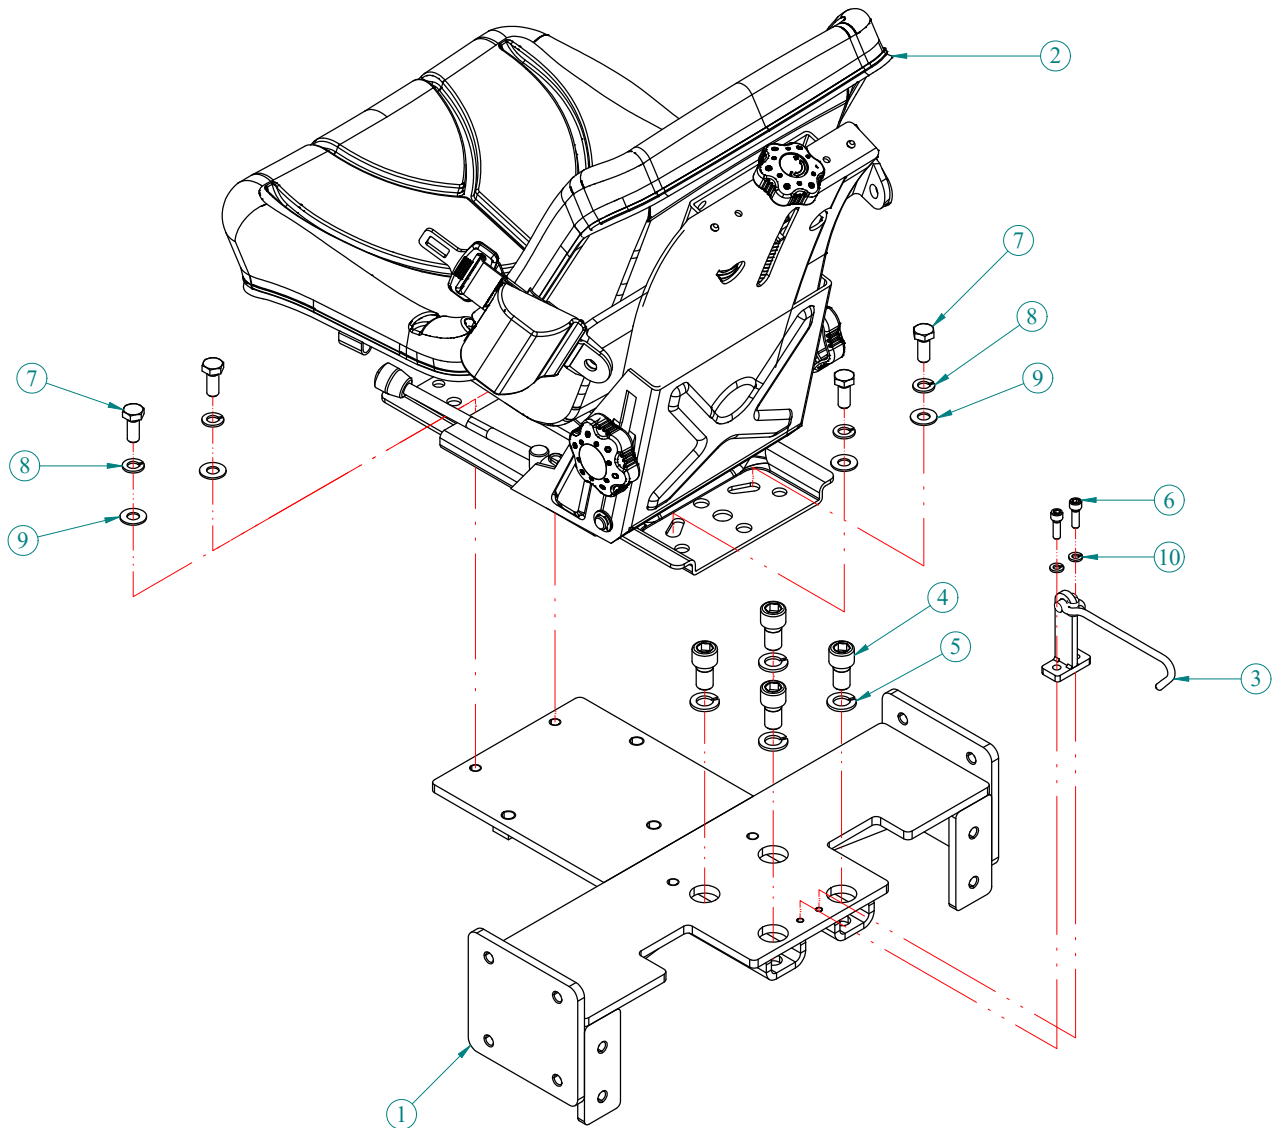

FENDER BRACKET & SEAT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11307695


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11204998	BRACKET FENDER MOUNTING (492)	1	
2	11402505	SEAT (ST GC05)	1	
3	11205622	TOP LINK HOLDER	1	
4	11505404	ALLEN BOLT M14x25 (F.T.)	4	
5	11501826	SPRING WASHER - 14mm	4	
6	11500881	ALLEN BOLT M6x20 (F.T.)	2	
7	11500156	HEX. BOLT M10X25 (F.T.)	4	
8	11500062	SPRING WASHER - 10mm	4	
9	11500078	PLAIN WASHER Ø10.5xØ22x1.5	4	
10	11500073	SPRING WASHER - 6 mm	2	

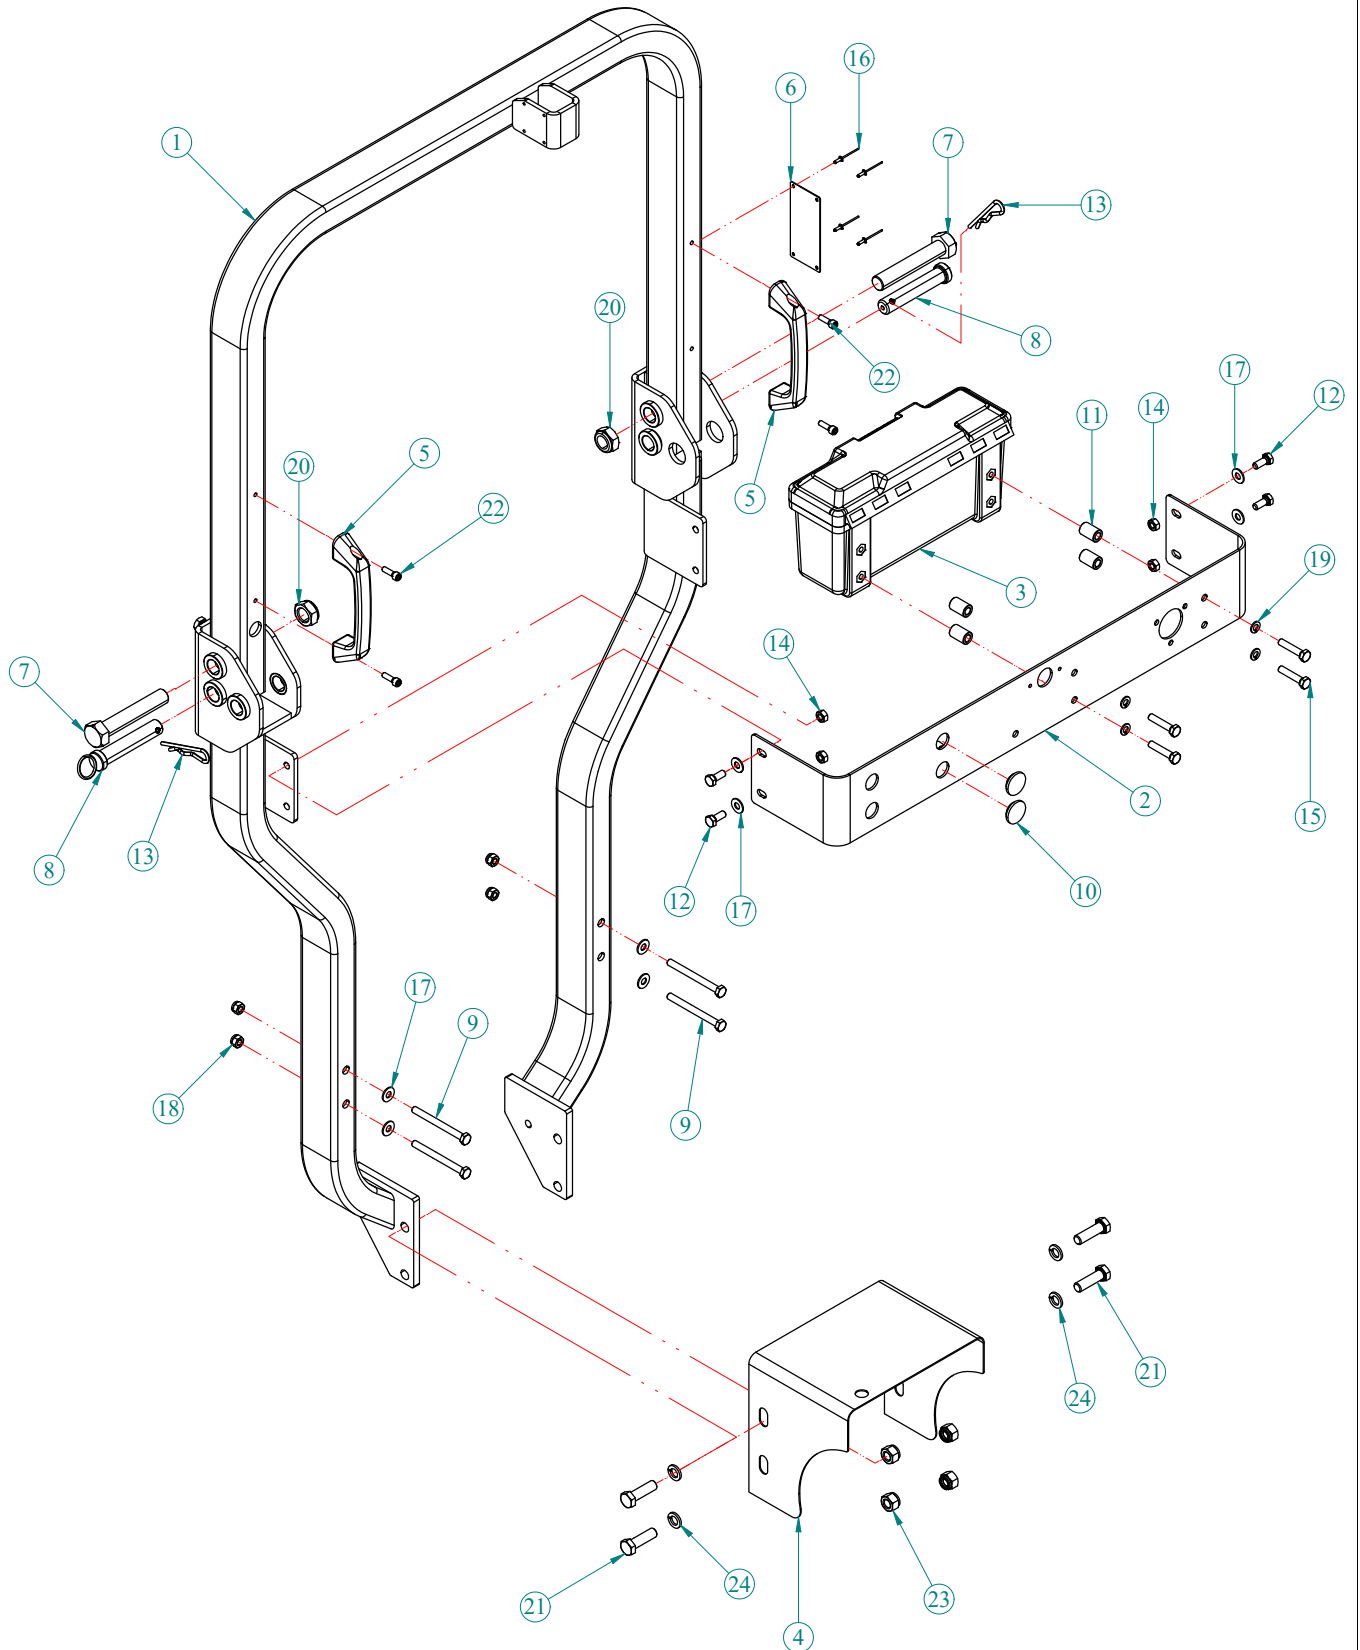

ROPS ASSEMBLY


MODEL :- 263
ASSEMBLY NO. :- 11305592

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11305017	ROPS (263)	1	
2	11204705	PLATE, QRC (273)	1	
3	11402998	TOOL BOX ASSEMBLY	1	
4	11205351	POWER TAKE OFF MASTER SHIELD	1	
5	11202086	HANDLE GRIP, FENDER	2	
6	11205298	IDENTIFICATION PLATE ROPS (00070U5S)	1	
7	11505106	SPECIAL BOLT - ROPS	2	
8	11202236	HITCH PIN, ROPS	2	
9	11505394	HEX. BOLT M8 X 85 (10.9)	4	
10	11202308	RUBBER SEAL BOTTOM, GUARD	2	
11	11205430	SPACER (Ø9xØ16x24)	4	
12	11500067	HEX. BOLT M8X20 (F.T)	4	
13	11202237	CLIP PIN, Ø4	2	
14	11500082	HEX NUT M8	4	
15	11500809	HEX. BOLT M8x40 (F.T.) 8.8	4	
16	11501460	BLIND ALLUMINIUM RIVET Ø0.125"x0.422"	4	
17	11501068	PLAIN WASHER Ø8.5XØ19X1.5	8	
18	11500520	NYLOCK HEX NUT M8	4	
19	11500052	SPRING WASHER - 8mm	4	
20	11500160	NYLOCK HEX. NUT 3/4" UNF (16 TPI)	2	
21	11501772	HEX. BOLT M12x40 (H.T.)- GRADE- 10.9	4	
22	11500881	ALLEN BOLT M6x20 (F.T.)	4	
23	11501024	NYLOCK HEX. NUT M12	4	
24	11500118	SPRING WASHER 12 mm	4	

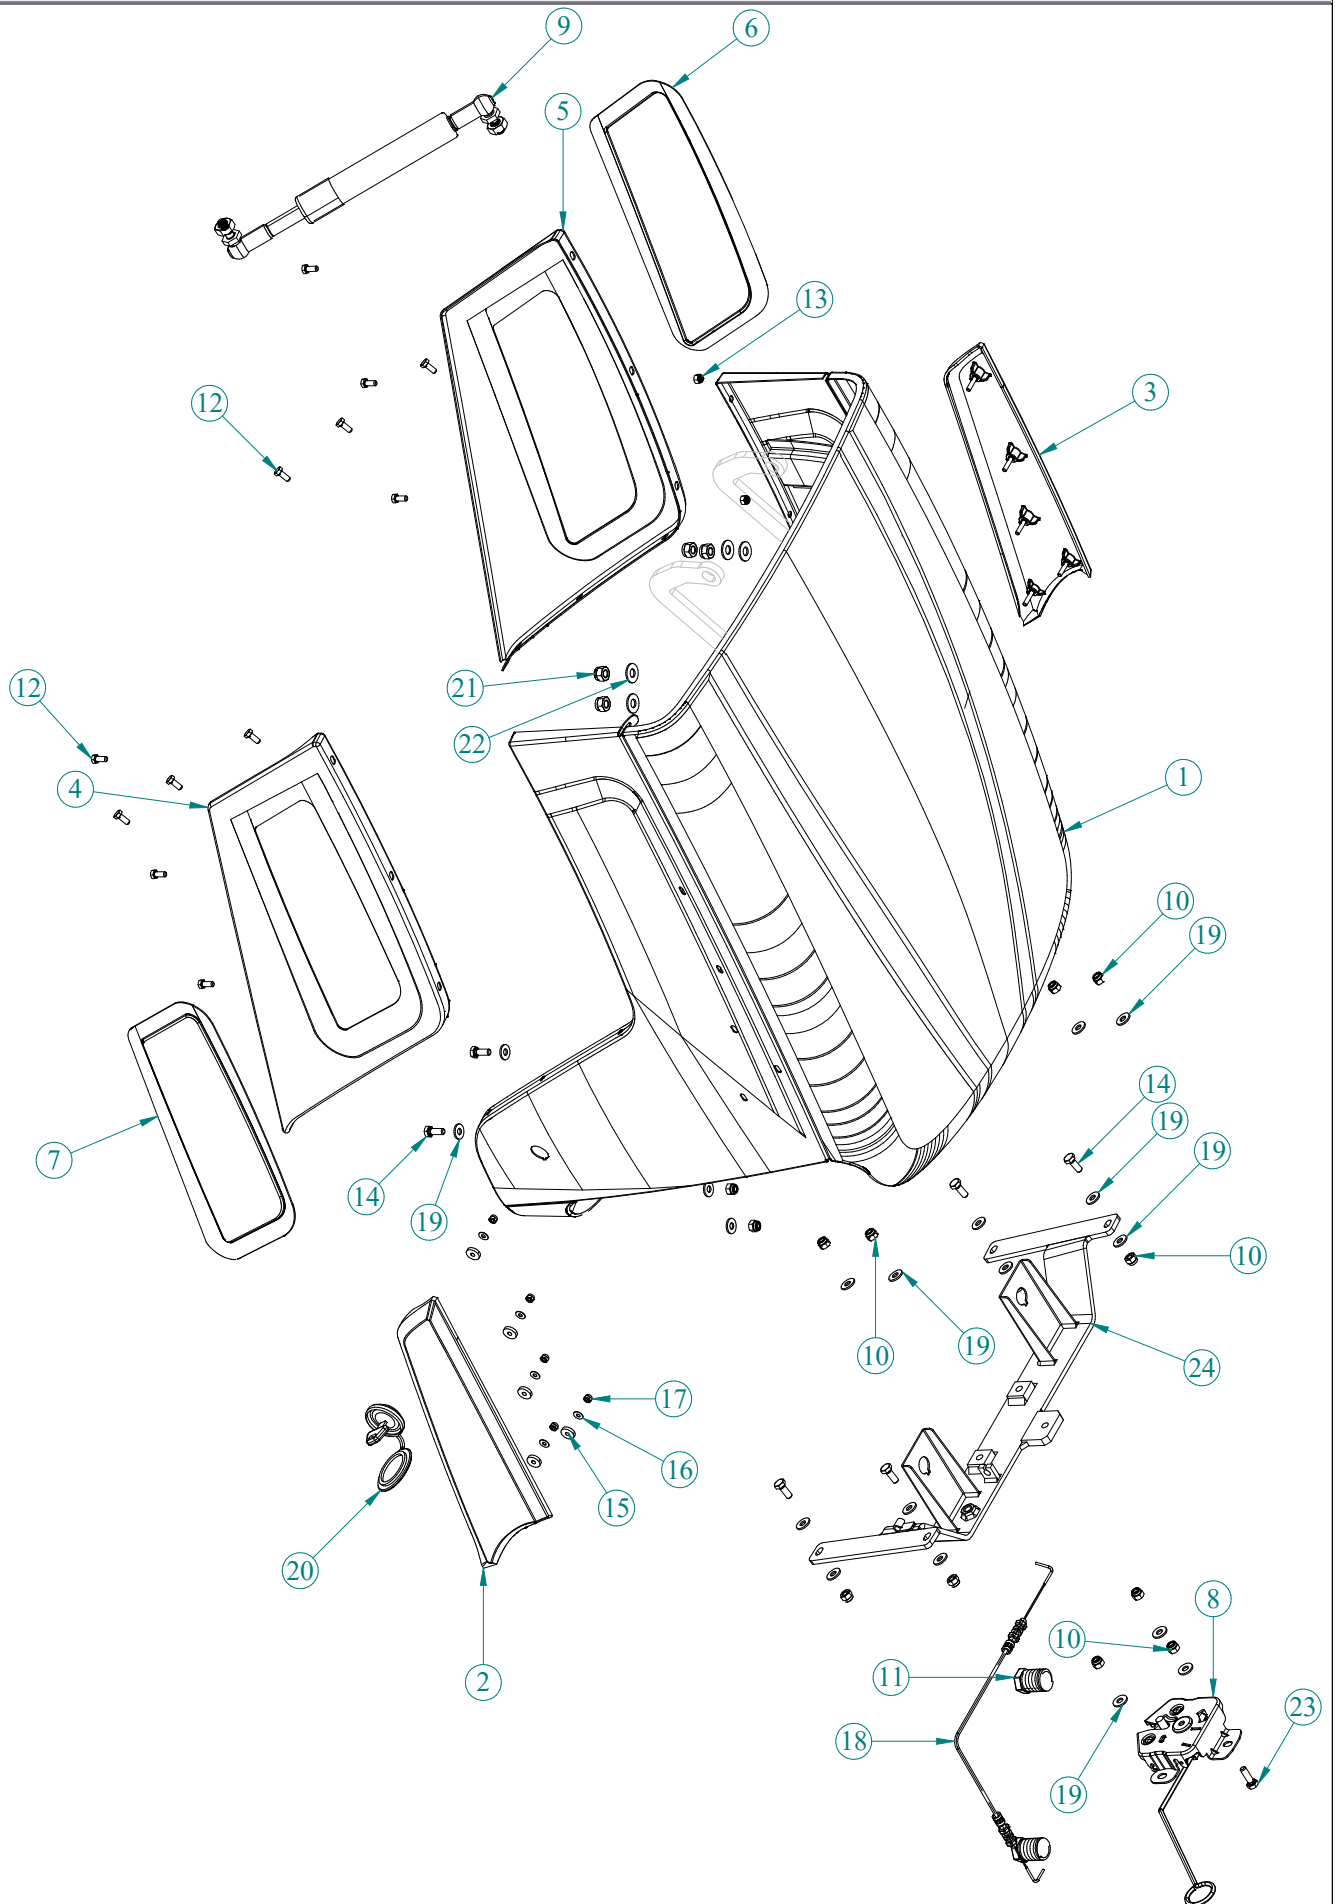


BONNET FRONT MESH ASSY 1
MODEL :- 263
ASSEMBLY NO. :- 11308554

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208636	BONNET 8G	1	
2	11205193	BRAND PANEL BONNET RH	1	
3	11205192	BRAND PANEL BONNET LH	1	
4	11206057	BONNET SIDE RH	1	
5	11206056	BONNET SIDE LH	1	
6	11206058	BONNET SIDE GRILL LH	1	
7	11206059	BONNET SIDE GRILL RH	1	
8	11405011	LATCH COMP HOOD	1	
9	11203214	AUTO LIFT GAS SPRINGS	1	
10	11500947	NYLOCK NUT M6	13	
11	11202147	RUBBER GROMET BONNET TOP	2	
12	11501034	HEX. BOLT M5x12 (F.T.) 8.8	12	
13	11500931	NYLOCK HEX. NUT M5	12	
14	11500071	HEX. BOLT M6x15 (F.T.)8.8	6	
15	11505200	RUBBER WASHER Ø4.5xØ14x3	10	
16	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	10	
17	11505137	NYLOCK HEX. NUT M4	10	
18	11405012	CABLE LATCH COMP HOOD	1	
19	11501015	PLAIN WASHER Ø6.5xØ15x1.5	19	
20	11404800	LOCK BONNET WITH KEY (273)	1	
21	11500520	NYLOCK HEX NUT M8	4	
22	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
23	11500426	HEX. BOLT M6x20 (F.T)8.8	1	
24	11204996	BRACKET LOCK MOUTING	1	

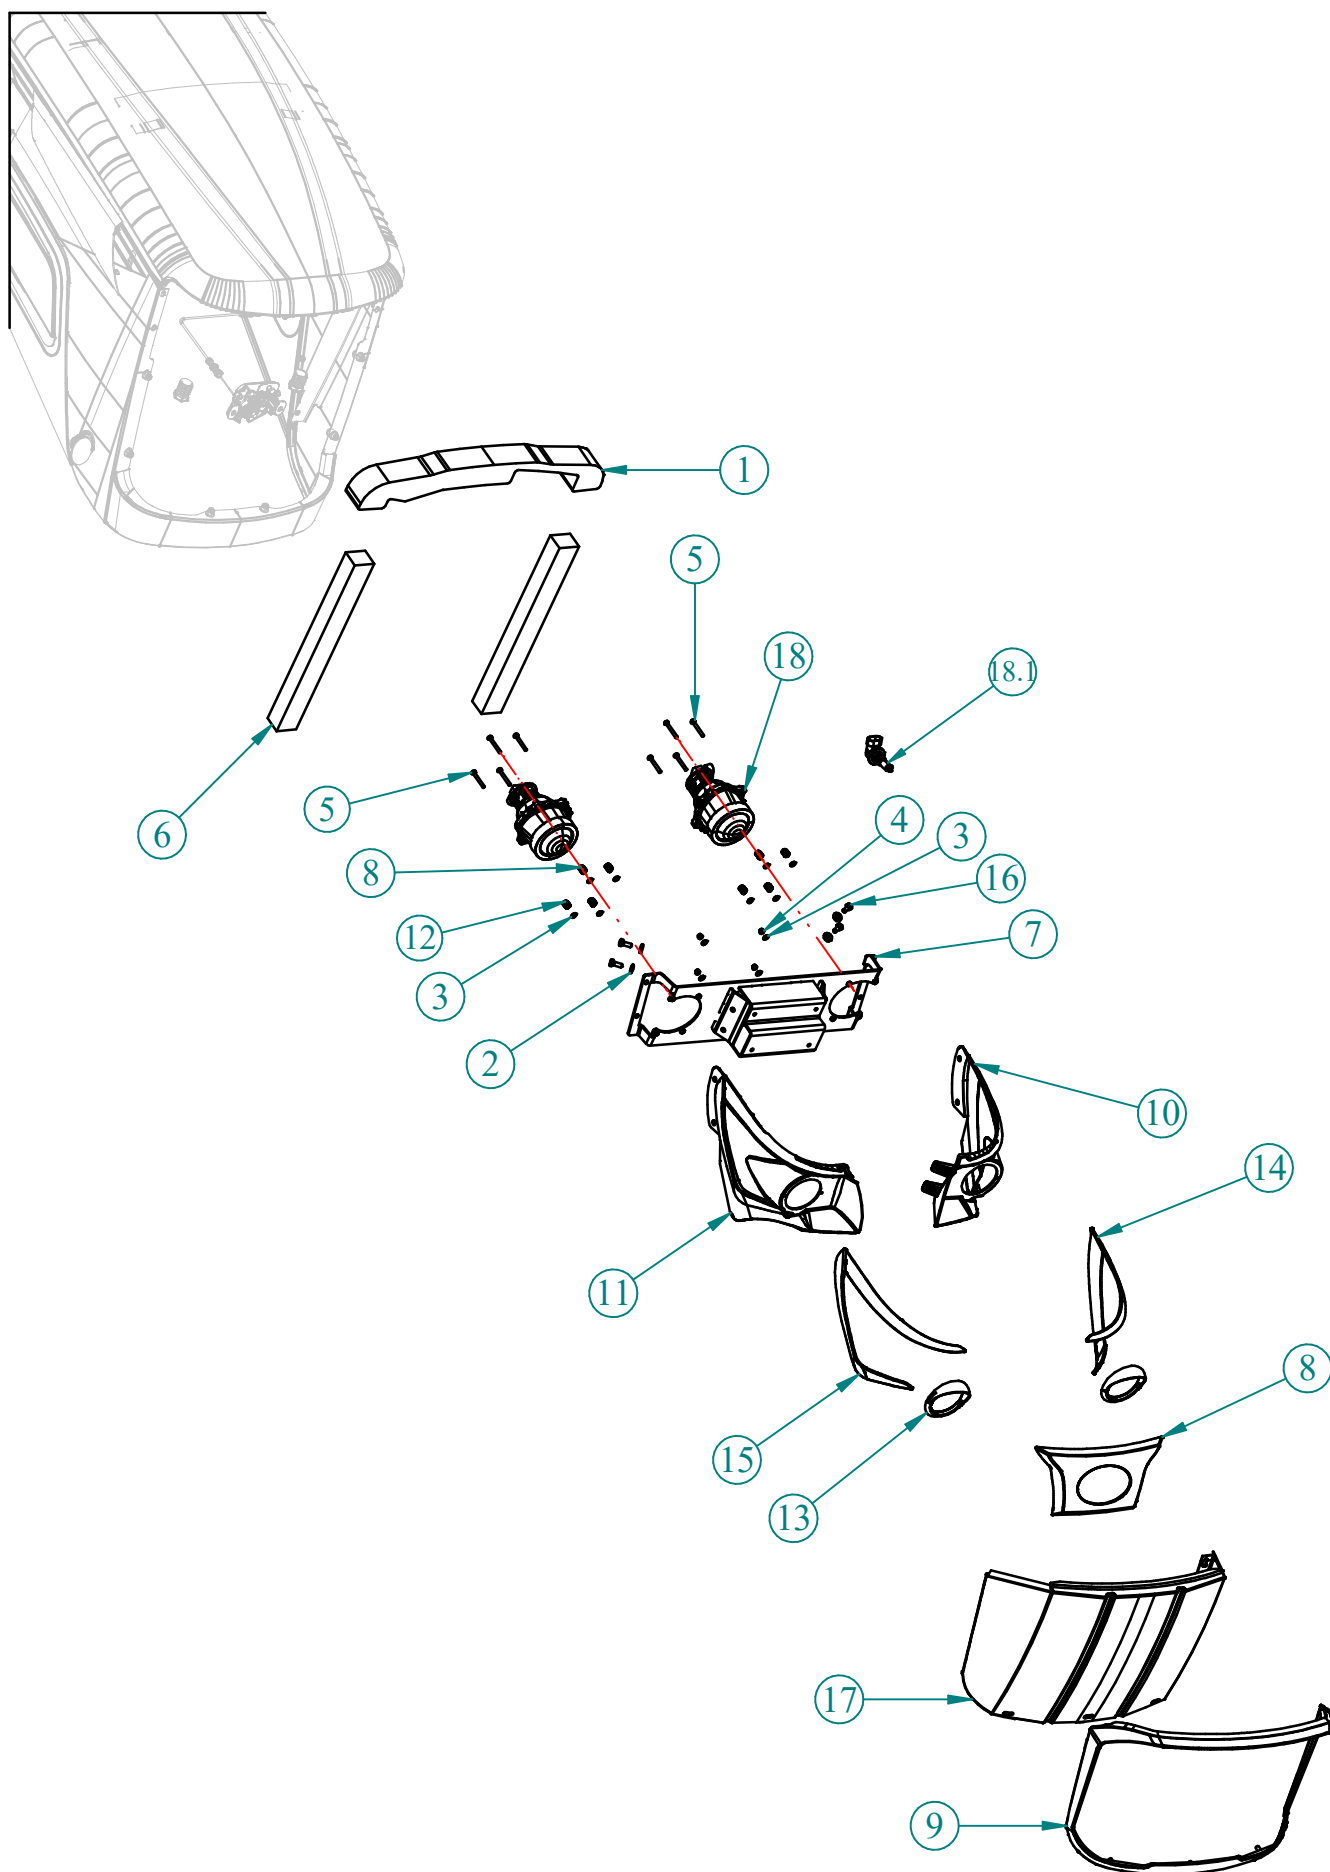

BONNET FRONT MESH ASSY 2


MODEL :- 263			ASSEMBLY NO.	
S. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205110	FOAM RADIATOR TOP SEALING	1	
2	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	
3	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	12	
4	11505137	NYLOCK HEX. NUT M4	4	
5	11505201	SCREW M4 x 35	8	
6	11205112	FOAM RADIATOR SIDE SEALING (LH & RH)	2	
7	11205185	BRACKET HEAD LIGHT ASSEMBLY	1	
8	11205186	LOGO PANEL	1	
9	11205188	BORDER FRONT GRILL	1	
10	11205190	HEAD LAMP COVER LH	1	
11	11205191	HEAD LAMP COVER RH	1	
12	11205199	SPRING HEAD LIGHT	8	
13	11205267	RING HEAD LAMP COVER	2	
14	11205396	BORDER HEAD LAMP COVER LH	1	
15	11205397	BORDER HEAD LAMP COVER RH	1	
16	11500071	HEX. BOLT M6x15 (F.T.)8.8	4	
17	11208631	FRONT GRILL 8G (283 ONLY)	1	
18	11405010	M60 LOW BEAM	2	
18.1	11405372	BULB HB3 12V 60W	2	

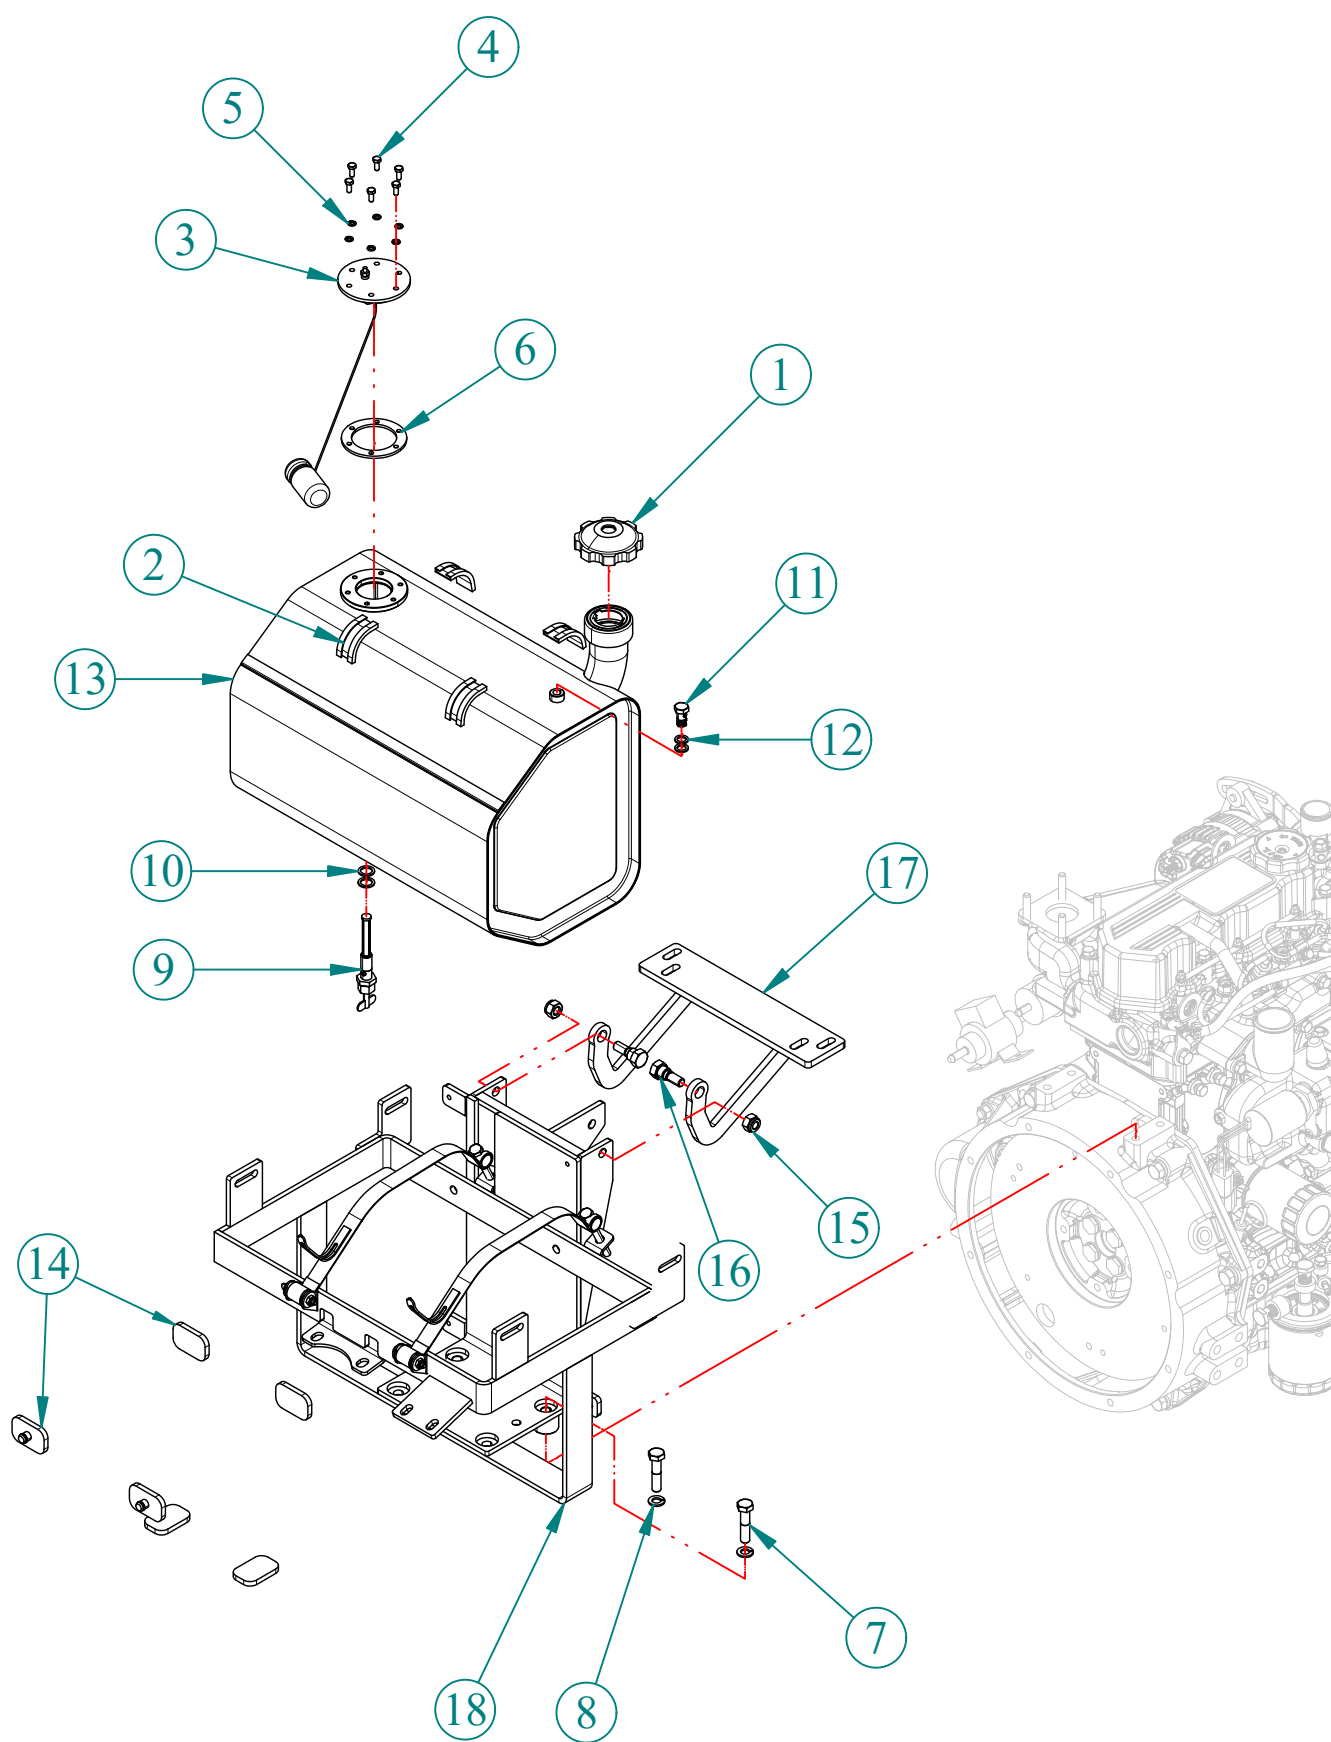

FUEL TANK ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :-11305574


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405503	FUEL TANK CAP 239	1	
2	11200857	RUBBER PIECES FOR FUEL TANK CLAMP	4	
3	11401032	FUEL TANK UNIT	1	
4	11501034	HEX. BOLT M5x12 (F.T.) 8.8	6	
5	11501207	SPRING WASHER 5 mm	6	
6	11201033	GASKET FUEL GAUGE	1	
7	11505035	HEX.BOLT 10x45x1.25P(H.T)	2	
8	11500062	SPRING WASHER - 10mm	2	
9	11201854	COCK FUEL (WITH FILTER)	1	
10	11500783	COPPER WASHER Ø13xØ18x1.5	2	
11	11501846	BANJO BOLT M10	1	
12	11500654	COPPER WASHER 10mm (15x10x1.5)	2	
13	11205366	FUEL TANK (239)	1	
14	11204845	RUBBER PAD, FUEL TANK CAGE	6	
15	11500676	NYLOCK NUT M10	2	
16	11204757	SPECIAL BOLT, HINGE MOUTING	2	
17	11205294	HINGE, BONNET	1	
18	11205385	CAGE, FUEL TANK	1	

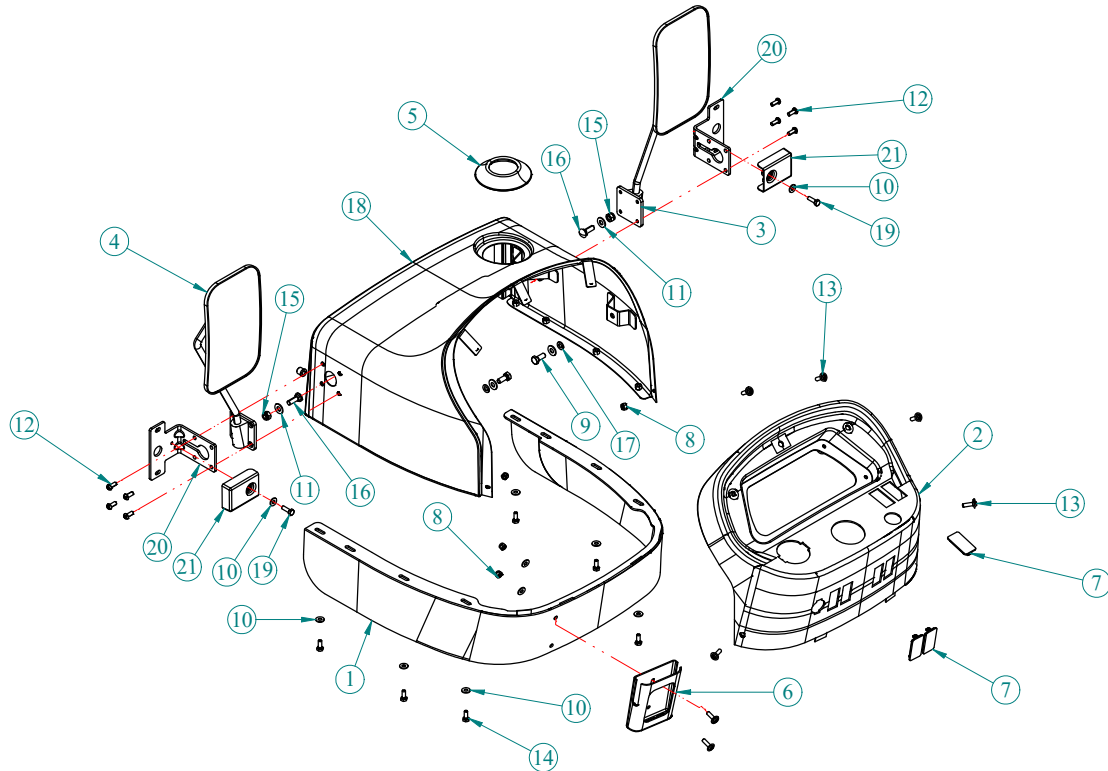

DASH BOARD ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11308345


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205127	SKIRT PANEL LONG	1	
2	11205126	INSTRUMENT PANEL	1	
3	11201979	MIRROR ASSEMBLY, RH	1	
4	11202219	MIRROR ASSEMBLY, LH	1	
5	11205665	RUBBER COVER FUEL TANK	1	
6	11201997	MOBILE POCKET	1	
7	11405027	DUMMY SWITCH PLUG	3	
8	11500947	NYLOCK NUT M6	4	
9	11500067	HEX. BOLT M8X20 (F.T)	2	
10	11501015	PLAIN WASHER Ø6.5xØ15x1.5	10	
11	11501068	PLAIN WASHER Ø8.5XØ19X1.5	4	
12	11502491	SCREW M6x15	8	
13	11502174	M6 X 20 ROUND HEAD SCREW WITH COLLAR	7	
14	11500071	HEX. BOLT M6x15 (F.T.)8.8	6	
15	11500520	NYLOCK HEX NUT M8	2	
16	11505009	CARRIAGE BOLT M8X1.25	2	
17	11500052	SPRING WASHER - 8mm	2	
18	11205445	DASHBOARD 263	1	
19	11500426	HEX. BOLT M6x20 (F.T)8.8	2	
20	11207055	BRACKET FRONT LIGHT	2	
21	11207056	COVER PARKING LIGHT	2	

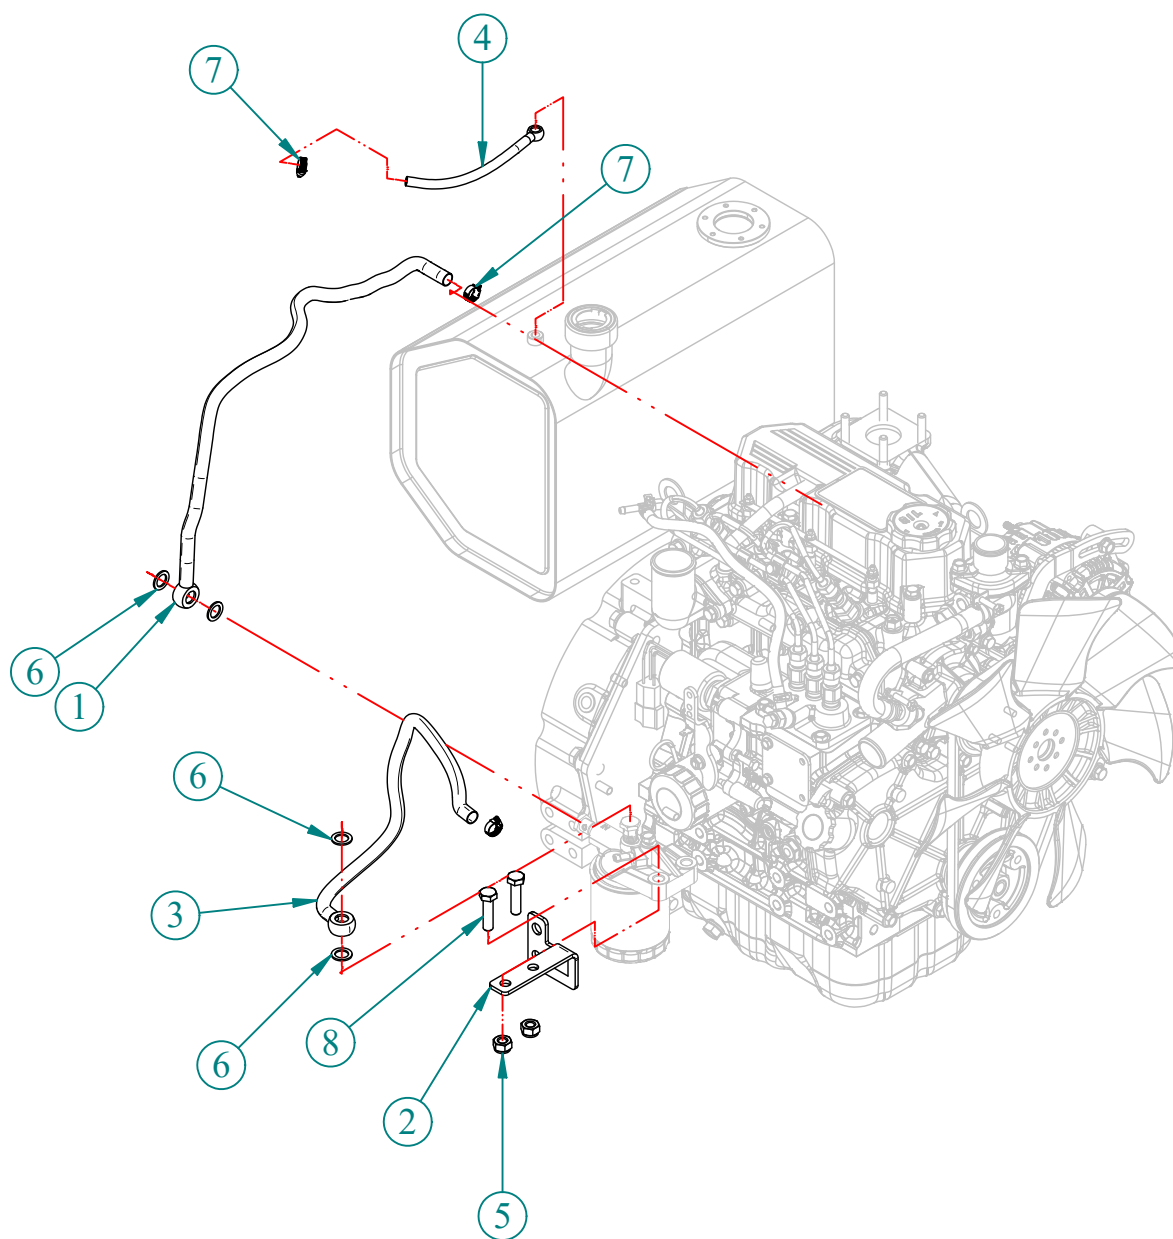

FUEL PUMP PIPE 1

MODEL :- 263
ASSEMBLY
NO. :-11305573


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202497	PIPE FUEL (725L)	1	
2	11202435	BRACKET, FUEL FILTER (273)	1	
3	11203021	PIPE FUEL FILTER TO FIP (273)	1	
4	11202764	OVERFLOW PIPE (410L)	1	
5	11500676	NYLOCK NUT M10	2	
6	11500462	COPPER WASHER Ø14xØ21x1.5	4	
7	11201848	CLAMP OVER FLOW PIPE	3	
8	11501863	HEX. BOLT M10X40 (F.T.)10.9	2	

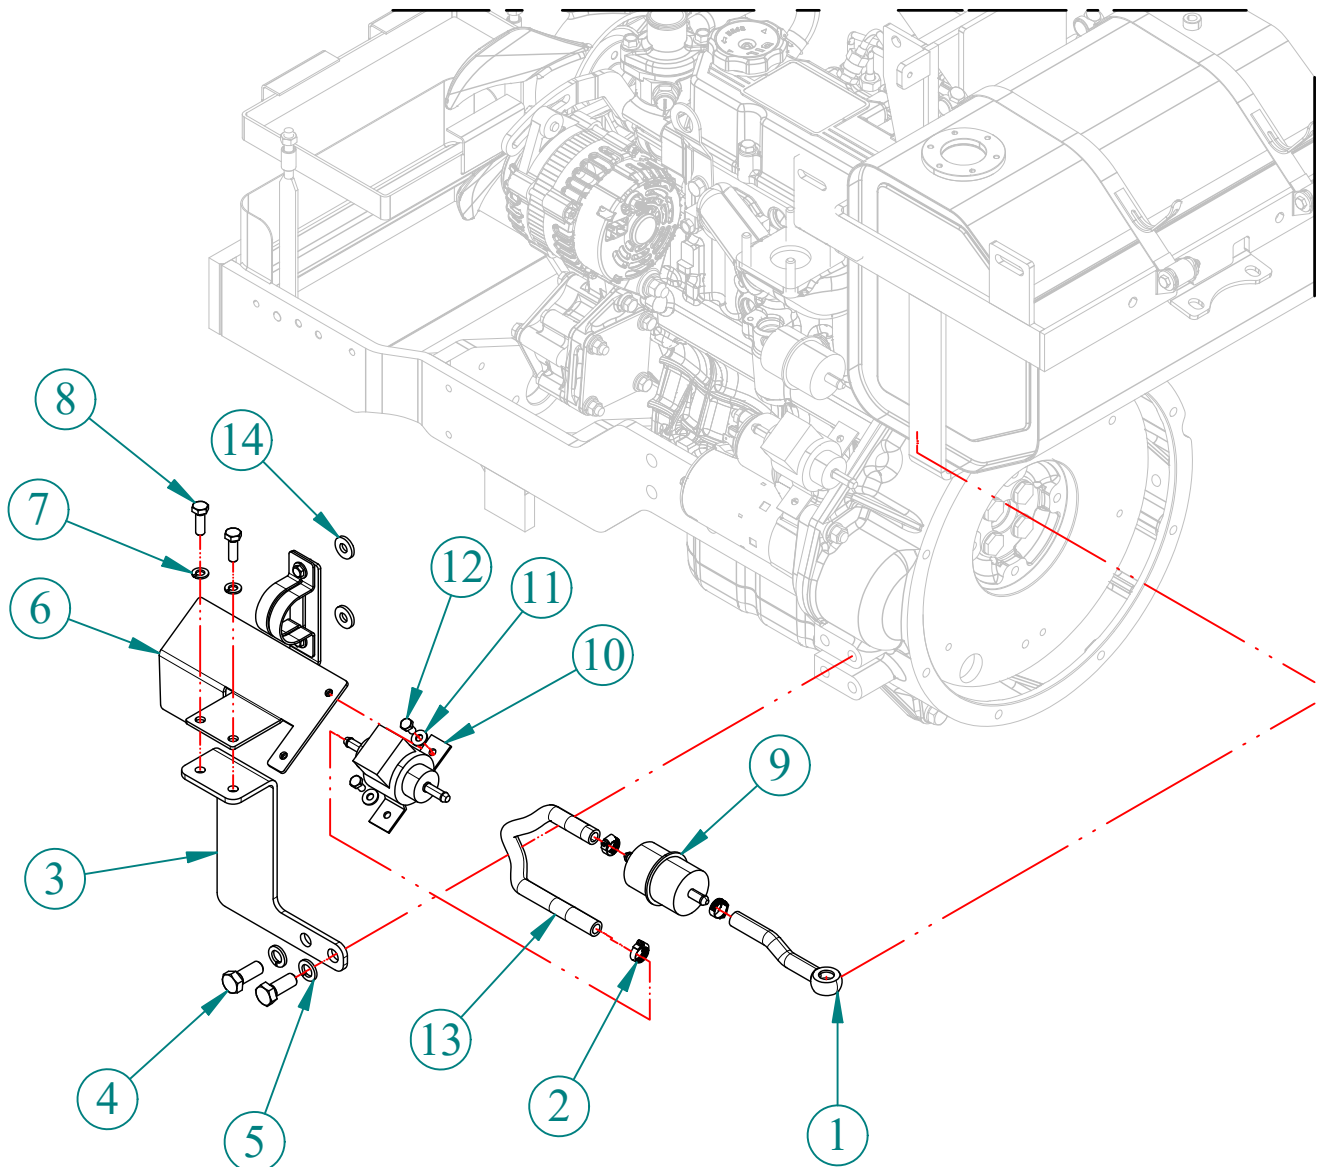

FUEL PUMP PIPE 2

MODEL :- 263
ASSEMBLY NO. :-11305572

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205163	PIPE, FUEL TANK TO PRE FILTER (115L)	1	
2	11201848	CLAMP OVER FLOW PIPE	3	
3	11205157	BRACKET FILTER MOUNTING	1	
4	11505319	HEX.BOLT M10X25X1.25P	2	
5	11500118	SPRING WASHER 12 mm	2	
6	11205287	BRACKET, FUEL FEED PUMP	1	
7	11500052	SPRING WASHER - 8mm	2	
8	11500051	HEX. BOLT M8 X 25 (F.T.)	2	
9	39204421	PRE FILTER	1	
10	39205109	FUEL PUMP ASSY	1	
11	11501015	PLAIN WASHER Ø6.5xØ15x1.5	2	
12	11500484	HEX. BOLT M6 X 12 (F.T.)	2	
13	11205162	PIPE,FUEL PRE FILTER TO FEED PUMP (200 L)	1	
14	11201535	RUBBER WAHSER Ø9xØ22x3.5	2	

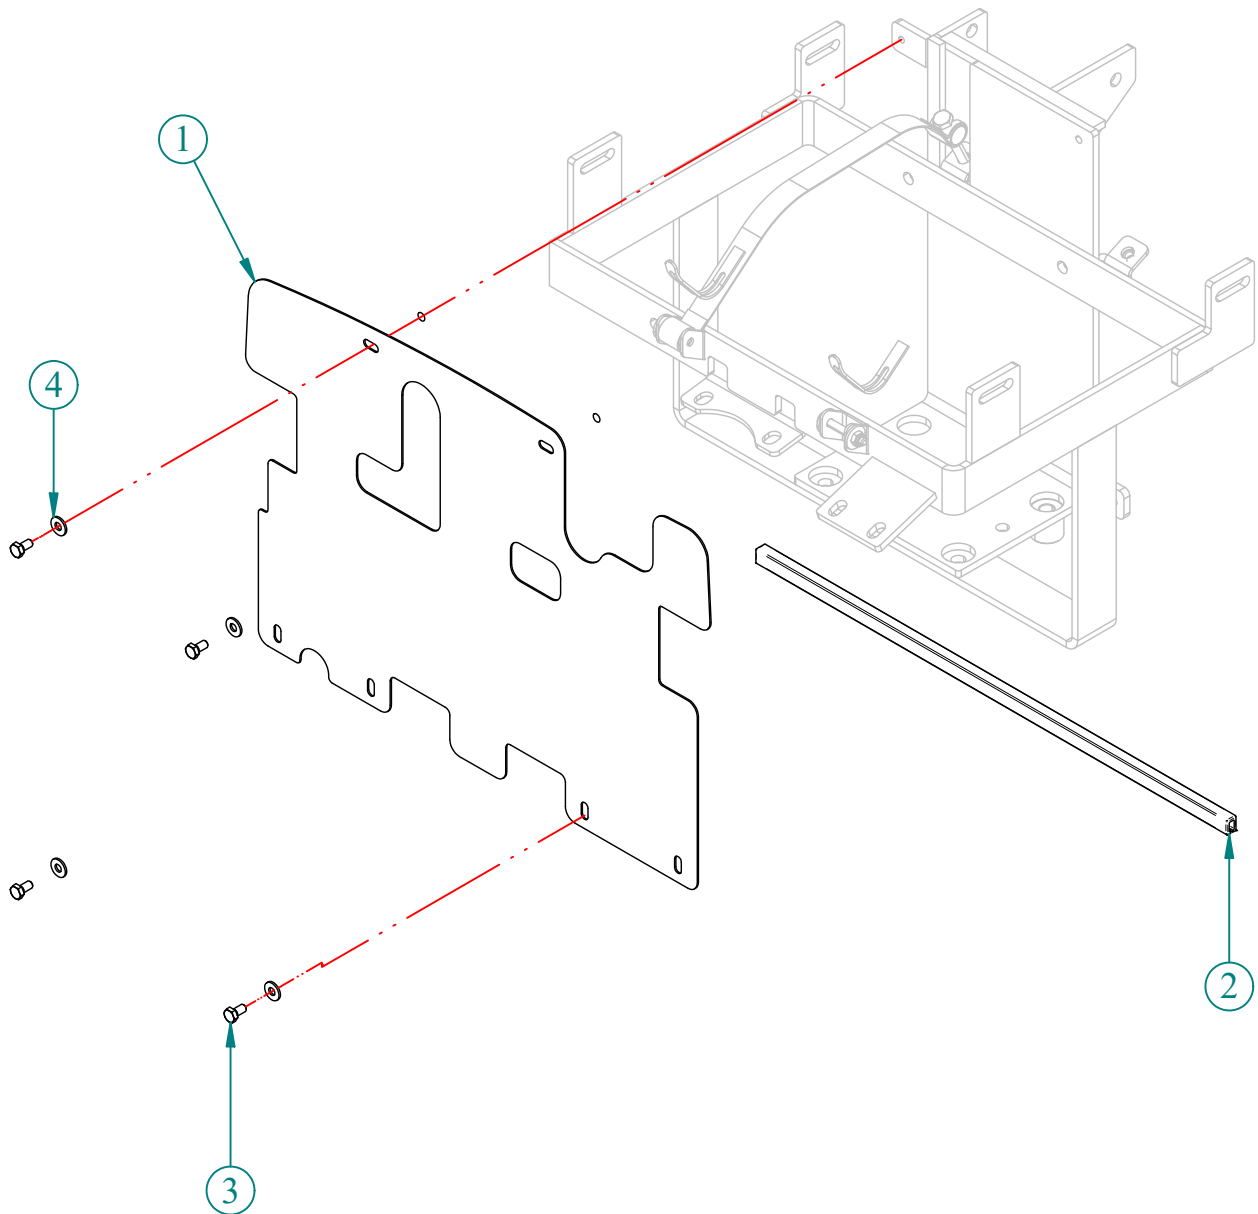


HEAT GUARD SEALING

MODEL :- 263


ASSEMBLY NO. :-11305576

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205409	SEALING PLATE	1	
2	11205675	RUBBER GRIP CAGE	1	
3	11500484	HEX. BOLT M6 X 12 (F.T.)	4	
4	11501015	PLAIN WASHER Ø6.5xØ15x1.5	4	

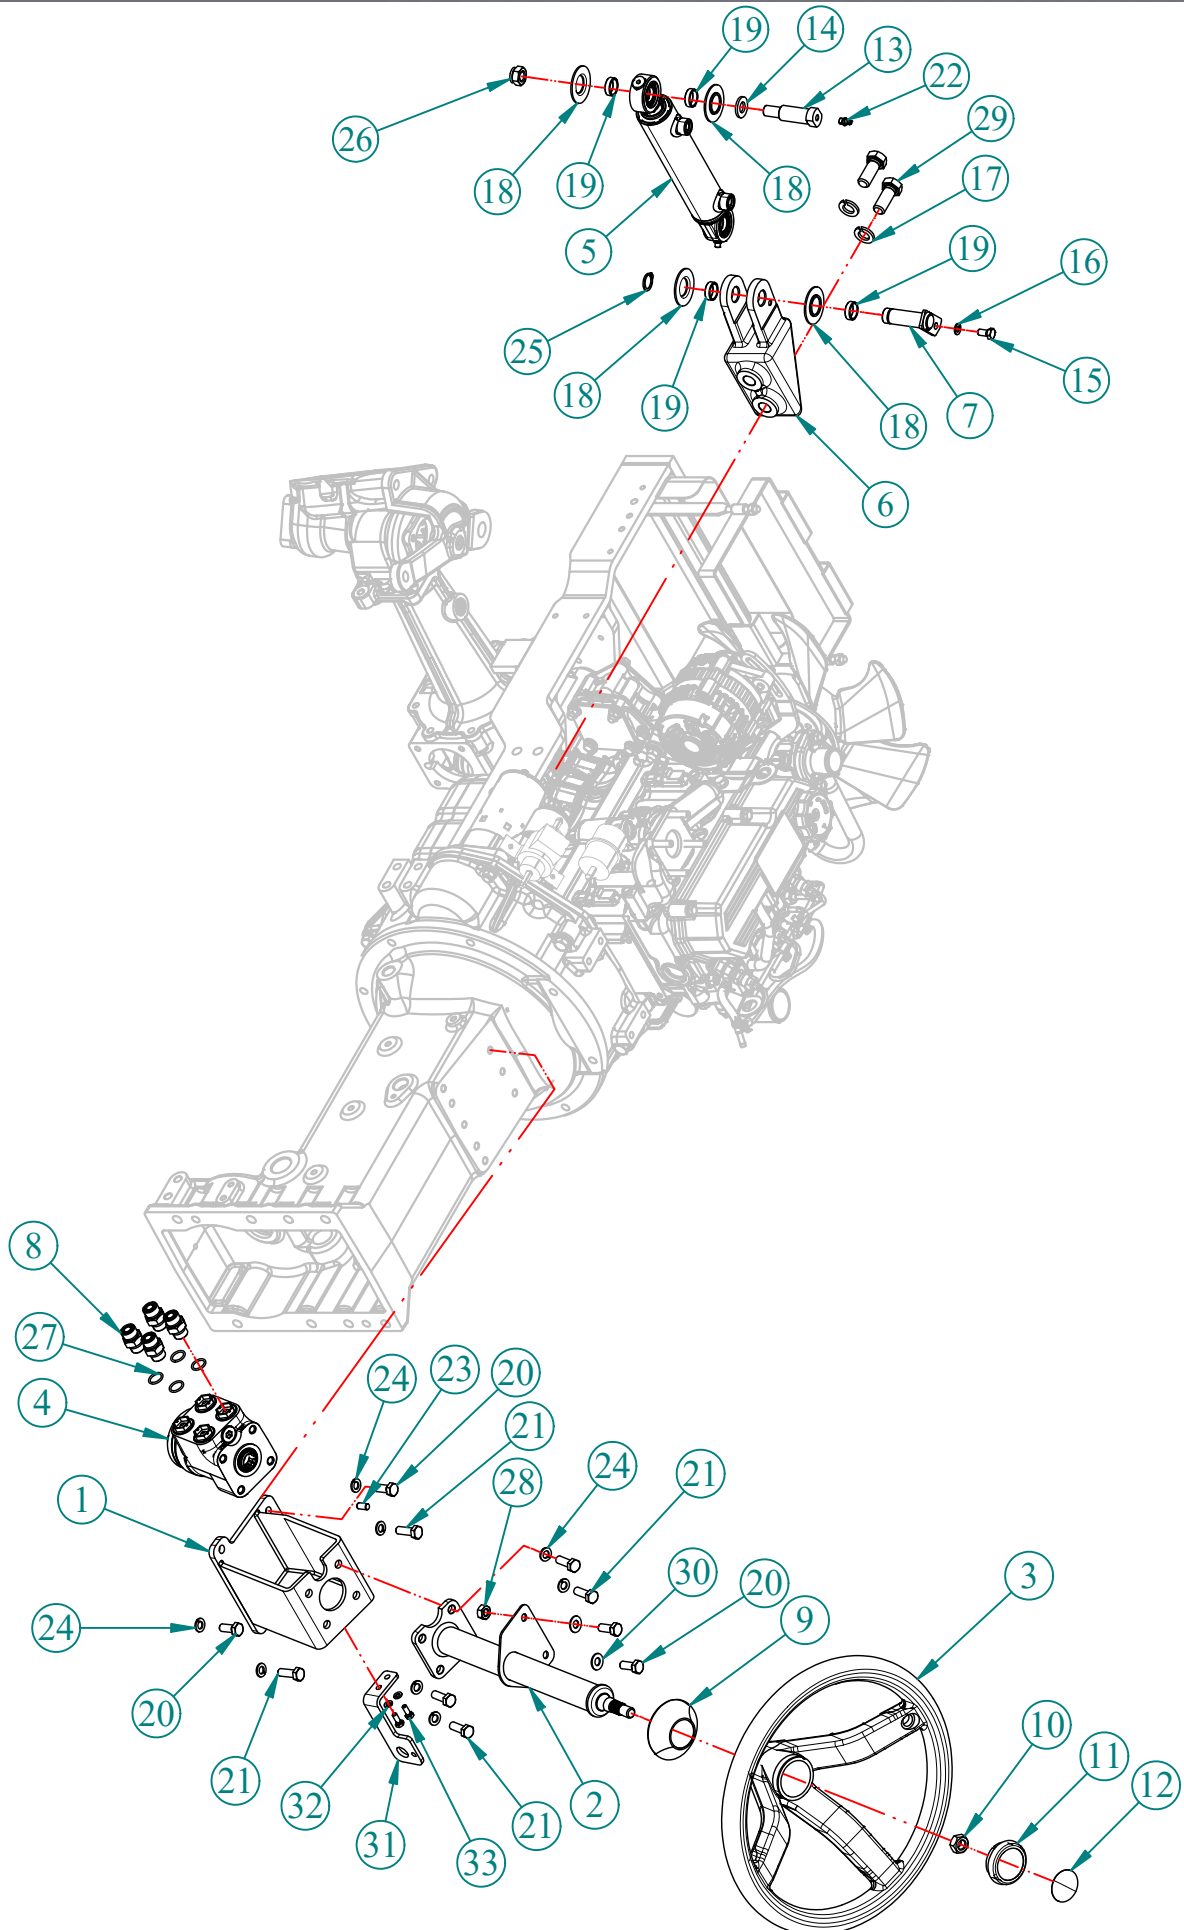

POWER STEERING ASSY
MODEL :- 263
ASSEMBLY NO. :-11308556

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205090	BRACKET HSU MTG.	1	
2	11205091	STEERING COLUMN ASSY.	1	
3	11407730	STEERING CONTROL WHEEL	1	
4	11404900	HYDROSTATIC STEERING UNIT	1	
5	11404902	STEERING CYLINDER	1	
6	11205086	CYLINDER MOUNTING BRACKET	1	
7	11205093	LOCKING PIN	1	
8	11205326	NIPPLE 3/4" UNF x 13/16" UN	4	
9	11200610	RUBBER COVER, STEERING	1	
10	11501822	NUT M14 X 1.5 P	1	
11	11201484	CAP STEERING CONTROL WHEEL	1	
12	11201737	STICKER CAP STEERING WHEEL	1	
13	11205098	PIN DIA-Ø20	1	
14	11205097	SPACER (Ø14.5XØ28X3)	1	
15	11500076	HEX BOLT M8 x 16	1	
16	11500052	SPRING WASHER - 8mm	1	
17	21504529	SPRING WASHER 16mm	2	
18	11205095	RUBBER PAD FOR SPACER	4	
19	11205096	SPACER CYLINDER	4	
20	11500156	HEX. BOLT M10X25 (F.T.)	4	
21	11504704	HEX BOLT M10x30 (F.T) [10.9]	6	
22	11502088	GREASE NIPPLE M8x1	1	
23	11200119	PIN, DOWEL Ø8 X 16	1	
24	11500062	SPRING WASHER - 10mm	8	
25	11503297	CIRCLIP,EXTERNAL Ø20x1.75	1	
26	11505318	NYLOCK HEX. NUT M14 X 1.5	1	
27	11505717	O-RING Ø16.36 X Ø2.21	4	
28	11500024	HEX NUT M10	2	
29	11505099	HEX BOLT M16X1.5X45_10.9	2	
30	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
31	11207751	BRACKET BATTERY CUT-OFF SWITCH (LF)	1	
32	11500073	SPRING WASHER - 6 mm	2	
33	11500071	HEX. BOLT M6x15 (F.T.)8.8	2	

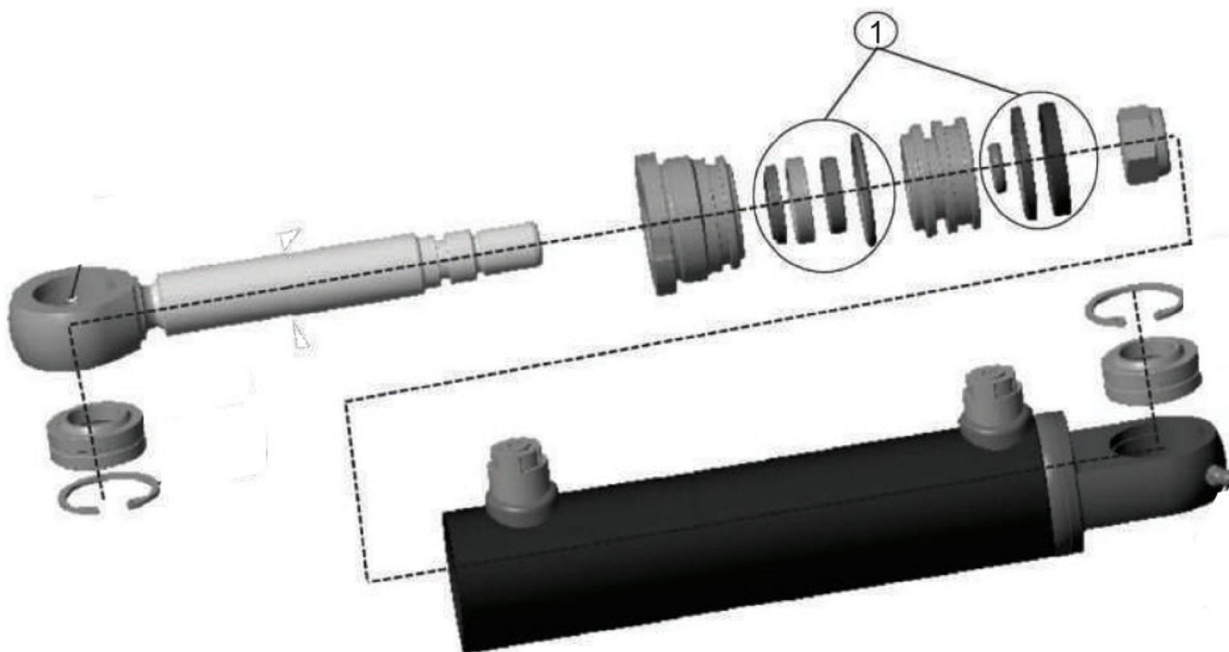


STEERING CYLINDER ASSEMBLY

MODEL :- 263

ASSEMBLY NO.:-11305618


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405610	SEAL KIT	1	

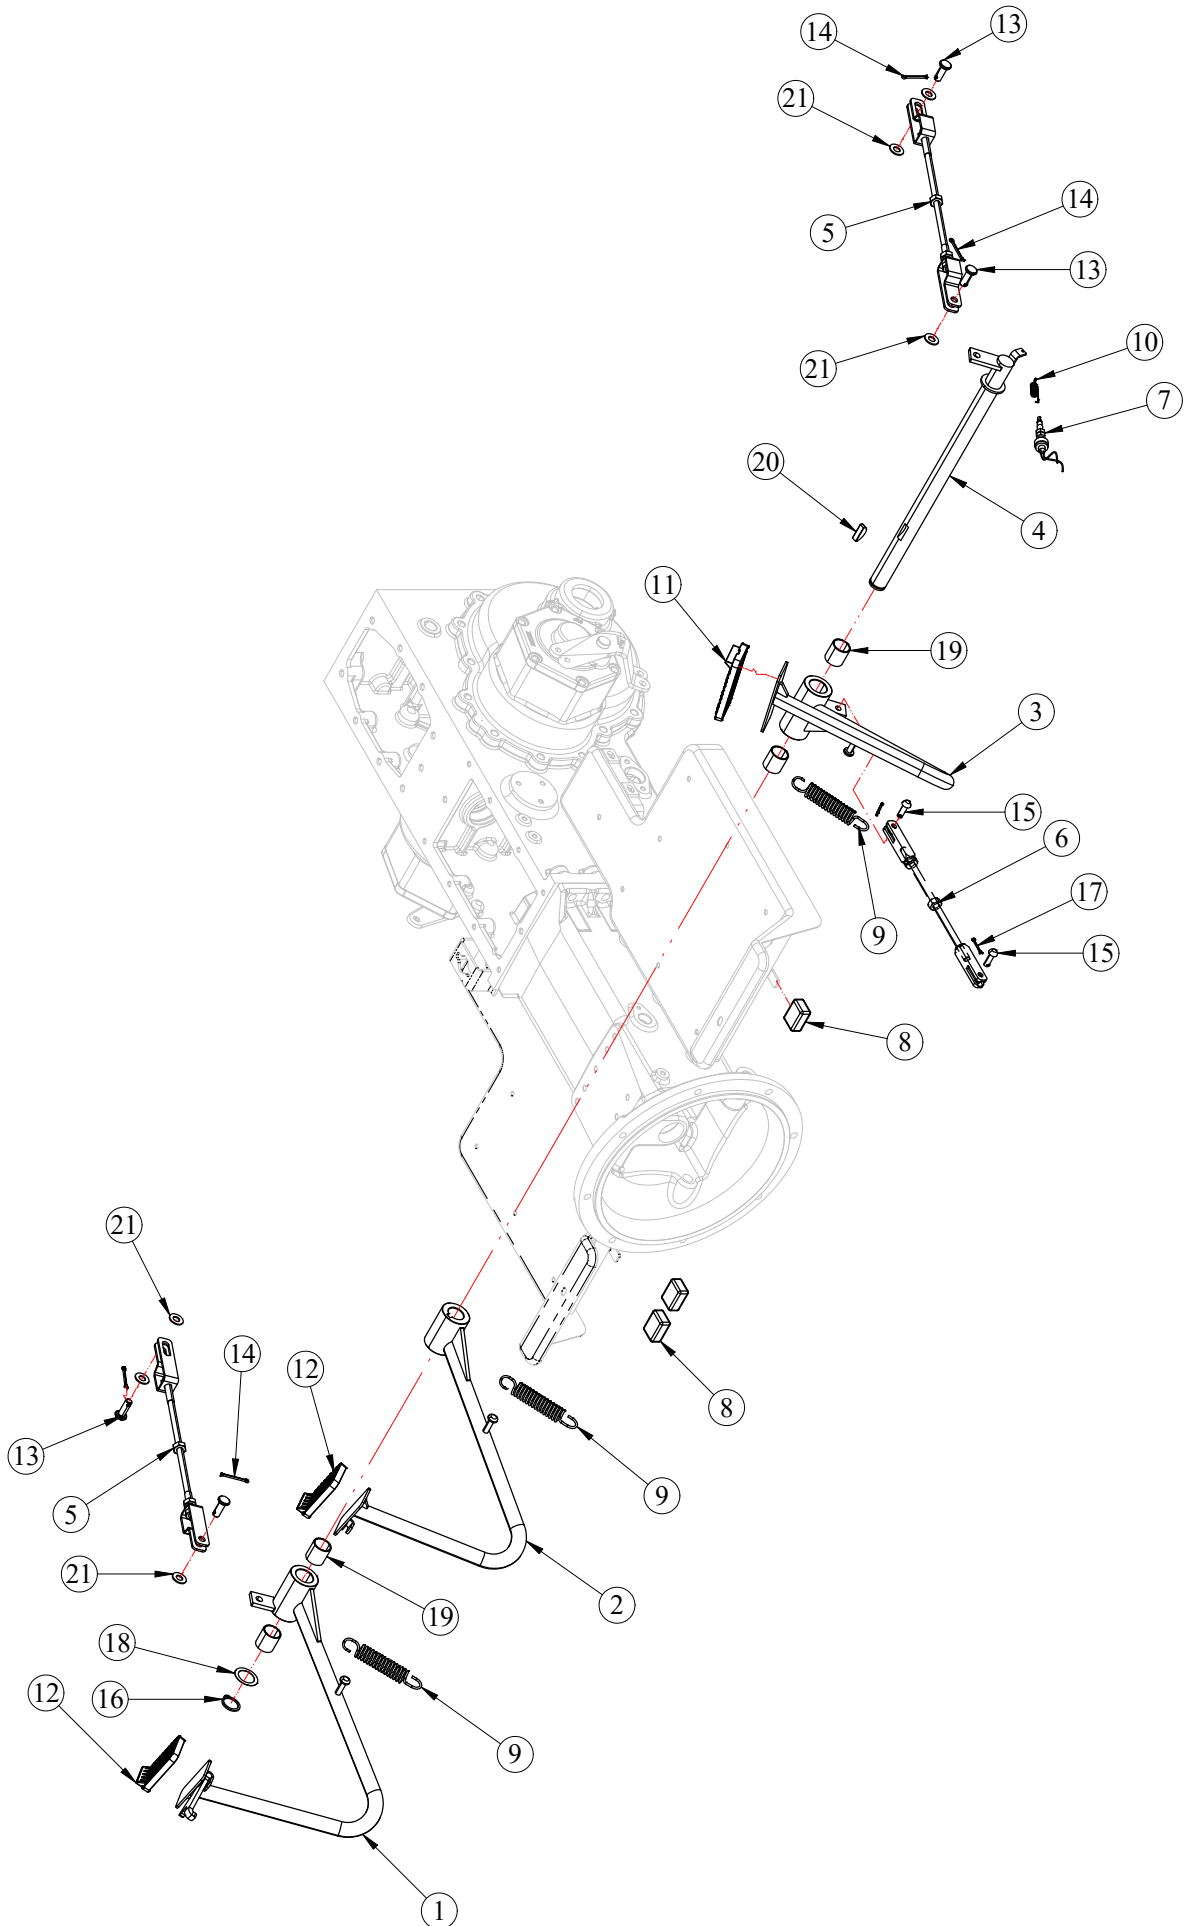

BRAKE & CLUTCH PEDAL ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11308334


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205212	PEDAL - BRAKE RH	1	
2	11205213	PEDAL - BRAKE LH	1	
3	11205211	PEDAL - CLUTCH	1	
4	11302408	SHAFT, PEDAL	1	
5	11205402	LINK - BRAKE	2	
6	11302449	LINK, CLUTCH	1	
7	11402078	ASSEMBLY BRAKE SWITCH	1	
8	11202420	RUBBER DAMPER, PEDAL	3	
9	11200335	SPRING L-90	3	
10	11200547	SPRING FOR BRAKE LIGHT	1	
11	11203129	PEDAL RUBBER PAD	1	
12	11205210	BRAKE PEDAL PAD	2	
13	11203251	PIN, BRAKE (OIB)	4	
14	11500357	SPLIT PIN 1/8" x 1.1/2"	4	
15	11200066	PIN CLUTCH	2	
16	11503273	CIRCLIP EXTERNAL Ø25X2	1	
17	11500619	SPLIT PIN 3/32" x 1"	2	
18	11201520	SHIM Ø26xØ37x0.2	1	
19	11202430	BUSH, PEDAL IGUS (Ø25 x Ø28 x 30)	4	
20	11202223	WOODRUFF KEY 8 X 13	1	
21	11500078	PLAIN WASHER Ø10.5xØ22x1.5	6	

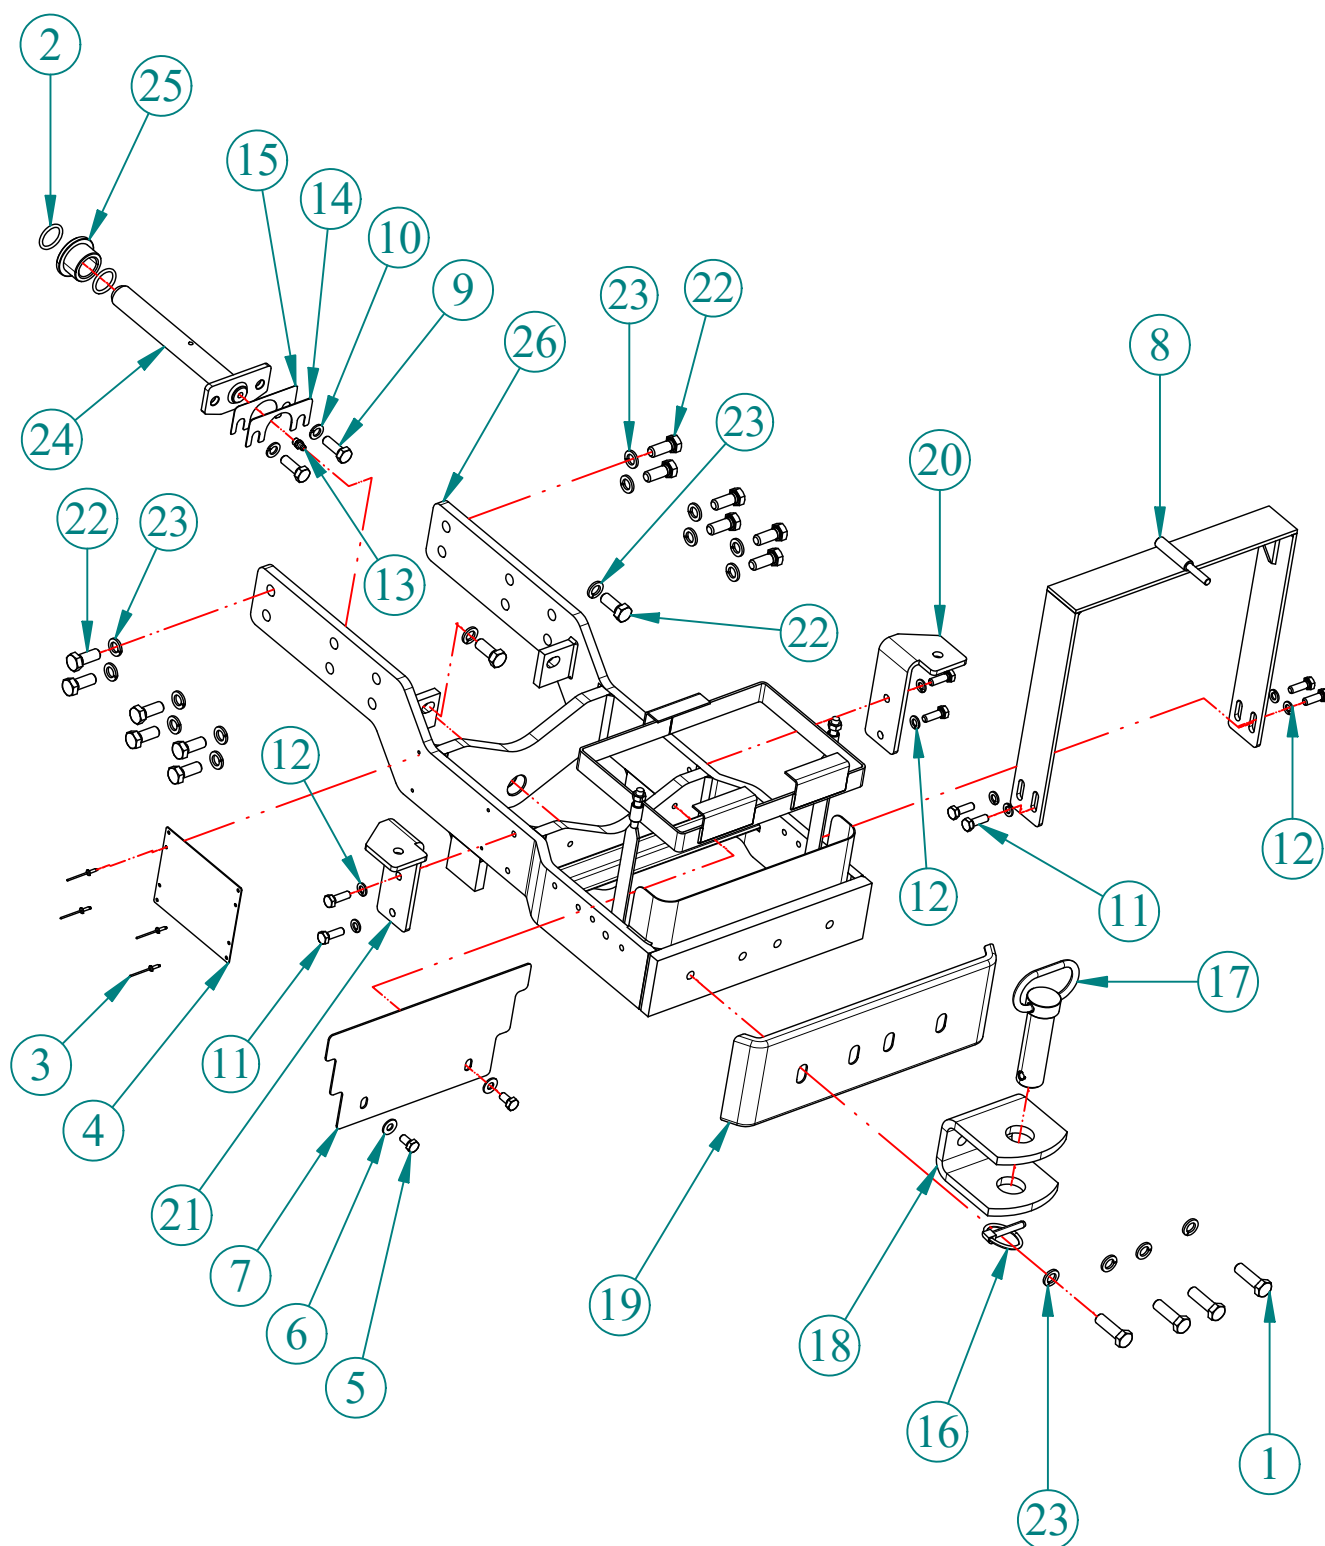

CHASIS FRAME ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :-11305550


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11501772	HEX. BOLT M12x40 (H.T.)- GRADE- 10.9	4	
2	11504895	O-Ring Ø25 x Ø3.53	2	
3	11501460	BLIND ALLUMINIUM RIVET Ø0.125"x0.422"	4	
4	11206603	IDENTIFICATION PLATE	1	
5	11500076	HEX BOLT M8 x 16	2	
6	11501068	PLAIN WASHER Ø8.5XØ19X1.5	2	
7	11205120	RADIATOR PLATE SEALING BOTTOM	1	
8	11205100	BRACKET,BONNET SUPPORT	1	
9	11500232	HEX. BOLT M10 X 30 (F.T.)	2	
10	11500062	SPRING WASHER - 10mm	2	
11	11500051	HEX. BOLT M8 X 25 (F.T.)	8	
12	11500052	SPRING WASHER - 8mm	8	
13	11502088	GREASE NIPPLE M8x1	1	
14	11202428	SHIM CENTER PIN (1MM)	1	
15	11203020	SHIM CENTER PIN (0.5 MM)	1	
16	11200590	LINCH PIN	1	
17	11202217	HITCH PIN - FRONT COUPLING	1	
18	11202216	FRONT COUPLING	1	
19	11205605	FRONT GUARD	1	
20	11205103	BRACKET FOR RADIATOR L.H.	1	
21	11205102	BRACKET FOR RADIATOR R.H.	1	
22	11505347	HEX. BOLT M12 x 30 (1.25P)	14	
23	11500118	SPRING WASHER 12 mm	18	
24	11202426	CENTER PIN (215 L)	1	
25	11202427	BUSH CENTER PIN	1	
26	11205092	TRACTOR SUPPORT FRONT AXLE ASSY. (MVS3L2)	1	

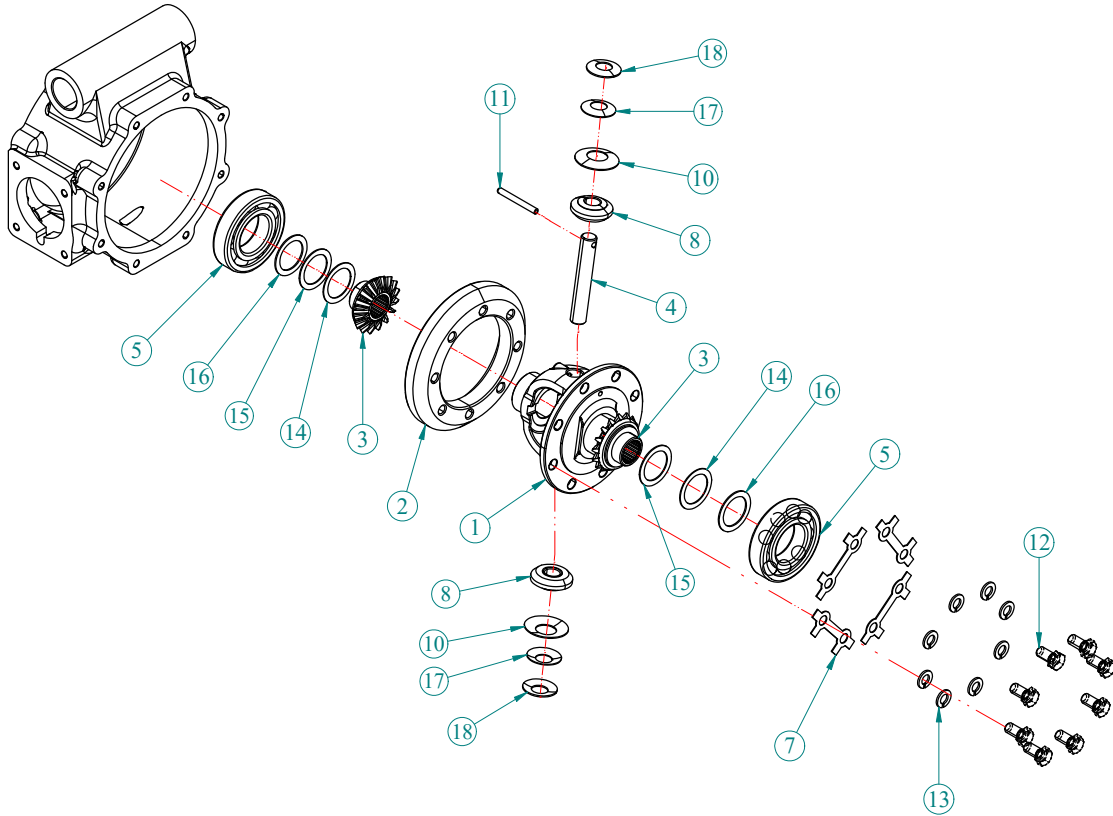

FRONT DIFFERENTIAL CAGE ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305570


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201102	FRONT DIFFERENTIAL CAGE	1	
2	11201103	CROWN & PINION SET 43X9	1	
3	11201104	BEVEL GEAR 16 T	2	
4	11201108	PIN FOR STAR GEAR	1	
5	11501117	BALL BEARING 6208	2	
7	11200299	LOCK FLAP FOR AXLE	4	
8	11201106	STAR GEAR 10 T	2	
10	11201107	SHIM STAR GEAR	2	QTY:- AR
11	11201109	LOCK PIN HOLLOW Ø5.5X50	1	
12	11201143	CROWN BOLT M10X20 (1.25P)	8	
13	11500062	SPRING WASHER - 10mm	8	
14	11201105	SHIM Ø26xØ37x0.8	2	QTY:- AR
15	11200514	SHIMS Ø42XØ31X1.0	2	QTY:- AR
16	11208492	SHIM Ø26xØ37x1.2	2	QTY:- AR
17	11204924	SHIM STAR GEAR	2	QTY:- AR
18	11204925	SHIM STAR GEAR	2	QTY:- AR

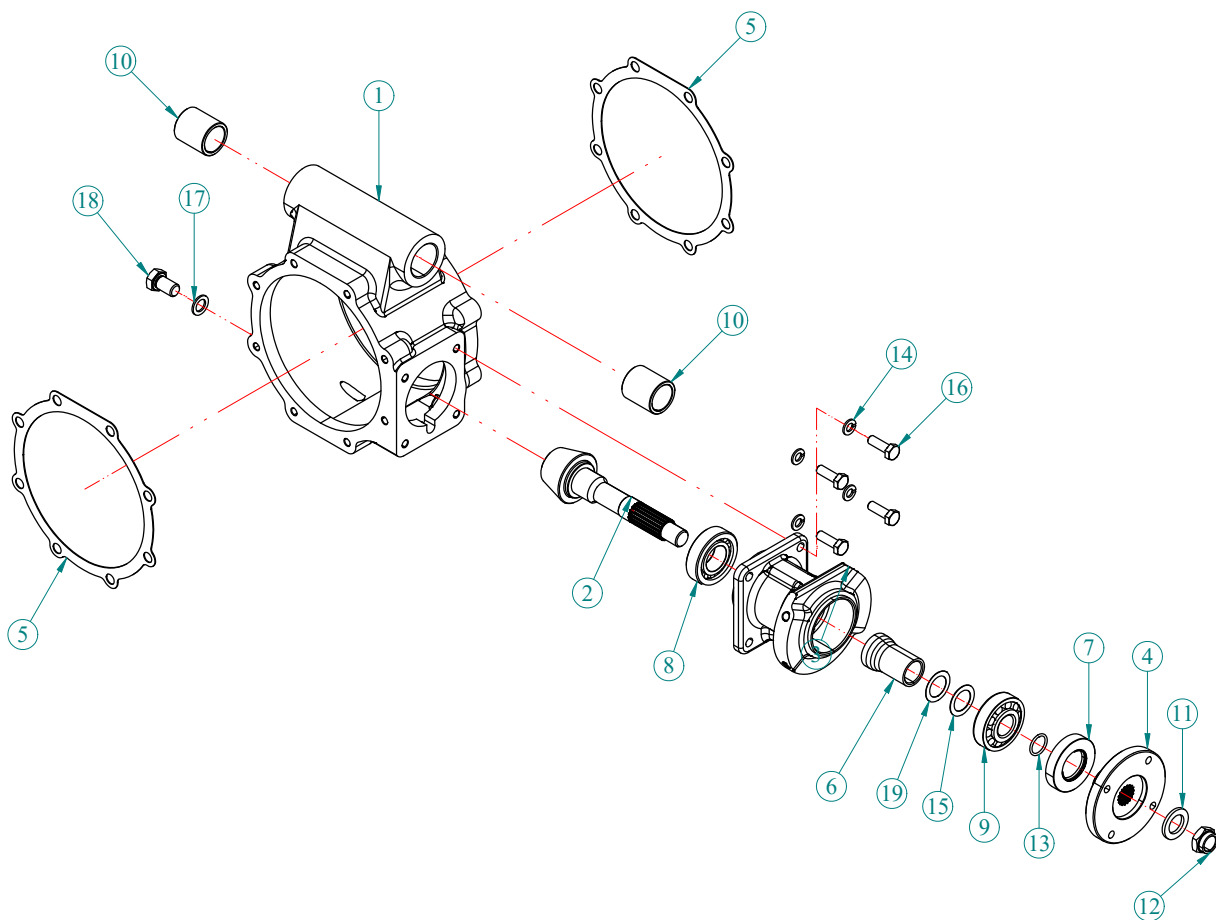

FRONT DIFFERENTIAL PINION SHAFT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305571

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208209	MAIN DIFFERENTIAL HOUSING	1	
2	11201103	CROWN & PINION SET 43X9	1	
3	11201094	PINION HOUSING	1	
4	11201145	PROPELLER FLANGE	1	
5	11201134	GASKET FOR DIFFERENTIAL HOUSING	2	
6	11201127	DISTANCE FOR PINION HOUSING	1	
7	11501124	OIL SEAL Ø52xØ28x10	1	
8	11500344	TAPPER ROLLER BEARING 30205	1	
9	11501121	TAPPER ROLLER BEARING 30304	1	
10	11205422	BUSH CENTER SLEEVE	2	
11	11501146	PLAIN WASHER Ø18XØ30X3	1	
12	11201147	PINION NUT M16X1.5	1	
13	11501470	O-RING Ø17xØ2	1	
14	11500052	SPRING WASHER - 8mm	4	
15	11201128	SHIM Ø20.5 X Ø30 X 0.5	1	QTY:- AR
16	11504701	HEX BOLT M8x25 (F.T.) [10.9]	4	
17	11500007	COPPER WASHER Ø12xØ19x1.5	1	
18	11500773	HEX BOLT M12x20 (F.T.) [8.8]	1	
19	11204854	SHIMS Ø20.5 X Ø30 X 0.2	1	QTY:- AR

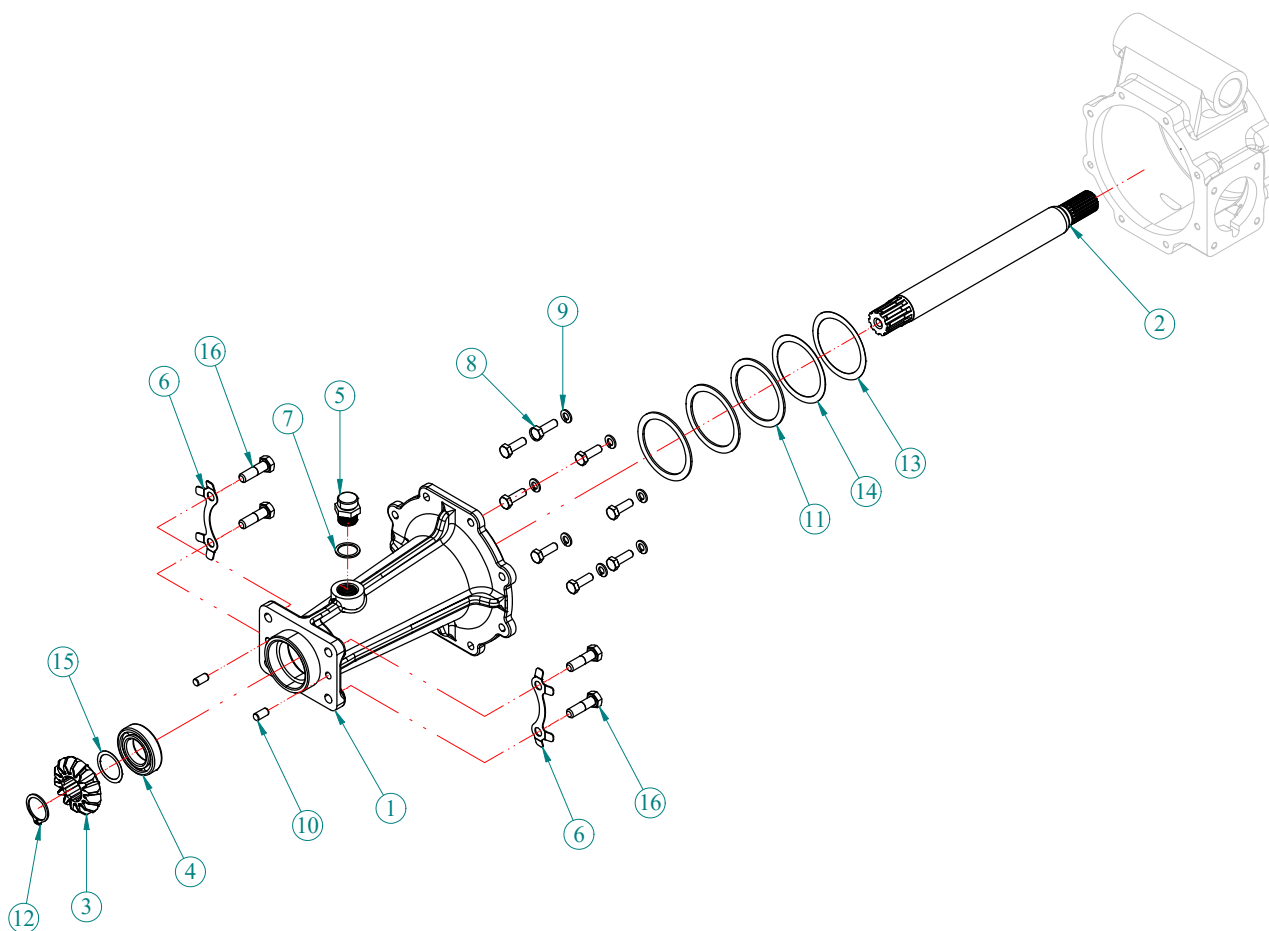


FLANGE DIFFERENTIAL HOUSING ASSEMBLY LH

MODEL :- 263

ASSEMBLY NO. :- 11305565


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11201091	FLANGE DIFFERENTIAL HOUSING	1	
2	11201110	DIFFERENTIAL MAIN AXLE	1	
3	11205072	BEVEL GEAR 14 T	1	
4	11501120	BALL BEARING 6006	1	
5	11202915	AIR BREATHER 1/2" BSP	1	
6	11203256	LOCKING FLAP, FLANGE DIFFERENTIAL HOUSING	2	
7	11500430	COPPER WASHER Ø21XØ26X1.5	1	
8	11504701	HEX BOLT M8x25 (F.T.) [10.9]	8	
9	11500052	SPRING WASHER - 8mm	8	
10	11200119	PIN, DOWEL Ø8 X 16	2	
11	11201221	SPACER FOR FLANGE DIFF. HOUSING	3	
12	11501125	CIRCLIP EXTERNAL Ø28X1.5	1	
13	11200441	SHIMS Ø79XØ64.5X0.2	1	QTY:- AR
14	11201130	SHIMS Ø79xØ64.5x0.5	1	QTY:- AR
15	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
16	11503270	HEX BOLT M10x35x1.25P [10.9]	4	

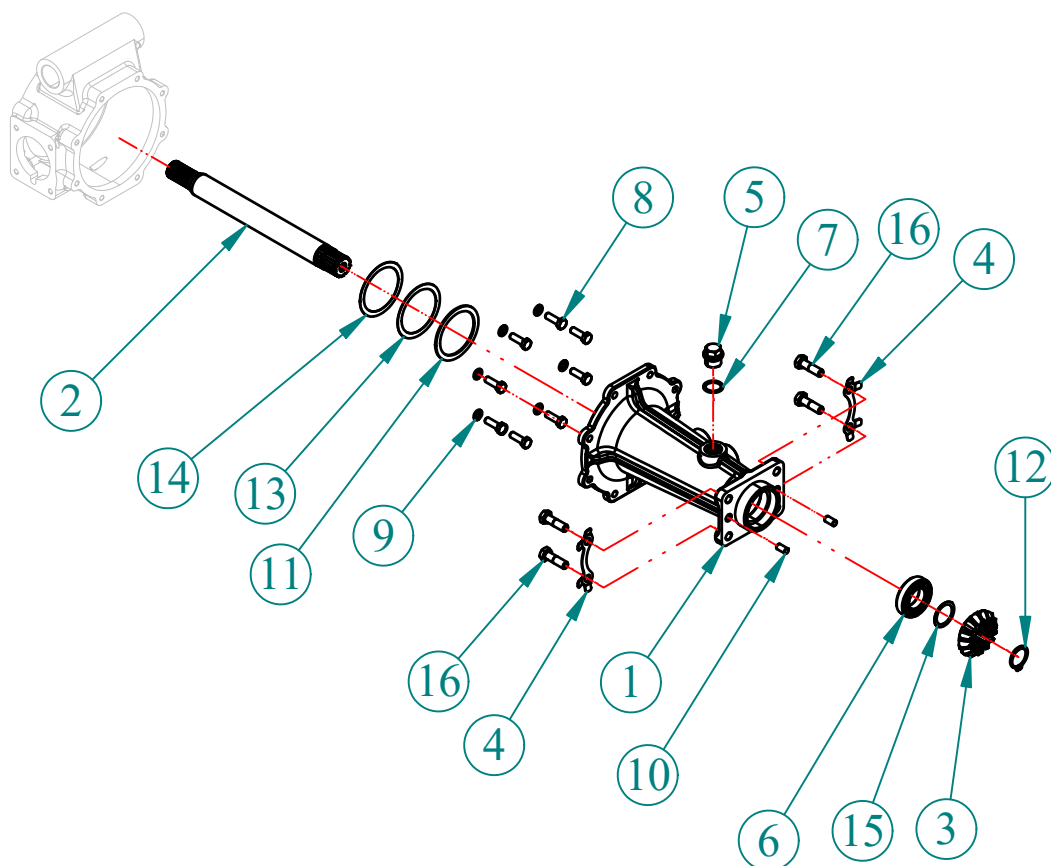

FLANGE DIFFERENTIAL HOUSING ASSEMBLY RH


MODEL :- 263
ASSEMBLY NO. :-11305566

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208423	FLANGE DIFFERENTIAL HOUSING (R.H.)	1	
2	11201110	DIFFERENTIAL MAIN AXLE	1	
3	11205072	BEVEL GEAR 14 T	1	
4	11203256	LOCKING FLAP, FLANGE DIFFERENTIAL HOUSING	2	
5	11200120	DRAIN PLUG	1	
6	11501120	BALL BEARING 6006	1	
7	11500430	COPPER WASHER Ø21XØ26X1.5	1	
8	11504701	HEX BOLT M8x25 (F.T.) [10.9]	8	
9	11500052	SPRING WASHER - 8mm	8	
10	11200119	PIN, DOWEL Ø8 X 16	2	
11	11201221	SPACER FOR FLANGE DIFF. HOUSING	1	
12	11501125	CIRCLIP EXTERNAL Ø28X1.5	1	
13	11201130	SHIMS Ø79xØ64.5x0.5	1	QTY : AR
14	11200441	SHIMS Ø79XØ64.5X0.2	1	QTY : AR
15	11201132	SHIMS Ø29xØ37x0.3	1	QTY : AR
16	11503270	HEX BOLT M10x35x1.25P [10.9]	4	

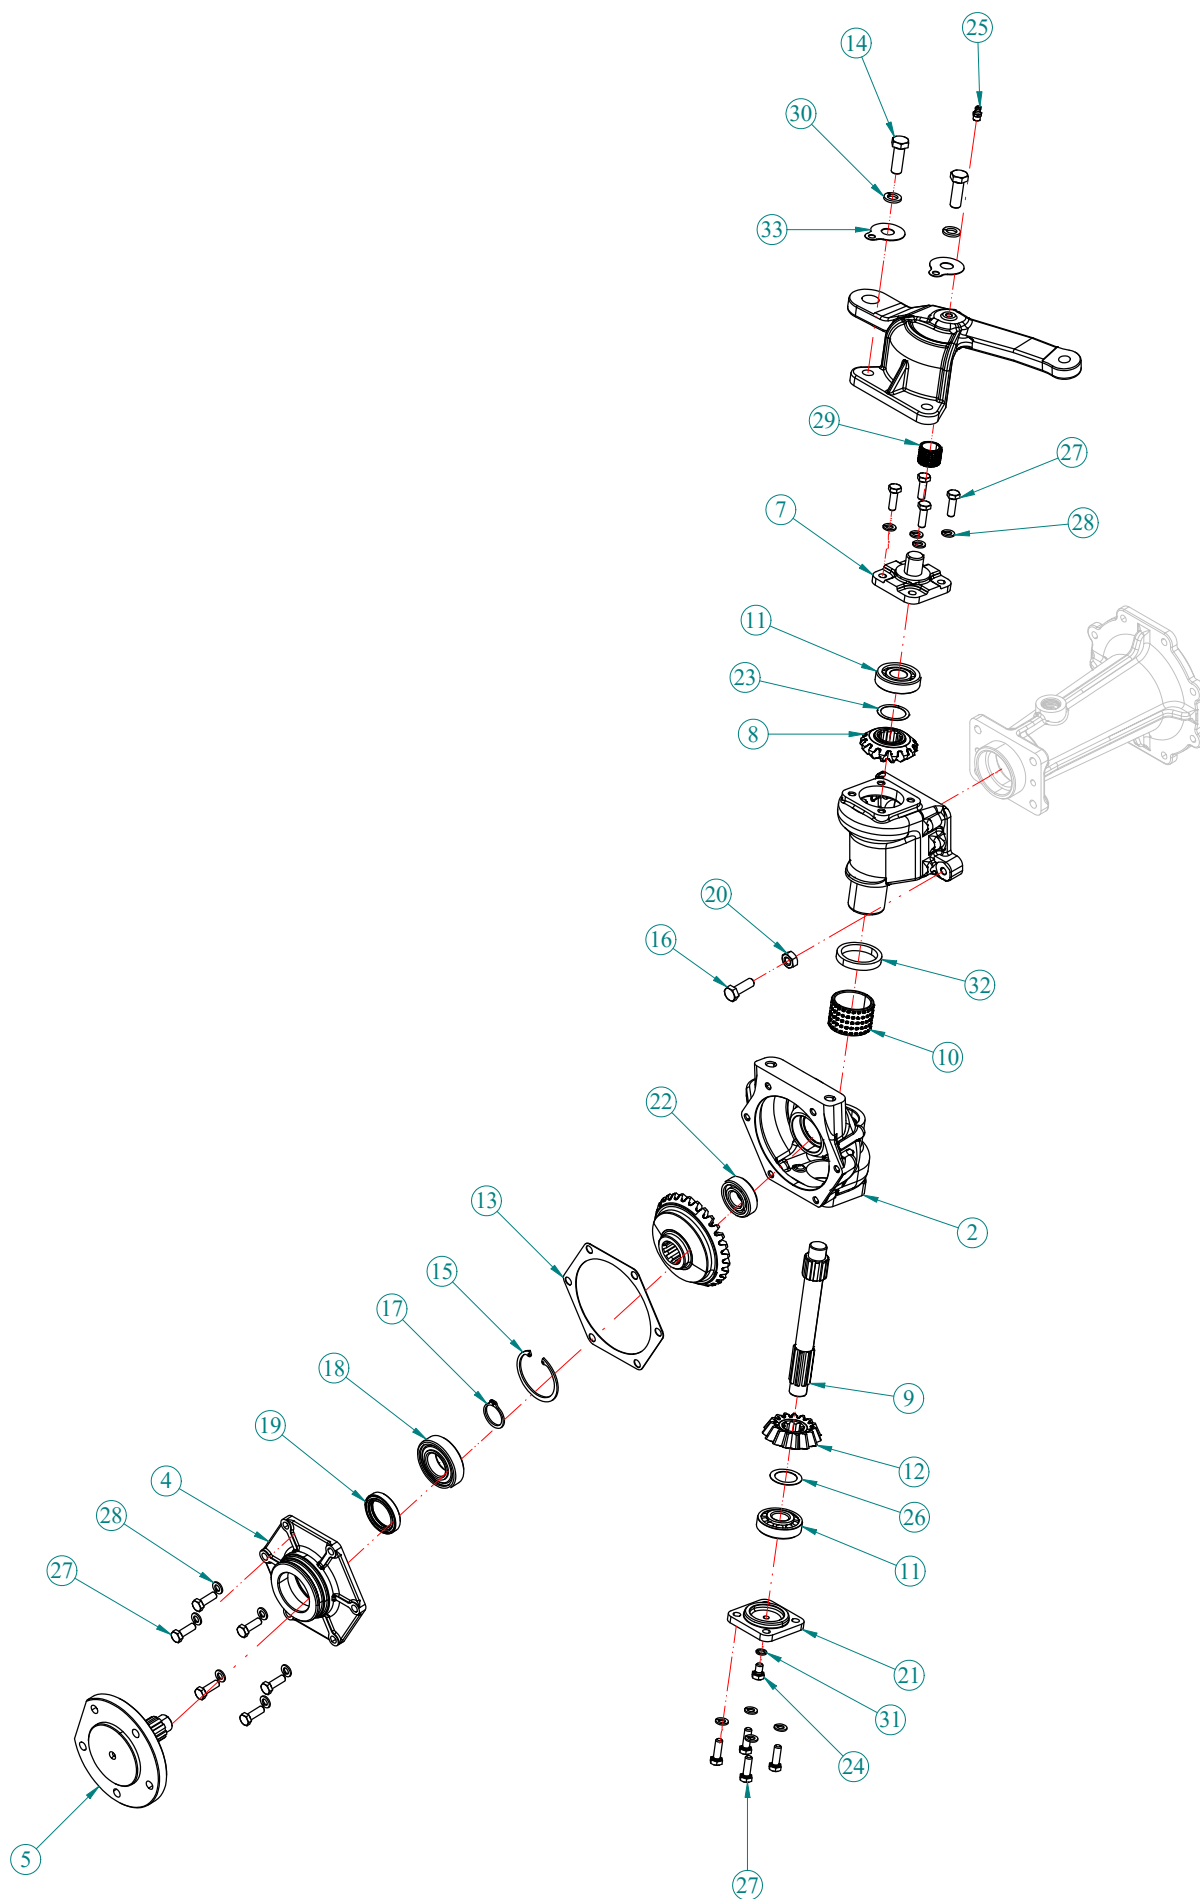


VERTICAL SHAFT HOUSING ASSEMBLY LH
MODEL :- 263
ASSEMBLY NO. :- 11305596

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208207	HOUSING FOR VERTICAL SHAFT LH	1	
2	11208205	HOUSING FOR AXLE FLANGE LH	1	
3	11204549	BEVEL GEAR 29 T -78°	1	
4	11208257	FLANGE FOR AXLE FLANGE HOUSING	1	
5	11208258	AXLE FLANGE (5 Hole)	1	
6	11208424	STEERING ARM DOUBLE	1	
7	11201096	TOP COVER FOR VERTICAL SHAFT	1	
8	11205072	BEVEL GEAR 14 T	1	
9	11201111	VERTICAL SHAFT	1	
10	11205030	BUSH FOR VERTICAL HOUSING	1	
11	11501121	TAPPER ROLLER BEARING 30304	2	
12	11204550	BEVEL PINION GEAR 15 T -78°	1	
13	11201136	GASKET FOR AXLE FLANGE HOUSING	1	
14	11500768	HEX BOLT M12X35 (F.T.) [10.9]	2	
15	11501126	CIRCLIP, INTERNAL Ø62X2	1	
16	11504704	HEX BOLT M10x30 (F.T.) [10.9]	1	
17	11501255	CIRCLIP EXTERNAL Ø28 X 2	1	
18	21503363	BALL BEARING 6206ZZ	1	
19	11505362	OIL SEAL Ø35x Ø50x8 (NBR)	1	
20	11500024	HEX NUT M10	1	
21	11204551	BOTTOM COVER FOR VERTICAL SHAFT -78°	1	
22	11501119	BALL BEARING 6204	1	
23	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
24	11500489	HEX BOLT M8 X 12 (F.T.)	2	
25	11502088	GREASE NIPPLE M8x1	1	
26	11201133	SHIM Ø26 X Ø37 X 0.5	1	QTY:- AR
27	11504701	HEX BOLT M8x25 (F.T.) [10.9]	14	
28	11500052	SPRING WASHER - 8mm	14	
29	11205123	STEERING ARM BUSH	1	
30	11500118	SPRING WASHER 12 mm	2	
31	11500112	COPPER WASHER Ø8XØ12X1	2	
32	11501122	OIL SEAL Ø52xØ42x8	1	
33	11200880	LOCK FLAP FOR M12 BOLT	2	
34	11607766	LOXEAL 59-20--RTV SEALANT-310ML	AR	

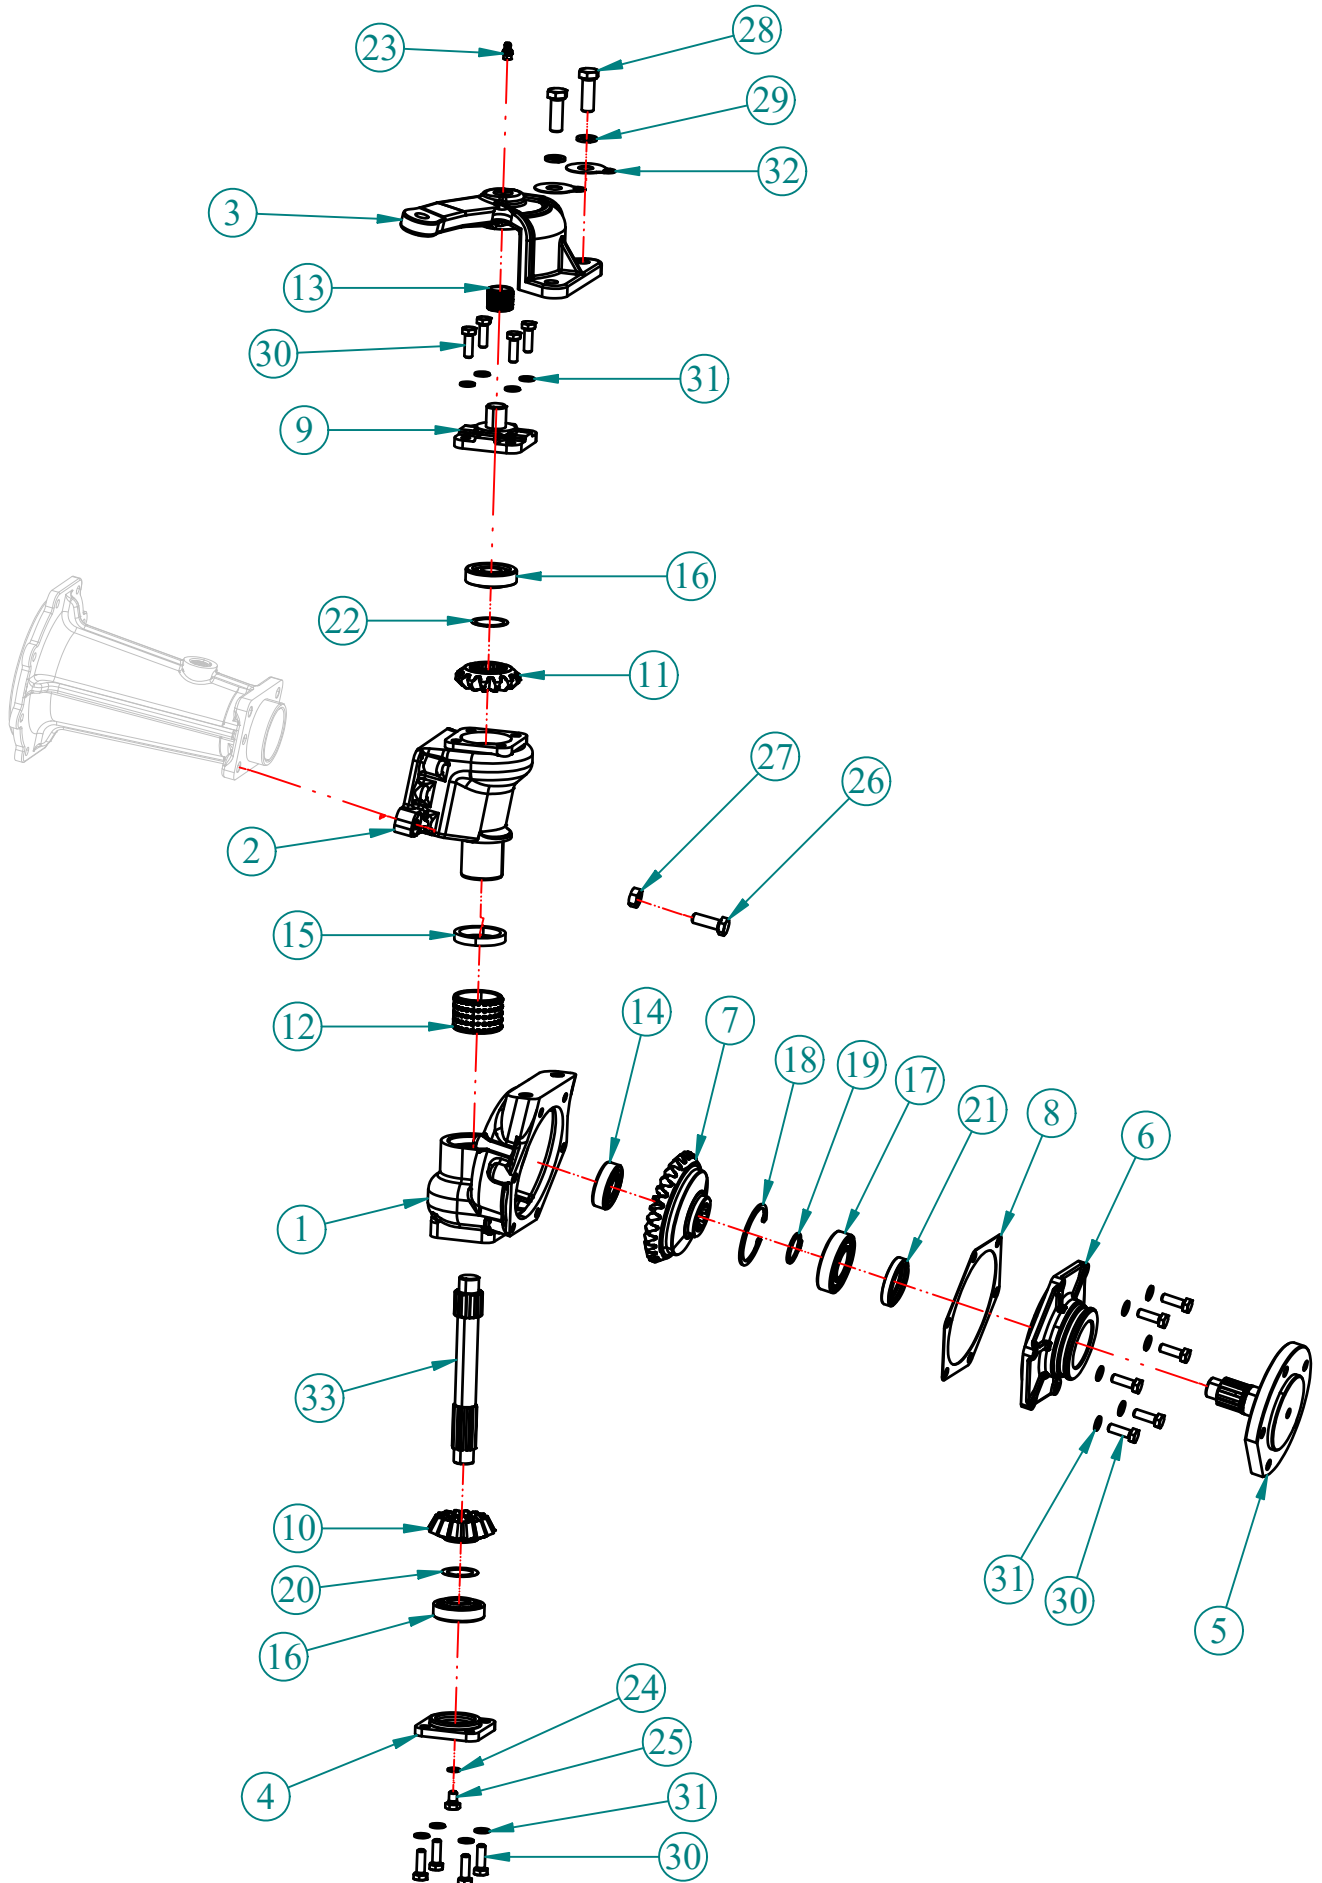

VERTICAL SHAFT HOUSING ASSEMBLY RH
MODEL :- 263
ASSEMBLY NO. :- 11305597

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11208206	HOUSING FOR AXLE FLANGE RH	1	
2	11208208	HOUSING FOR VERTICAL SHAFT RH	1	
3	11205084	STEERING ARM (SINGLE)	1	
4	11204551	BOTTOM COVER FOR VERTICAL SHAFT -78°	1	
5	11208258	AXLE FLANGE (5 Hole)	1	
6	11208257	FLANGE FOR AXLE FLANGE HOUSING	1	
7	11204549	BEVEL GEAR 29 T -78°	1	
8	11201136	GASKET FOR AXLE FLANGE HOUSING	1	
9	11201096	TOP COVER FOR VERTICAL SHAFT	1	
10	11204550	BEVEL PINION GEAR 15 T -78°	1	
11	11205072	BEVEL GEAR 14 T	1	
12	11205030	BUSH FOR VERTICAL HOUSING	1	
13	11205123	STEERING ARM BUSH	1	
14	11501119	BALL BEARING 6204	1	
15	11501122	OIL SEAL Ø52xØ42x8	1	
16	11501121	TAPPER ROLLER BEARING 30304	2	
17	21503363	BALL BEARING 6206ZZ	1	
18	11501126	CIRCLIP, INTERNAL Ø62X2	1	
19	11501255	CIRCLIP EXTERNAL Ø28 X 2	1	
20	11201133	SHIM Ø26 X Ø37 X 0.5	1	QTY:- AR
21	11505362	OIL SEAL Ø35x Ø50x8 (NBR)	1	
22	11201132	SHIMS Ø29xØ37x0.3	1	QTY:- AR
23	11502088	GREASE NIPPLE M8x1	1	
24	11500112	COPPER WASHER Ø8XØ12X1	2	
25	11500489	HEX BOLT M8 X 12 (F.T.)	2	
26	11504704	HEX BOLT M10x30 (F.T.) [10.9]	1	
27	11500024	HEX NUT M10	1	
28	11500768	HEX BOLT M12X35 (F.T.) [10.9]	2	
29	11500118	SPRING WASHER 12 mm	2	
30	11504701	HEX BOLT M8x25 (F.T.) [10.9]	14	
31	11500052	SPRING WASHER - 8mm	14	
32	11200880	LOCK FLAP FOR M12 BOLT	2	
33	11201111	VERTICAL SHAFT	1	
34	11607766	LOXEAL 59-20--RTV SEALANT-310ML	AR	

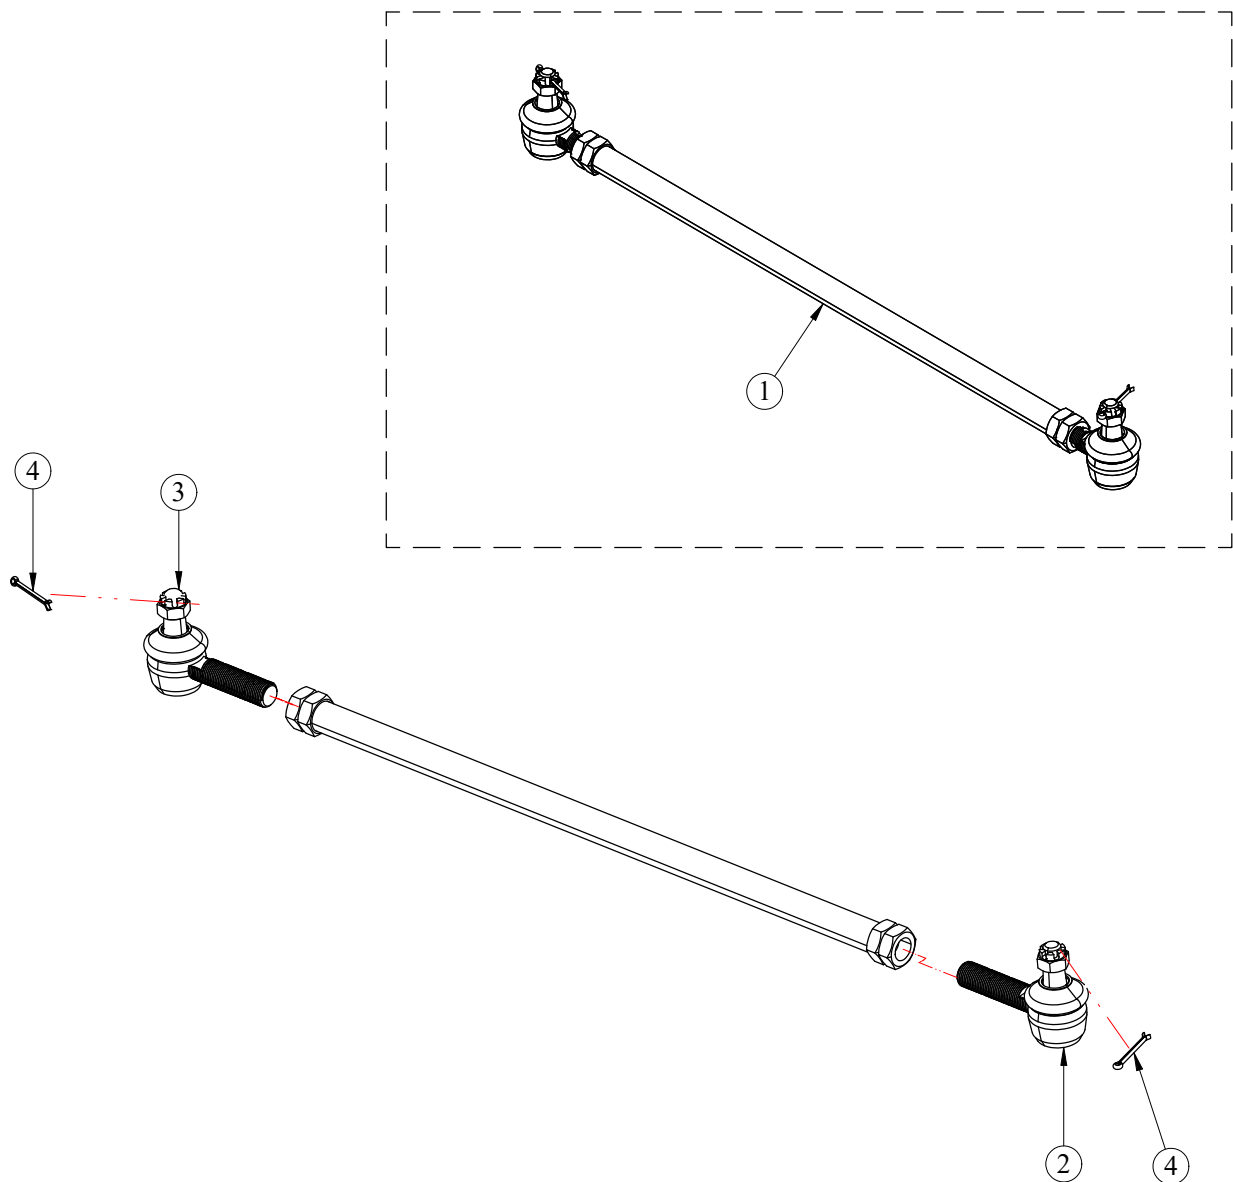


TIE ROD ASSEMBLY 508

MODEL :- 263

ASSEMBLY NO. :- 11305629

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11305108	TIE ROD ASSEMBLY 508	1	
2	11200790	TIE ROD END R.H. SIDE	1	
3	11200789	TIE ROD END L.H. SIDE	1	
4	11500357	SPLIT PIN 1/8" x 1.1/2"	2	

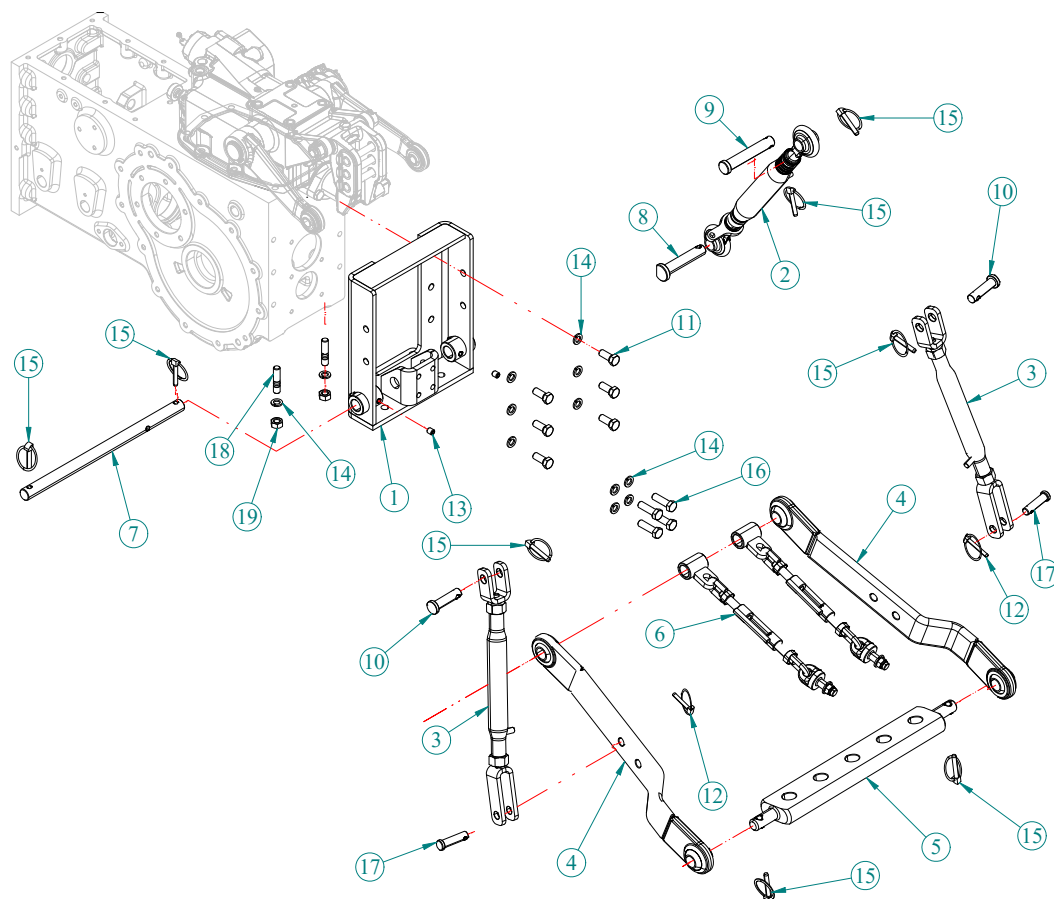


THREE POINT LINKAGE ASSEMBLY

MODEL :- 263

ASSEMBLY NO. :- 11305594


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205105	BRACKET, LOWER LINK	1	
2	11300584	TOP LINK	1	
3	11206738	SIDE LINK ADJUSTABLE	2	
4	11206736	LOWER LINK (500)	2	
5	11205482	DRAWBAR	1	
6	11206739	STABILZER CHAIN LOWER LINK	2	
7	11201383	BAR LOWER LINK	1	
8	11203271	HITCH PIN BIG	1	
9	11200589	HITCH PIN BIG	1	
10	11203223	HITCH PIN BIG (Ø 16 mm)	2	
11	11502079	HEX. BOLT M12 X 30 (F.T.) 8.8	6	
12	11201300	LINCH PIN (SMALL)	2	
13	11501777	GRUB BOLT M10X12	2	
14	11500118	SPRING WASHER 12 mm	12	
15	11200590	LINCH PIN	8	
16	11501772	HEX. BOLT M12x40 (H.T.)- GRADE- 10.9	4	
17	11201330	HITCH PIN (DIA. 14MM)	2	
18	11501052	STUD M12 X 35	2	
19	11500117	HEX NUT M12	2	

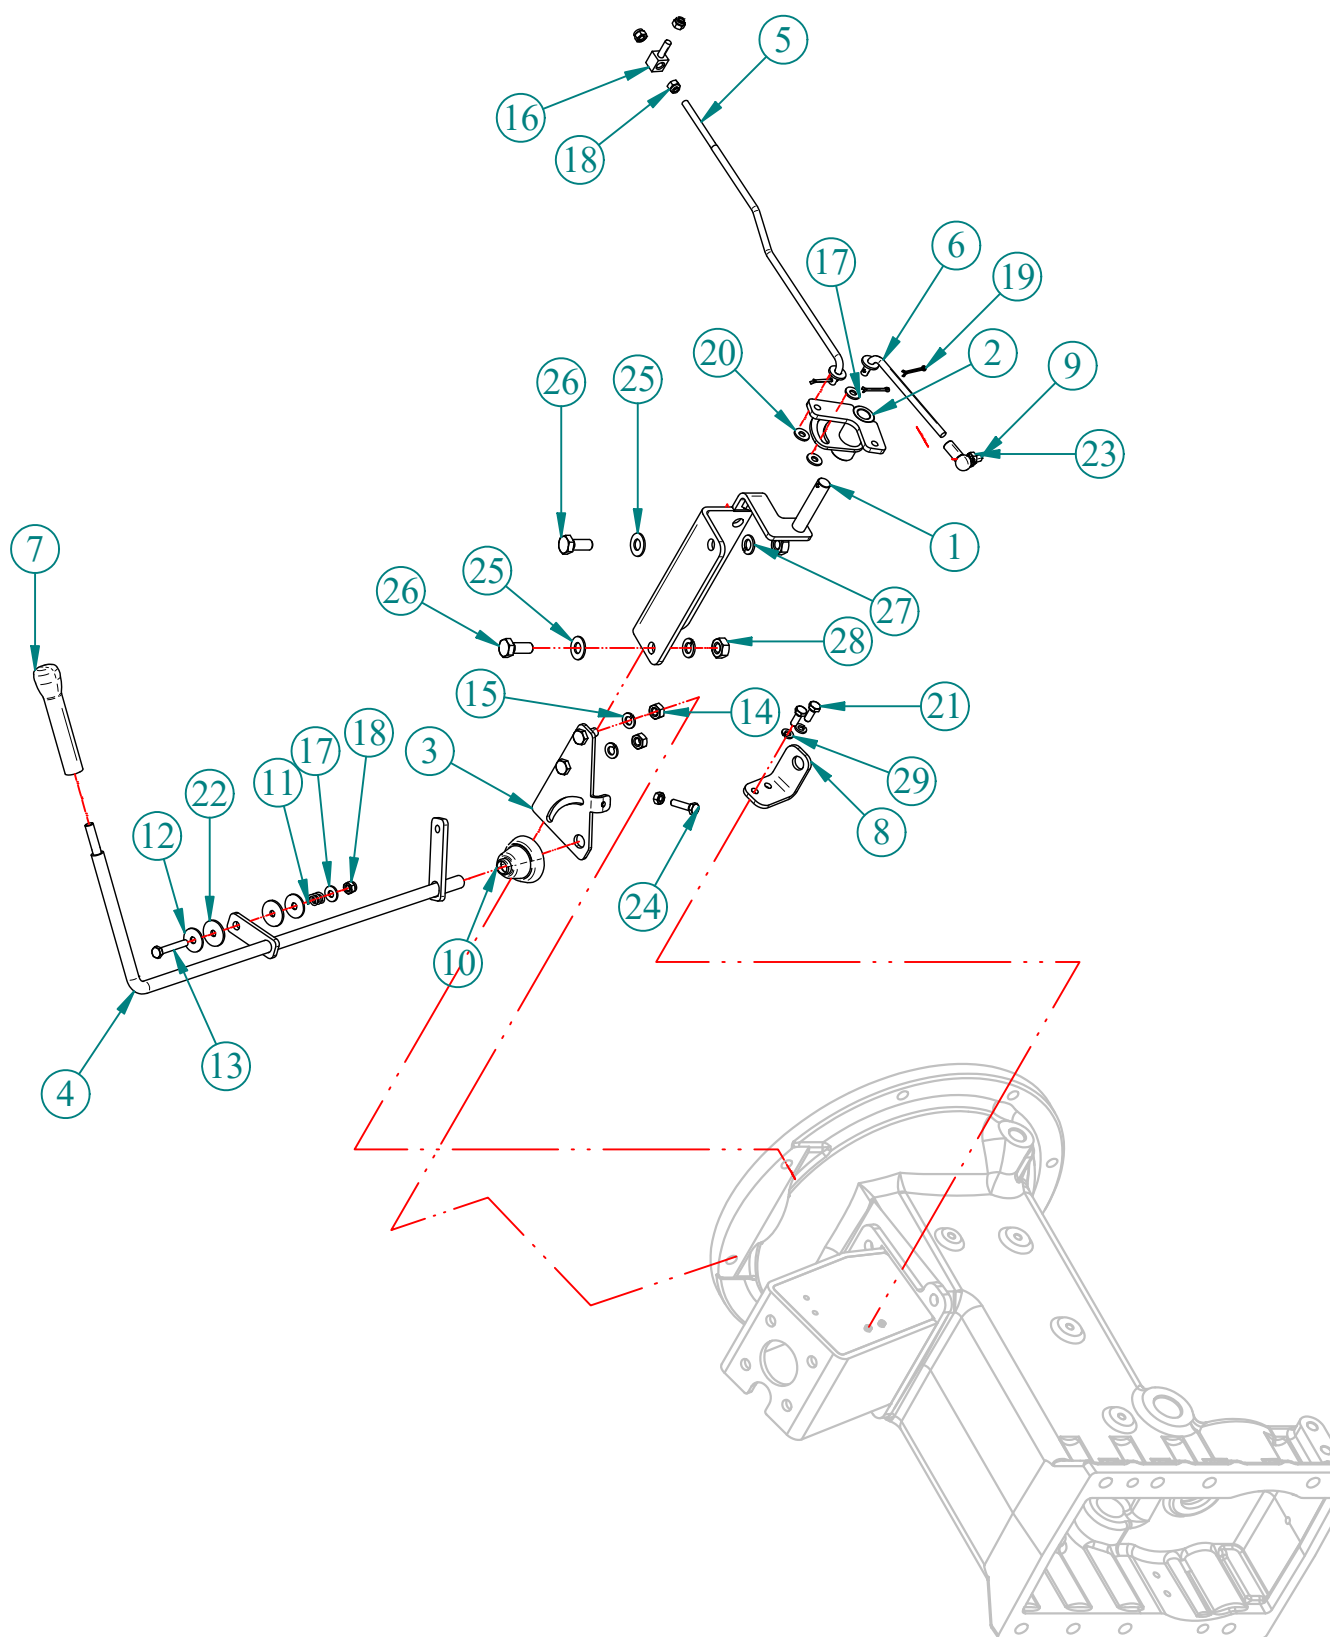

HAND ACCELERATOR ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :-11305575

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205146	BRACKET CAGE MOUNTING	1	
2	11205141	ACCELERATOR ARM	1	
3	11203186	HAND LEVER SUPPORT	1	
4	11205148	HAND ACCELERATOR ASSY	1	
5	11205136	ROD, ACCELERATOR (334 L)	1	
6	11202458	LINK,HAND THROTTLE LEVER	1	
7	11202125	GRIP HAND THROTTLE LEVER	1	
8	11205794	SUPPORT - HAND ACCELERATOR	1	
9	11503278	ANGULAR BALL JOINT L-TYPE	1	
10	11202124	RUBBER COVER HAND THROTTLE LEVER	1	
11	11201004	SPRING DRAFT & POSITION LEVER	1	
12	11500485	PLAIN WASHER Ø6.5 X Ø23 X 1.5	2	
13	11501077	HEX. BOLT M6x40 (F.T.) 8.8	1	
14	11500082	HEX NUT M8	2	
15	11500052	SPRING WASHER - 8mm	2	
16	11201849	SWIVEL 6mm	1	
17	11501015	PLAIN WASHER Ø6.5xØ15x1.5	2	
18	11500947	NYLOCK NUT M6	4	
19	11500619	SPLIT PIN 3/32" x 1"	3	
20	11204991	WASHER, FRICTION Ø6.5 X Ø15 X 1.5	2	
21	11500071	HEX. BOLT M6x15 (F.T.)8.8	2	
22	11201531	WASHER FRICTION	2	
23	11500037	HEX. NUT M6	2	
24	11500195	HEX. BOLT M6x25 (F.T.)8.8	1	
25	11500078	PLAIN WASHER Ø10.5xØ22x1.5	2	
26	11500156	HEX. BOLT M10X25 (F.T.)	2	
27	11500062	SPRING WASHER - 10mm	2	
28	11500024	HEX NUT M10	2	
29	11500073	SPRING WASHER - 6 mm	2	

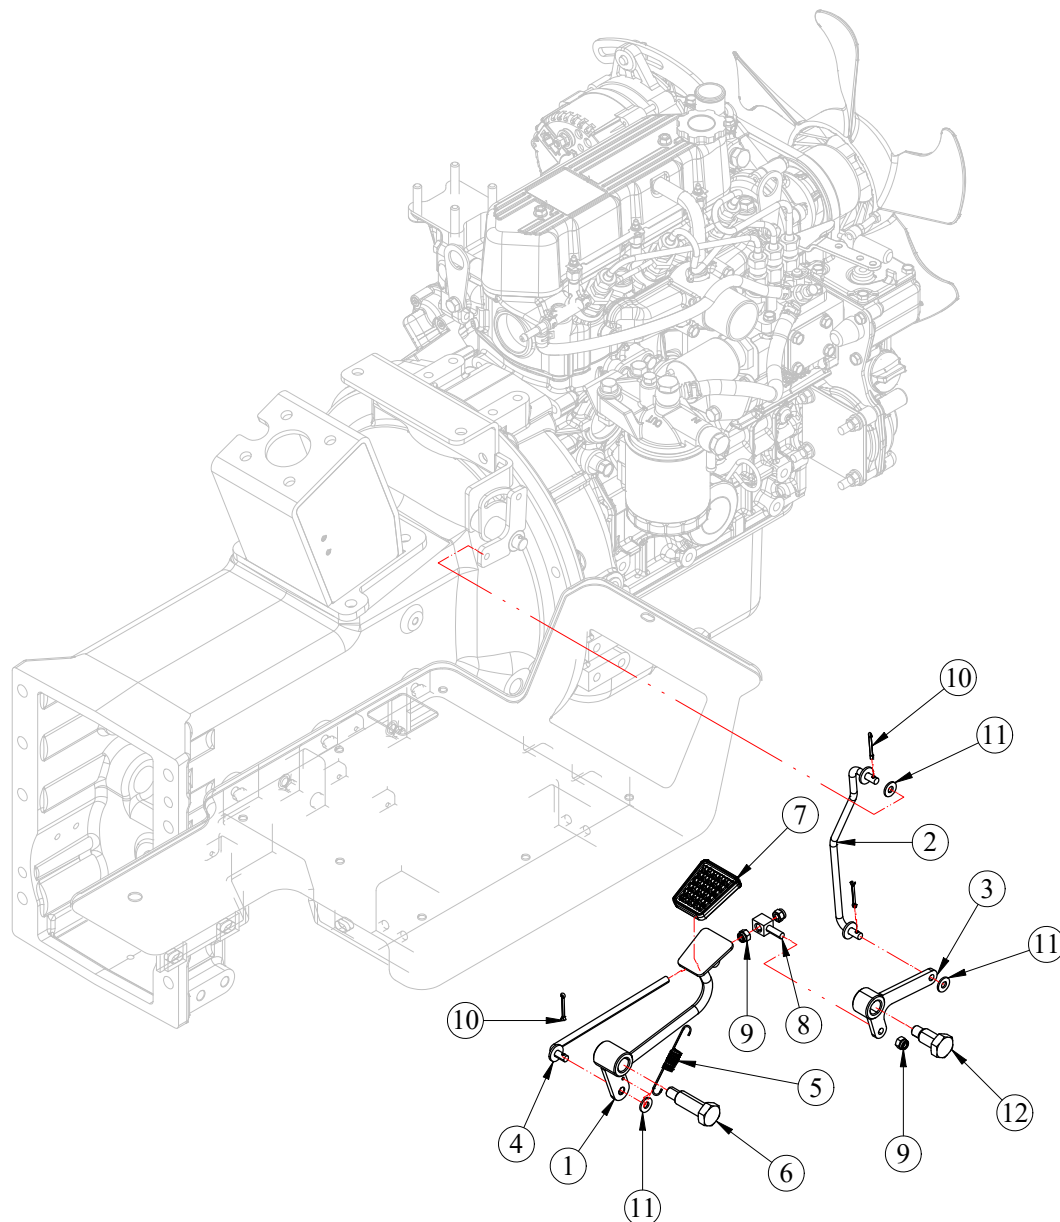

FOOT ACCELERATOR

MODEL :- 263
ASSEMBLY NO. :- 11305567

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202453	PEDAL, ACCELETERATOR	1	
2	11205142	LINK, FOOT ACCELERATOR	1	
3	11203185	SUPPORT ARM, FOOT LEVER	1	
4	11202461	LINK, ACCELERATOR CONTROL	1	
5	11203255	SPRING FOR ACCELERATOR	1	
6	11203180	SPECIAL BOLT, PEDAL ACCELERATOR	1	
7	11203130	PEDAL PAD (FOOT THROTTLE)	1	
8	11201849	SWIVEL 6mm	1	
9	11500947	NYLOCK NUT M6	3	
10	11500619	SPLIT PIN 3/32" x 1"	3	
11	11501015	PLAIN WASHER Ø6.5xØ15x1.5	3	
12	11202993	SPECIAL BOLT - PARKING BRAKE	1	

CAPTAIN

1



2

WARNING

- COOLING SYSTEM REMAINS UNDER PRESSURE.
- DO NOT REMOVE RADIATOR CAP WHEN SYSTEM IS HOT.
- ALWAYS TURN THE CAP SLOWLY AND ALLOW PRESSURE TO ESCAPE
- BEFORE REMOVING THE CAP COMPLETELY.
- WHEN OPERATING BELOW 0°C, USE, SUITABLE ANTIFREEZE WITH WATER.

FOR
YOUR REGIONAL
LANGUAGE SCAN
THIS QR CODE



11203030

5

⚠ DANGER

11203031

- KEEP FLAMES AWAY FROM BATTERY.
- DISCONNECT -ve CABLE OF BATTERY BEFORE ANY WELDING OPERATION.
- PROTECT YOURSELF FROM BATTERY, FLAME BURNS CAN RESULT FROM BATTERY ACID.
- IN CASE OF CONTACT WITH ACID, FLUSH WITH PLENTY OF WATER IMMEDIATELY.
- DO NOT JUMP START THE TRACTOR BY SHORTING ACROSS STARTER

FOR
YOUR REGIONAL
LANGUAGE SCAN
THIS QR CODE



6

SERVICE INSTRUCTIONS

1. CLEAN THE PRIMARY FILTER ELEMENT AFTER EVERY 250 HRS OF OPERATION OR IMMEDIATELY WHEN THE RED BAND APPEARS ON THE SERVICE INDICATOR.
2. NEVER REMOVE THE SECONDARY ELEMENT FOR CLEANING. ONLY REMOVE WHEN REPLACEMENT OF IT IS REQUIRED.
3. REPLACE PRIMARY & SECONDARY ELEMENT UPON 3RD CLEANING REQUIREMENT OF THE PRIMARY ELEMENT OR AT 750 HOURS (WHICHEVER OCCURS EARLIER).
4. GENTLY PULL FILTER ELEMENT BACKWARDS TO REMOVE FILTER OUT FROM HOUSING.

⚠ CAUTION:

5. CLEAN PRIMARY ELEMENT ONLY BY TAPPING VERTICALLY ONLY ON CLEAN FLOOR. DON'T TAP DIAGONALLY/AT AN INCLINED ANGLE.
6. SECONDARY ELEMENT SHOULD NOT BE CLEANED OR REMOVED DURING CLEANING OF PRIMARY ELEMENT.
7. USE CLEAN CLOTH TO WIPE SEALING AREAS OF FILTER ELEMENT WITHOUT REMOVING SECONDARY ELEMENT.
8. ENSURE PROPER SEATING OF FILTER INTO HOUSING BEFORE LATCHING THE COVER. DO NOT USE LATCHES ON THE COVER TO FORCE THE FILTER INTO AIR CLEANER WHICH COULD CAUSE DAMAGE TO HOUSING AND WILL VOID THE WARRANTY.
9. THE VACUATOR VALVE SHOULD ALWAYS BE IN PERFECTLY DOWNWARD DIRECTION.



11203019

4

7



3

8



9



10

SAFETY INSTRUCTION

- IT IS ESSENTIAL TO READ THE MANUAL CAREFULLY.
- DO NOT TAKE OFF BELT OR ADJUSTMENT WHILE TRACTOR IS RUNNING.
- DO NOT ENTER OR EXIT FROM THE TRACTOR WHILE IS IN MOTION EXCEPT THE EMERGENCY.
- DO NOT STAND IN-BETWEEN THE TRACTOR AND EQUIPMENT WHEN OPERATING THE CONTROL.
- KEEP CLOTHING HAND AND FEET AWAY FROM MOVING PARTS.
- DO NOT MAKE ANY ADJUSTMENT WHEN TRACTOR IS IN OPERATION.
- WEAR ADEQUATE FOOTWEAR AND SNUG-FITTING CLOTHING.
- DO NOT SIT OR STAND ON UNSAFE PLACE WHEN TRACTOR IS RUNNING.
- KEEP DISPLAY BOARDS, HANDLES AND DRIVERS POSITION CLEAN.
- KEEP ALL SAFETY GUARDS IN PLACE WHILE WORKING.
- MAKE SURE THAT NO TRAINS ARE COMING BEFORE CROSSING THE UNGUARDED RAILWAY CROSSING

FOR YOUR REGIONAL LANGUAGE SCAN THIS QR CODE



11203036

12



11

WARNING

ENGINE PRECAUTION

- FOR FIRST 100HRS. OPERATE TRACTOR WITH LOAD ONLY (LIKE CULTIVATOR, LOADED TROLLEY ETC.)
- AVOID UNNECESSARY ENGINE IDLING

PTO PRECAUTION

- KEEP HANDS, FEET AND CLOTHING AWAY FROM PTO AND OTHER MOVING PARTS.
- DISENGAGE PTO AND SHUT OFF ENGINE BEFORE SERVICING TRACTOR OR IMPLEMENTS.
- KEEP PTO COVER SHIELDS IN PLACE IN CASE OF NOT USE OF PTO

TYRE INFLATION PRESSURE

TYRE SIZE		INFLATION PRESSURE (KG/CM ²)
FRONT	180/85D12 (Agricultural)	2.53
	23x8.5-12 (Turf)	1.54
	23x8.5-12 (Floatation)	2.46
	6.5/80-12 (Agricultural-Wide)	2.53
	220/55R12 (Galaxy Garden Pro)	1.79
REAR	23x8.5-12 (Wider F-Agri)	1.00
	5.00x12 (Basic Agri)	2.10
	8.3 X 20 (Agricultural)	2.46
	33x15.5-16.5 (Turf)	1.54
	33x15.5-16.5 (Floatation)	1.54
	280/70R18 (Agricultural-Wide)	1.54
	280/70R16 (Galaxy Garden Pro)	1.58
	8.00x18 (Basic AgriAgricolo di base)	1.60

FOR YOUR REGIONAL LANGUAGE SCAN THIS QR CODE



11203037

13




16



14


15

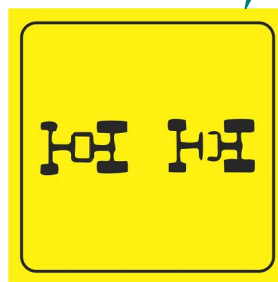

17




18

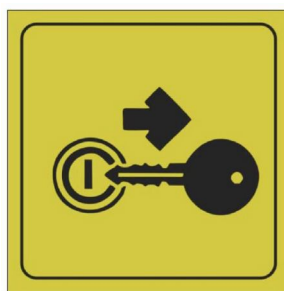

19



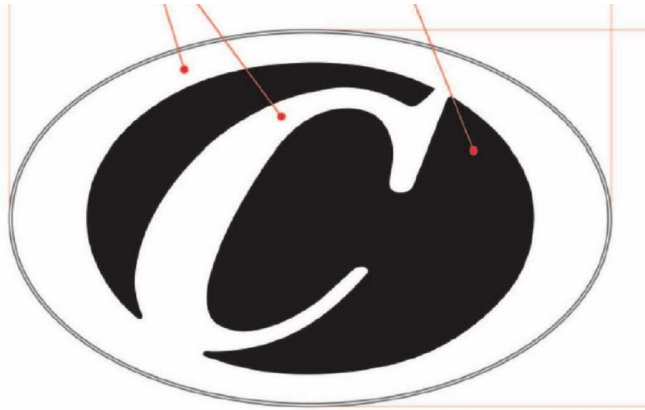

20



21



22



23




24

25





26

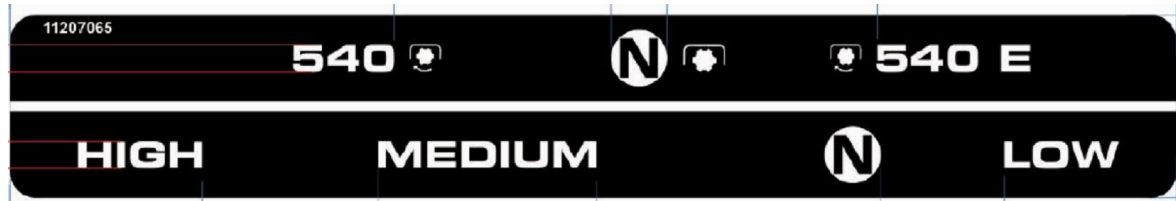


27

PRE DELIVERY INSPECTION

Date : _____ Sign : _____

28

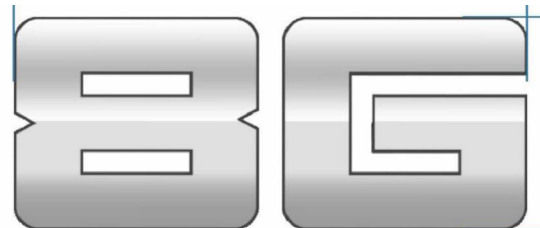

30

FINAL APPROVAL

Product Code : _____



Date : _____ Sign : _____

CAPTAIN TRACTORS PVT. LTD.
11200101.00

29

31



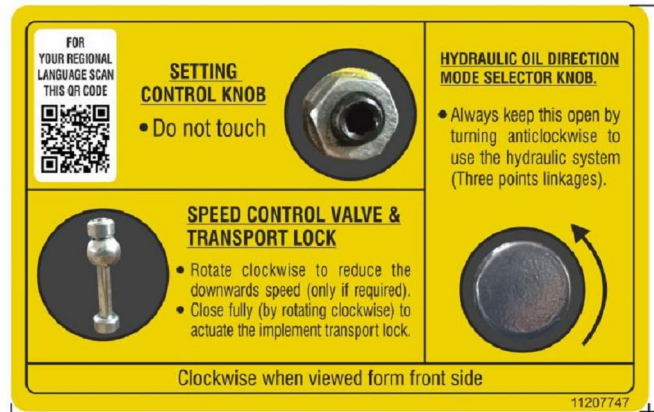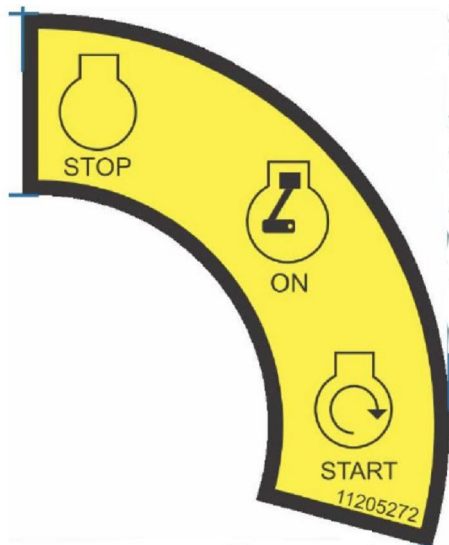


32

35



33

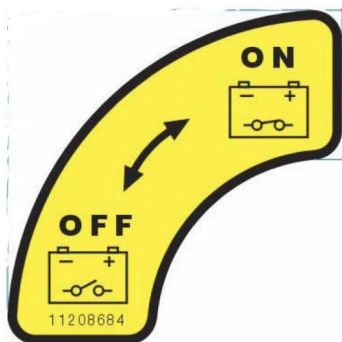

36


34



DECALS & STICKERS

MODEL :- 263
ASSEMBLY NO. :-11309275


Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11202140	Decals 3D ""CAPTAIN""	2	
2	11202144	DECALS, "4X4"	2	
3	11202768	STICKER, WARNING SIGNAL	1	
4	11203018	INSTRUCTION STICKER DRY AIR CLEANER	1	
5	11203030	STICKER RADIATOR (273)	1	
6	11203031	STICKER BATTERY (273)	1	
7	11203032	STICKER SEAT (273)	1	
8	11203033	STICKER WARNING (273)	1	
9	11203034	STICKER DRAWBAR (273)	1	
10	11203036	STICKER SAFETY INSTRUCTION (273)	1	
11	11203037	STICKER TYRE INFLATION PRESSURE (273)	1	
12	11203077	STICKER JACK POINT	3	
13	11203078	STICKER PARKING BRAKE	1	
14	11203079	STICKER PTO SAFETY	1	
15	11203083	STICKER HAND THROTTLE LEVER	1	
16	11203085	STICKER 4WD-2WD	1	
17	11203086	STICKER READ OPERATOR MANUAL	1	
18	11203087	STICKER BONNET LOCK	1	
19	11203088	STICKER MOVING PART WARNING	1	
20	11203258	""3D ""C"" EMBLEM"	1	
21	11203287	STICKER DIFFERENTIAL LOCK (3+1)	1	
22	11203288	STICKER, OIB	1	
23	11204826	DECALS DIFFENTIAL LOCK (STAGE -V)	1	
24	11204827	DECALS MITSUBISHI (STAGE -V)	2	
25	11204878	STICKER - KEEP HEAD AWAY WHILE CLOSING THE	1	
26	11204972	STICKER POSITION LEVER	1	
27	11207065	STICKER ,H-M-L & PTO	1	
28	11205164	STICKER, PRE DELIVERY INSPECTION	1	
29	11205165	STICKER, FINAL APPROVAL	1	
30	11205198	DECAL 8G	2	
31	11205271	DECALS 263 (4WD)	2	
32	11205272	STICKER IGNITION	1	
33	11205398	THE EIGHT GENERATION (DOME) LABEL	2	
34	11205507	DECALS (STAGE -V)	2	
35	11207747	STICKER PRV INSTRUCTION	1	
36	11208684	STICKER BATTERY CUTOFF	1	

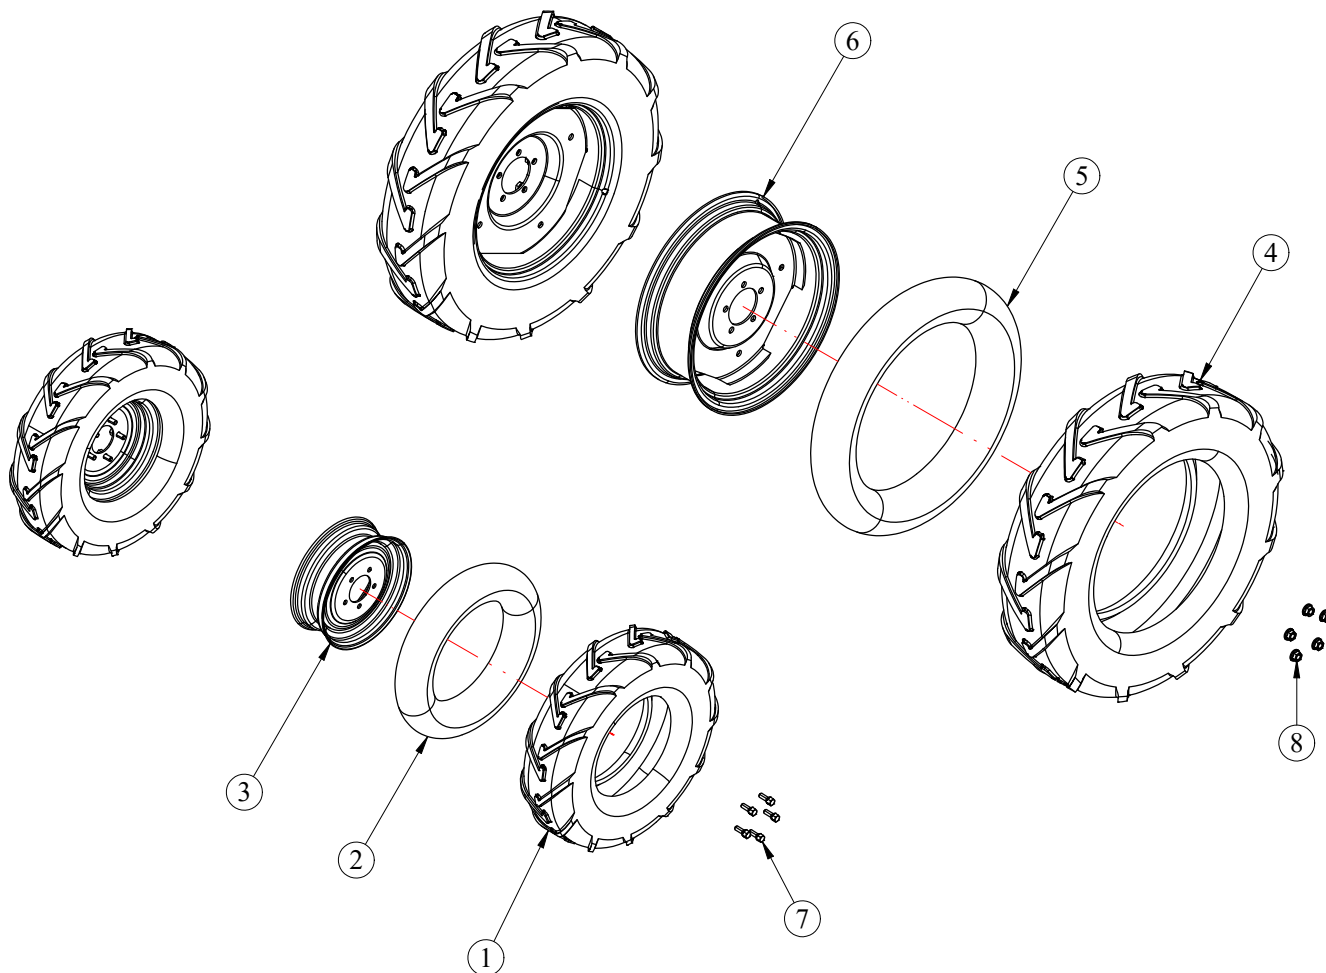

FRONT & REAR WHEEL ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305568


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11404727	180/85D12 6PR BKT TR128 E TT	2	
2	11401878	TUBE- 6.00 X 12	2	
3	11403038	WHEEL RIM 4JA X 12	2	
4	11402459	TYRE, 8.3 X 20 (BKT)	2	
5	11402756	TUBE, REAR 8.3 x 20 (BKT)	2	
6	11401866	WHEEL RIM REAR - W7 x 20	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11205985	NUT FLANGE HEADED, REAR WHEEL	10	

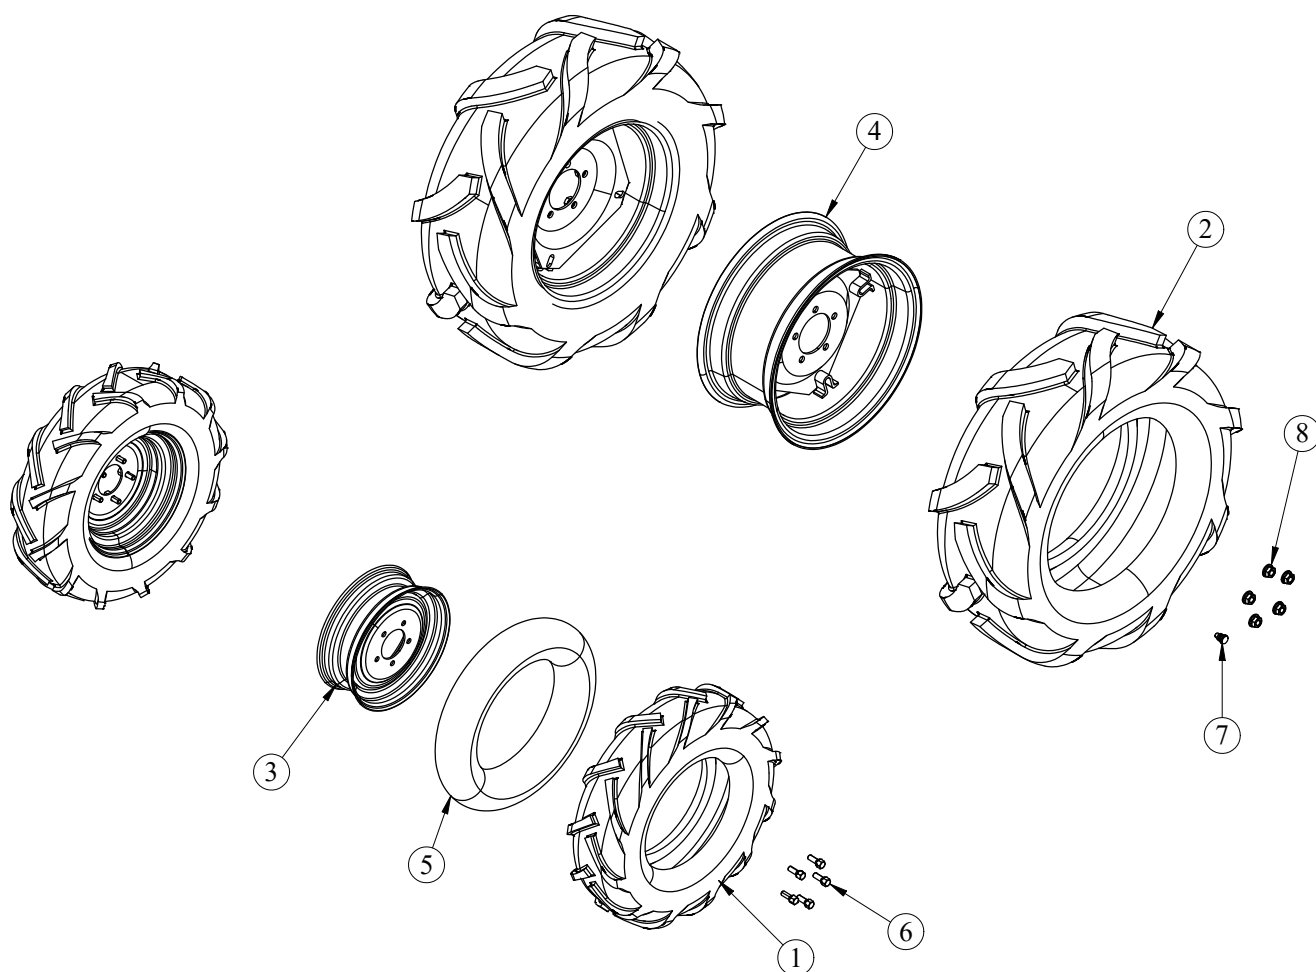

FRONT & REAR WHEEL ASSY (AGRI-WHEEL)

MODEL :- 263
ASSEMBLY NO. :- 11305630

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11404729	6.5/80-12 6PR BKT AS504 HD E TT (Agri wider)	2	
2	11404726	280/70 AGRIMAX RT765 E 114A8/B (Agri Wider)	2	
3	11403038	WHEEL RIM 4JA X 12	2	
4	11404707	WHEEL RIM -W9x18	2	
5	11401878	TUBE- 6.00 X 12	2	
6	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
7	11402287	VALVE TR 618A	2	
8	11205985	NUT FLANGE HEADED, REAR WHEEL	10	

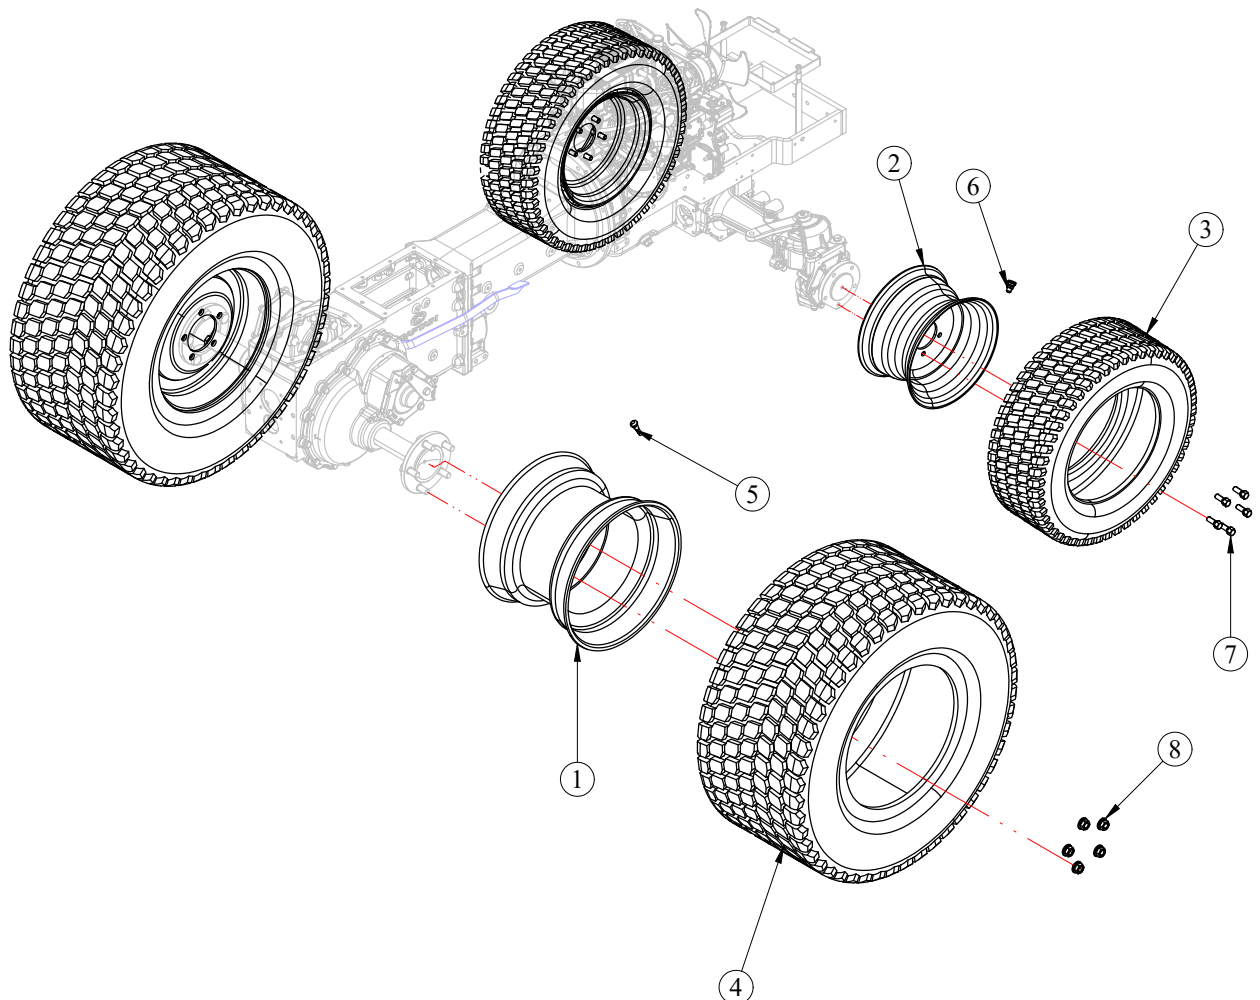


FRONT & REAR WHEEL ASSY (TURF)

MODEL :- 263

ASSEMBLY NO. :- 11305631

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402118	REAR TRACTOR WHEEL RIM - 16.5 X 12.00	2	
2	11402116	WHEEL RIM - 7.00 X 12	2	
3	11402112	TYRE 23 X 8.5-12 (TURF)	2	
4	11402114	TYRE 33 X 15.5-16.5 (TURF)	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11205985	NUT FLANGE HEADED, REAR WHEEL	10	

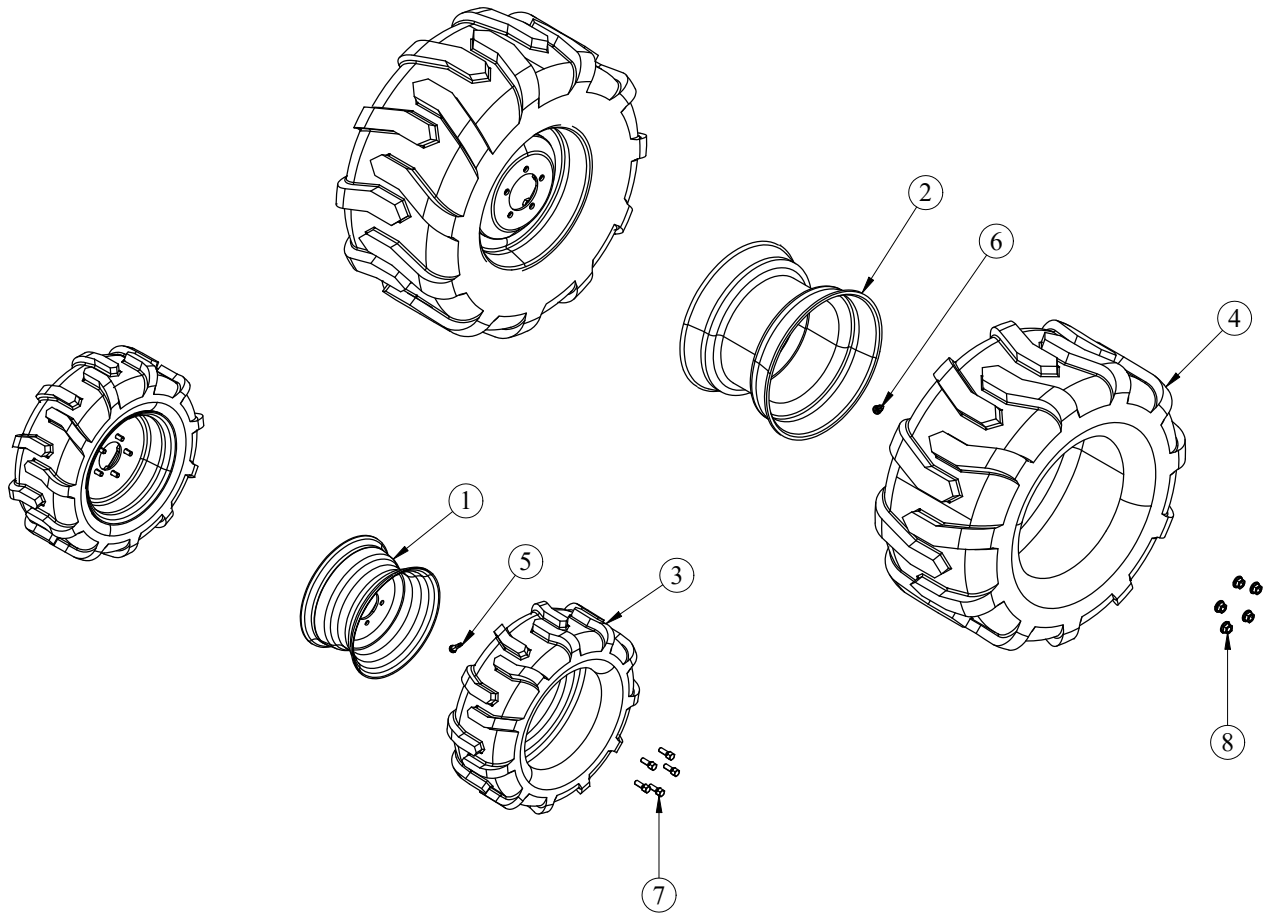


FRONT & REAR WHEEL ASSY (FLOTATION)

MODEL :- 263

ASSEMBLY NO. :- 11305632


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402116	WHEEL RIM - 7.00 X 12	2	
2	11402118	REAR TRACTOR WHEEL RIM - 16.5 X 12.00	2	
3	11402113	TYRE, 23x8.5-12 (FLOTATION)	2	
4	11404728	TYRE, 33x15.5-16.5 (FLOTATION)	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11205985	NUT FLANGE HEADED, REAR WHEEL	10	

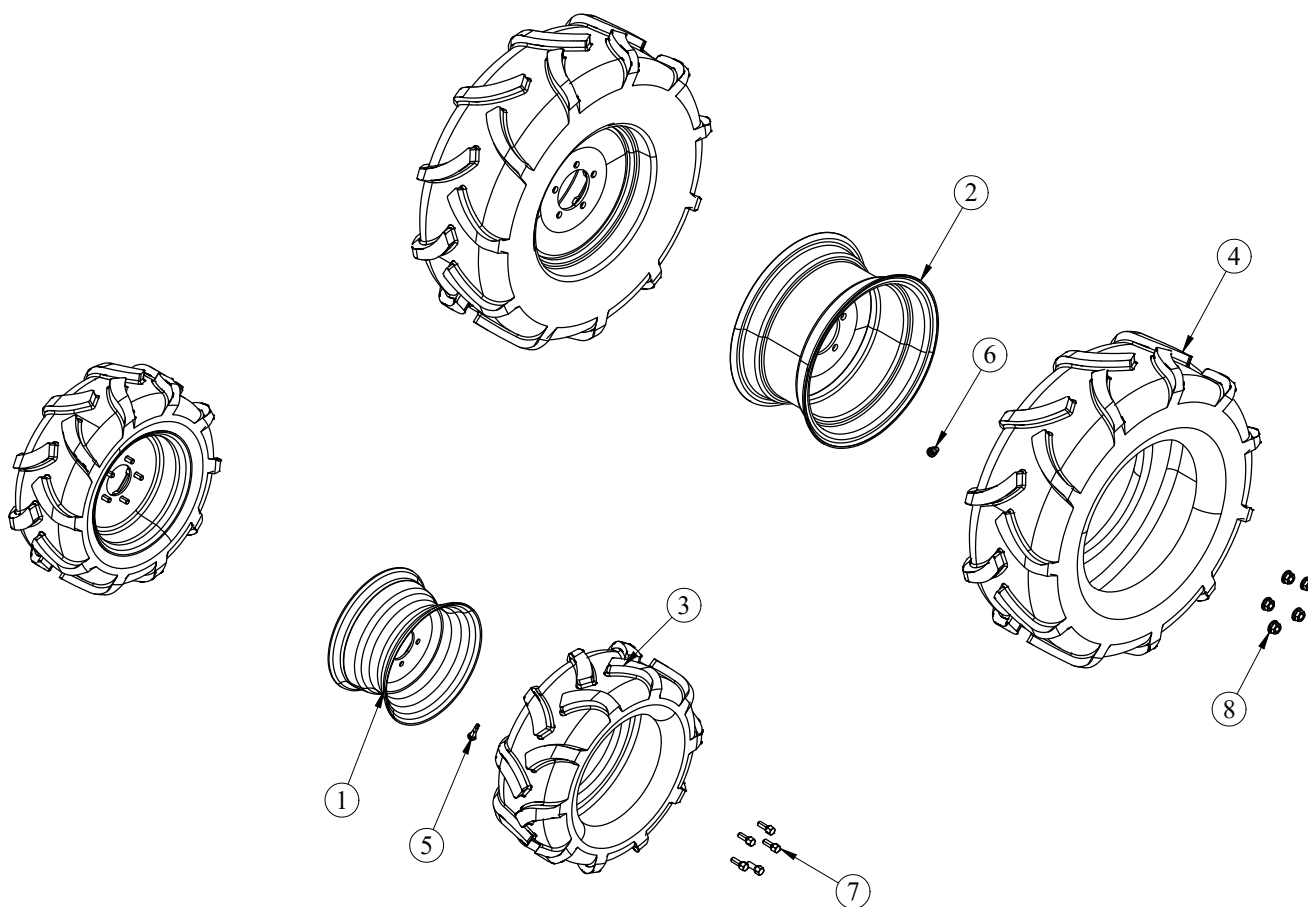

FRONT & REAR WHEEL ASSY (GARDEN GALAXY PRO)

MODEL :- 263
ASSEMBLY NO. :- 11305633


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402116	WHEEL RIM - 7.00 X 12	2	
2	11404853	WHEEL RIM -W9x16	2	
3	11404867	TYRE 220/55R12 (GALAXY GARDEN PRO)	2	
4	11404866	TYRE 280/70R16 (GALAXY GARDEN PRO)	2	
5	11402309	VALVE TR 414	2	
6	11402287	VALVE TR 618A	2	
7	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	
8	11205985	NUT FLANGE HEADED, REAR WHEEL	10	

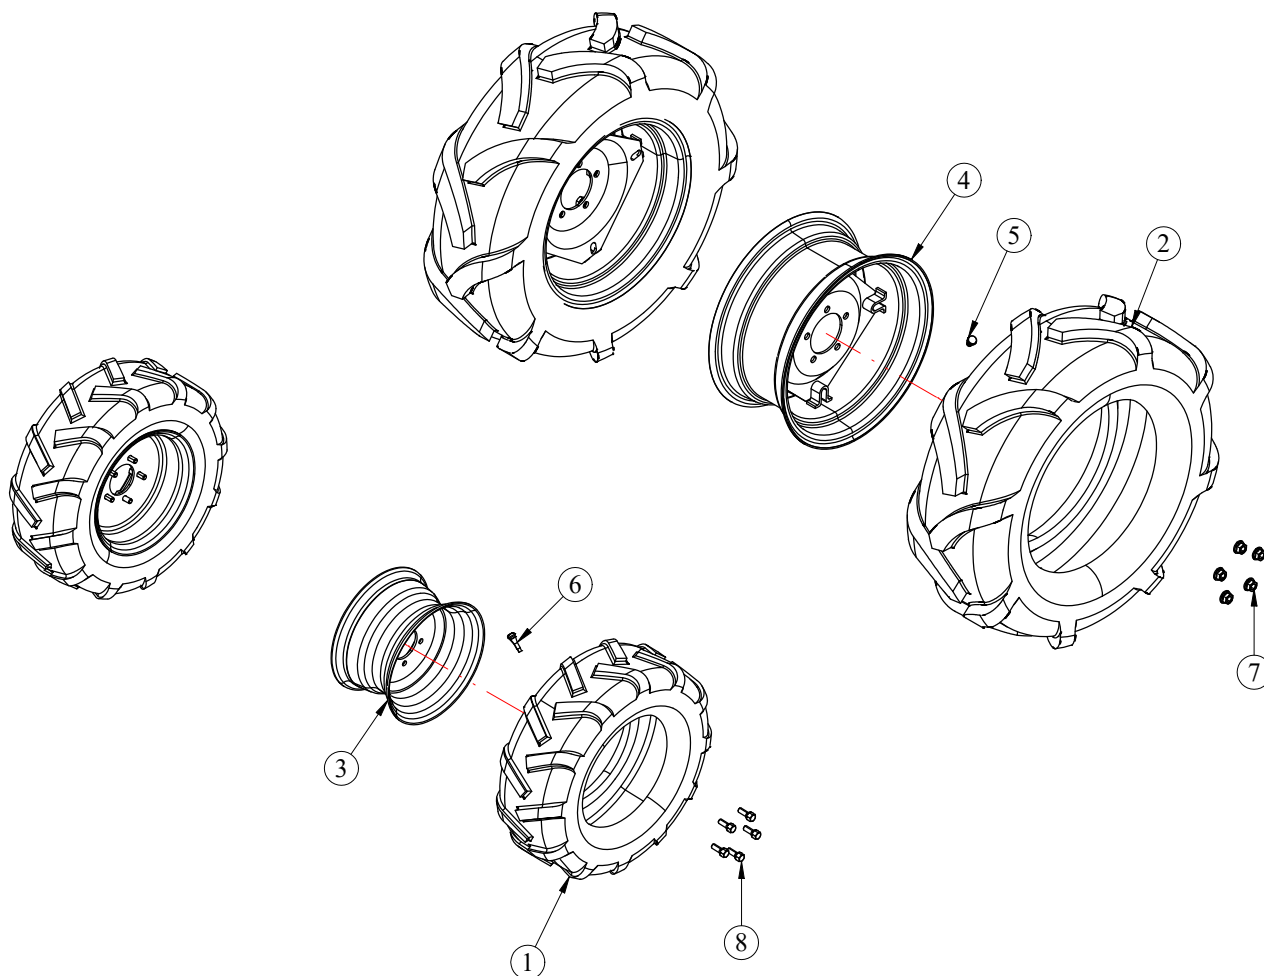

FRONT & REAR WHEEL ASSY (WIDER F- AGRI)

MODEL :- 263
ASSEMBLY NO. :- 11305634


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11405088	23x8.50-12 6PR BKT TR315 TL (Agri Wider F)	2	
2	11404726	280/70 AGRIMAX RT765 E 114A8/B (Agri Wider)	2	
3	11402116	WHEEL RIM - 7.00 X 12	2	
4	11404707	WHEEL RIM -W9x18	2	
5	11402287	VALVE TR 618A	2	
6	11402309	VALVE TR 414	2	
7	11205985	NUT FLANGE HEADED, REAR WHEEL	10	
8	11501144	HEX BOLT 1/2" UNF 20 TPI [10.9]	10	

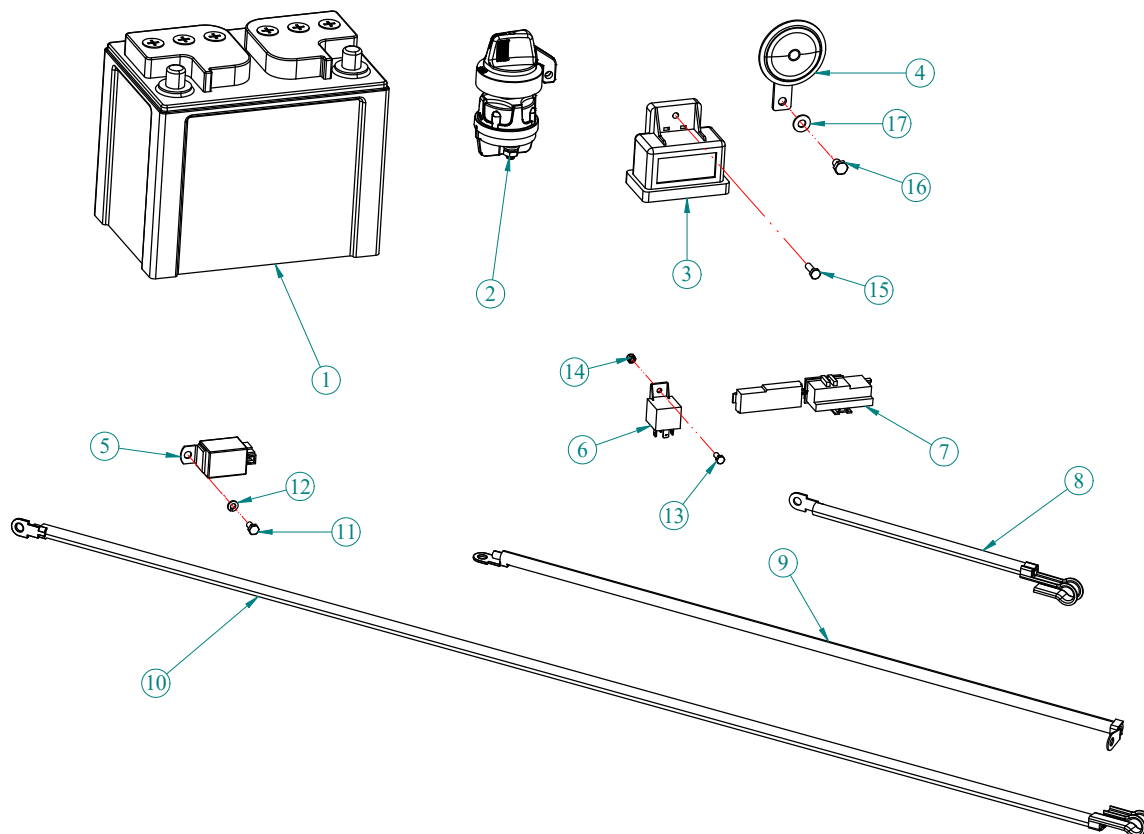

ELECTRICAL COMPONENT 1

MODEL :- 263
ASSEMBLY NO. :- 11308568


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11400548	BATTERY 65A (FEF2-MFS70)	1	
2	11407750	Switch Battery cut-off (LF)	1	
3	11404993	GLOW DURATION UNIT	1	
4	11401992	HORN 12V	1	
5	11405124	ELECTRONIC FLASHER-LED	1	
6	11404773	RELAY 70A	1	
7	11405005	9 POLE FUSE BOX ASSY.	1	
8	11402775	BATTERY CABLE SMALL	1	
9	11407749	BATTERY CABLE 750-L	1	
10	11407748	BATTERY CABLE 1350-L	1	
11	11500484	HEX. BOLT M6 X 12 (F.T.)	1	
12	11500073	SPRING WASHER - 6 mm	1	
13	11501034	HEX. BOLT M5x12 (F.T.) 8.8	1	
14	11500931	NYLOCK HEX. NUT M5	1	
15	11500426	HEX. BOLT M6x20 (F.T.)8.8	1	
16	11500489	HEX BOLT M8 X 12 (F.T.)	1	
17	11501068	PLAIN WASHER Ø8.5XØ19X1.5	1	

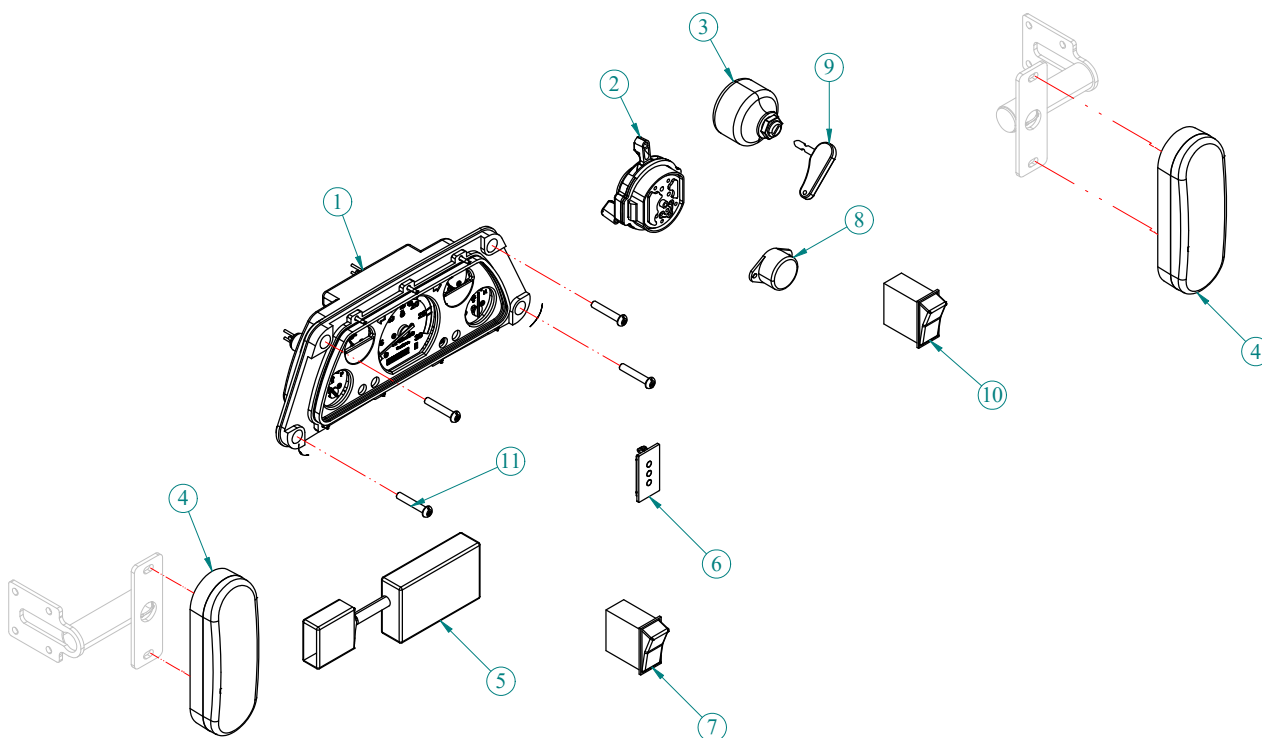

ELECTRICAL COMPONENT 2

MODEL :- 263
ASSEMBLY NO. :- 11305558


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11402490	INSTRUMENT CLUSTER (273)	1	
2	11405408	PANEL MOUNTED COMBINATION SWITCH ASSEMBLY	1	
3	11401990	STARTER SWITCH ASSEMBLY	1	
4	11405080	FENDER LAMP ASSEMBLY - FRONT (LED)	2	
5	11205209	ELECTRONIC CONTROL UNIT(ETS-TYPE)	1	
6	11404730	LED INDICATOR	1	
7	11401988	HAZARD WARNING SWITCH ASSEMBLY	1	
8	11405138	BUZZER	1	
9	11201991	KEY (MOULDED) STARTER SWITCH	1	
10	11405541	WORK LAMP SWITCH	1	
11	11502176	SCREW M6 X 35	4	

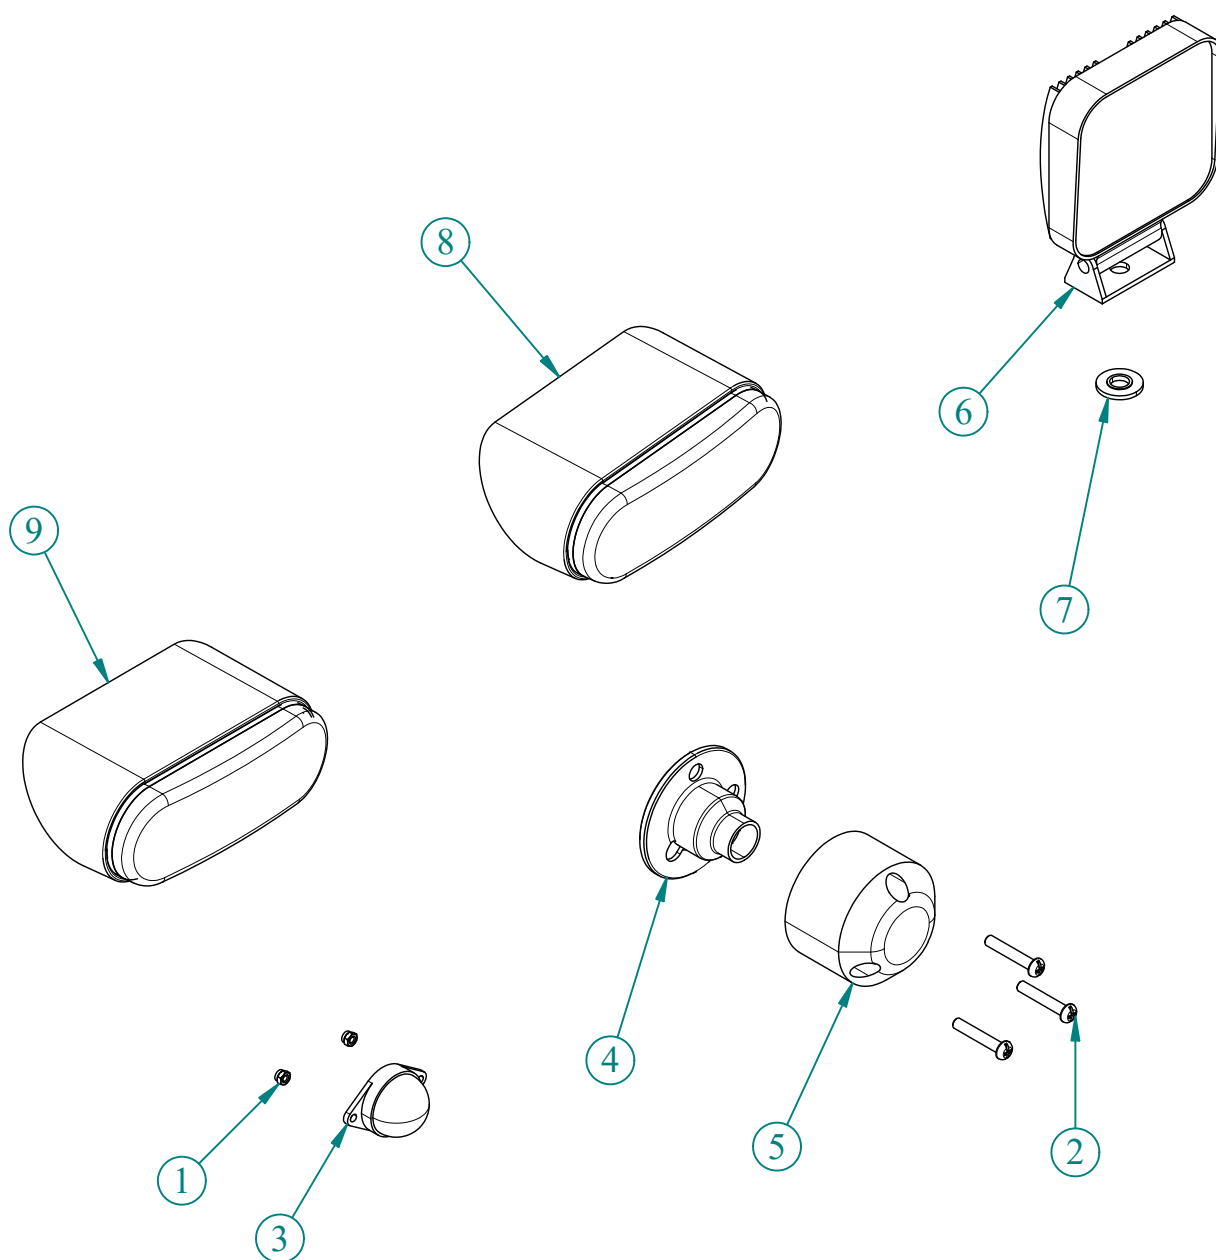


ELECTRICAL COMPONENT 3

MODEL : - 263
ASSEMBLY NO. :-11305559

Sr. No.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11505137	NYLOCK HEX. NUT M4	2	
2	11502176	SCREW M6 X 35	3	
3	11402085	LICENSE LAMP PLATE 12V-10W	1	
4	11404768	RUBBER COVER SEVEN PIN SOCKET	1	
5	11400541	SEVEN PIN SOCKET	1	
6	11405204	LED PLOUGH LAMP ASSY.(12V)	1	
7	11205509	SPECIAL WASHER PLOUGH LIGHT MOUNTING	1	
8	11405081	FENDER LAMP ASSEMBLY-REAR LH (LED)	1	
9	11405082	FENDER LAMP ASSEMBLY-REAR RH (LED)	1	
10	11405270	WIRING HARNESS ASSY (263) 8G (WITH FUSE BOX)	1	

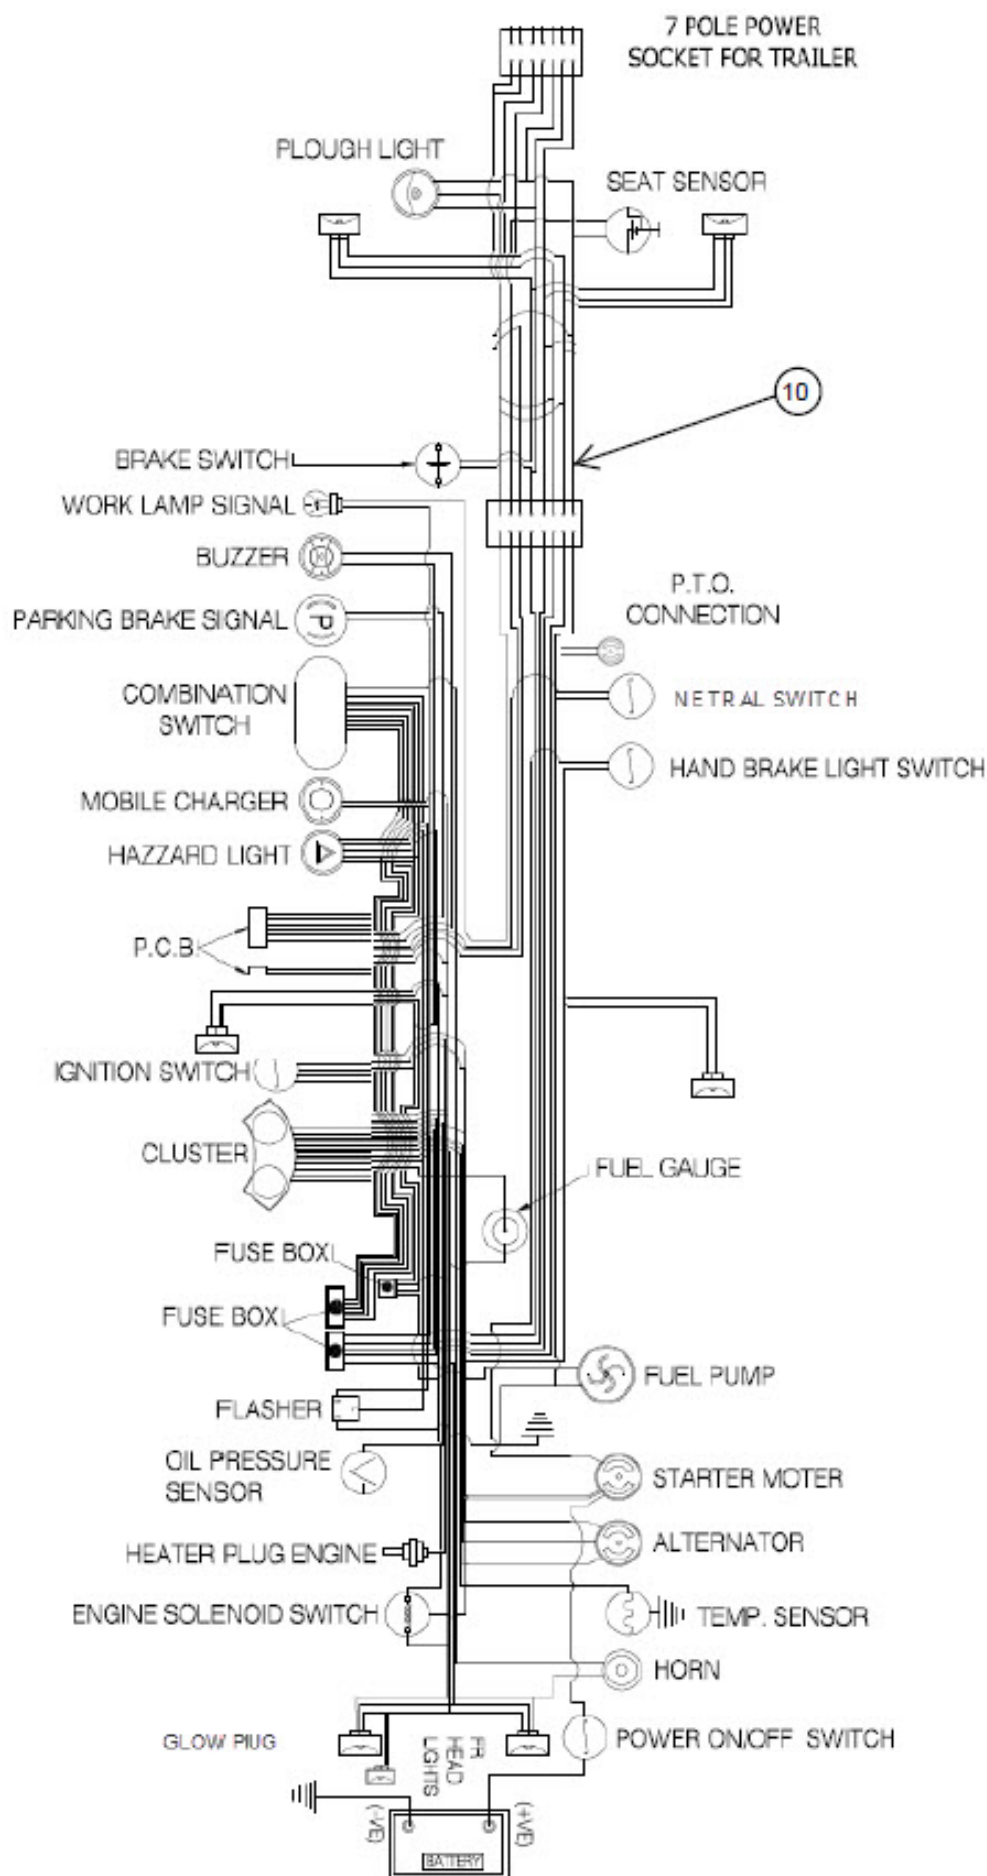

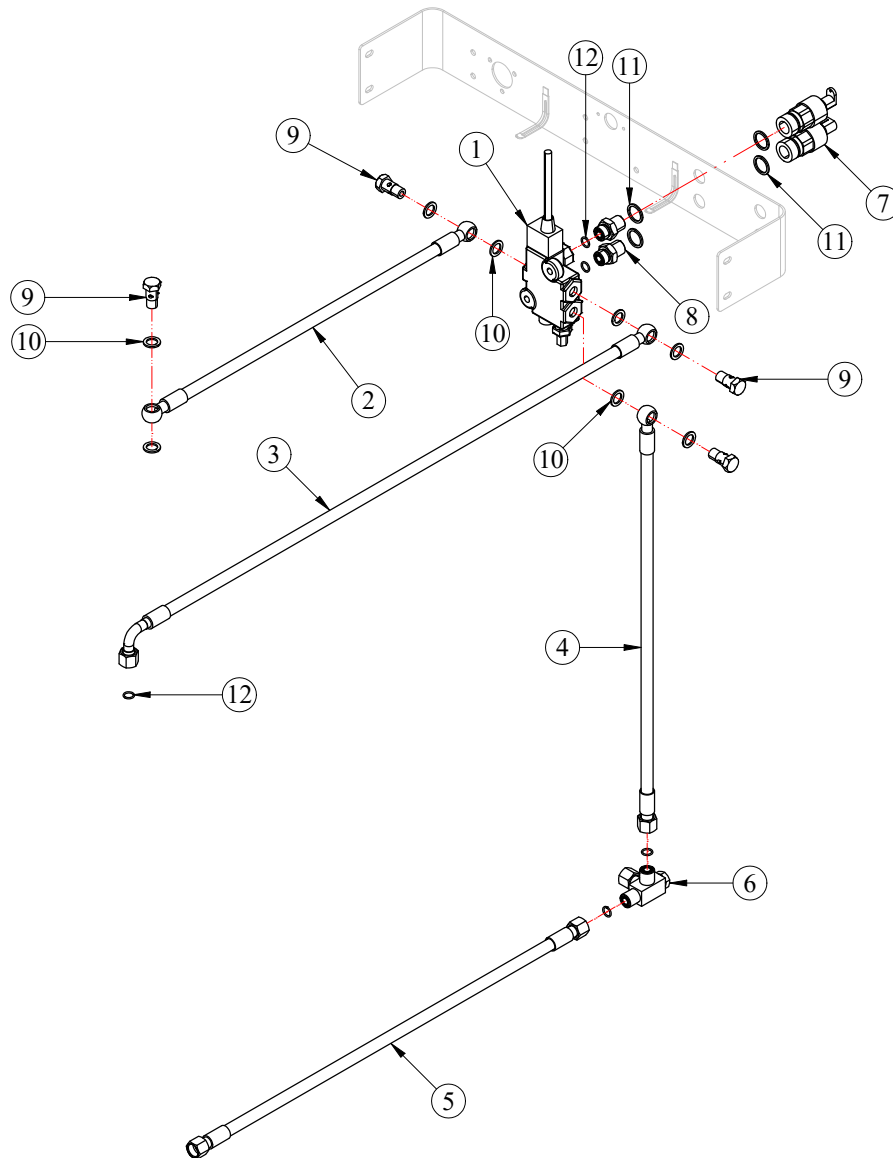


DIRECTION CONTROL VALVE -2

MODEL :- 263

ASSEMBLY NO. :- 11305638

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11205534	HYDRAULIC DISTRIBUTER VALVE SECONDARY (5K)	1	
2	11205330	PIPE-DC1 TO DCV2	1	
3	11205331	PIPE- DCV 2 TO LIFT	1	
4	11205726	PIPE-DCV-2 TO T-NIPPLE	1	
5	11205727	PIPE-PRIMARY PIPE STEERING TO T NIPPLE	1	
6	11205641	T-NIPPLE	1	
7	11202334	FEMALE QRC	2	
8	11205327	NIPPLE 1/2" BSP X 13/16" UN	2	
9	11502336	BANJO BOLT 3/8	4	
10	11402783	DOWTY SEAL 3/8	8	
11	21504542	DOWTY SEAL 1/2	4	
12	11205329	O-RING 12.42X1.78	5	

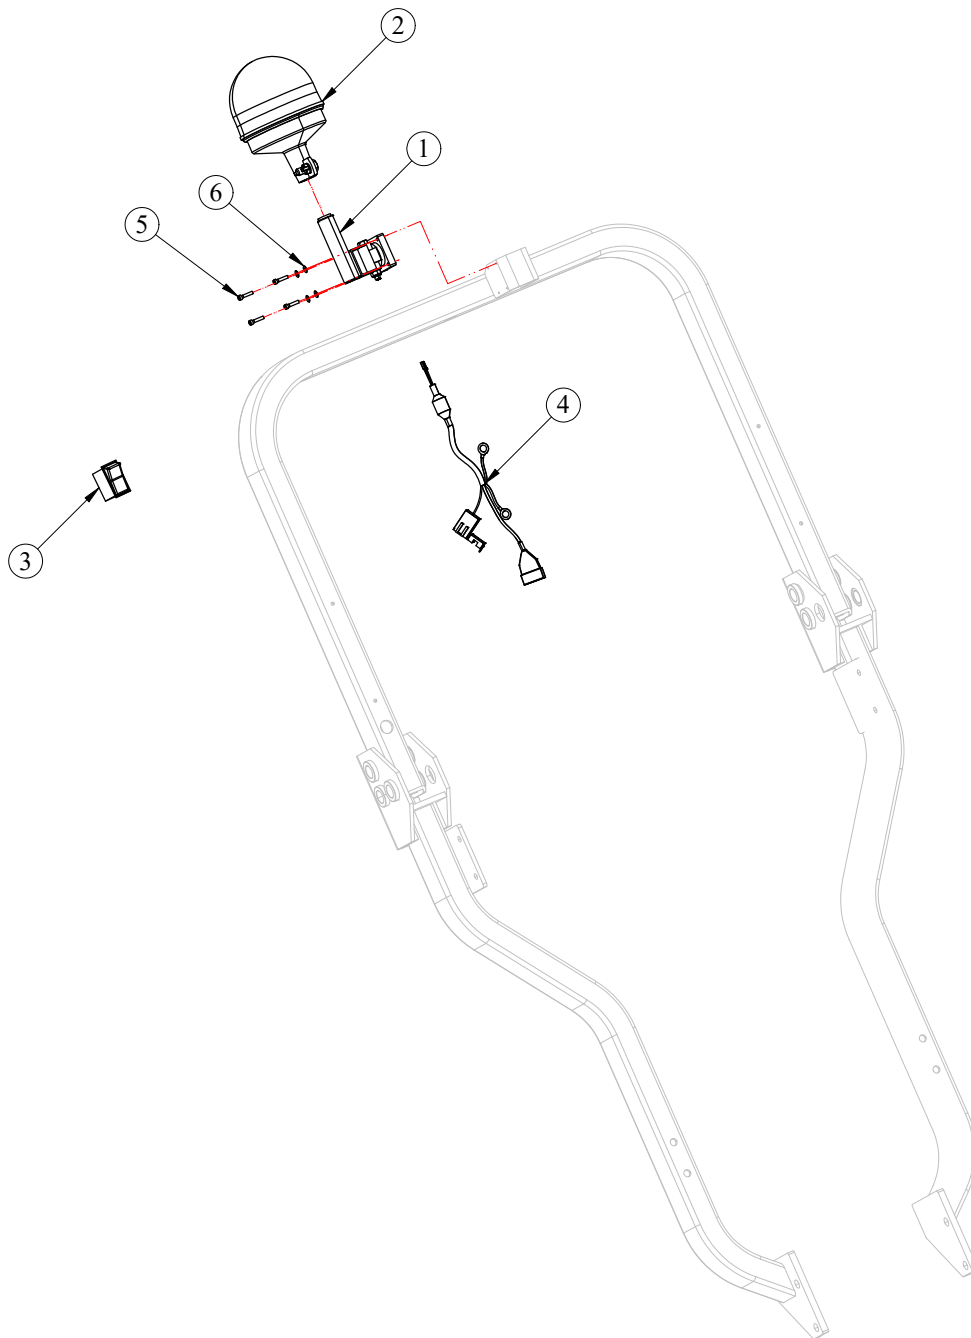


BEACON LAMP ASSEMBLY

MODEL :- 263

ASSEMBLY NO. :- 11305635


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11403057	MOUNTING STAND ASSY. (BEACON LAMP)	1	
2	11402084	BEACON LAMP ASSEMBLY	1	
3	11403161	SWITCH BEACON LAMP	1	
4	11403164	WIRING HARNESS ASSEMBLY	1	
5	11503159	ALLEN BOLT M4x20	4	
6	11503166	PLAIN WASHER Ø4 x Ø10 x 0.5	4	

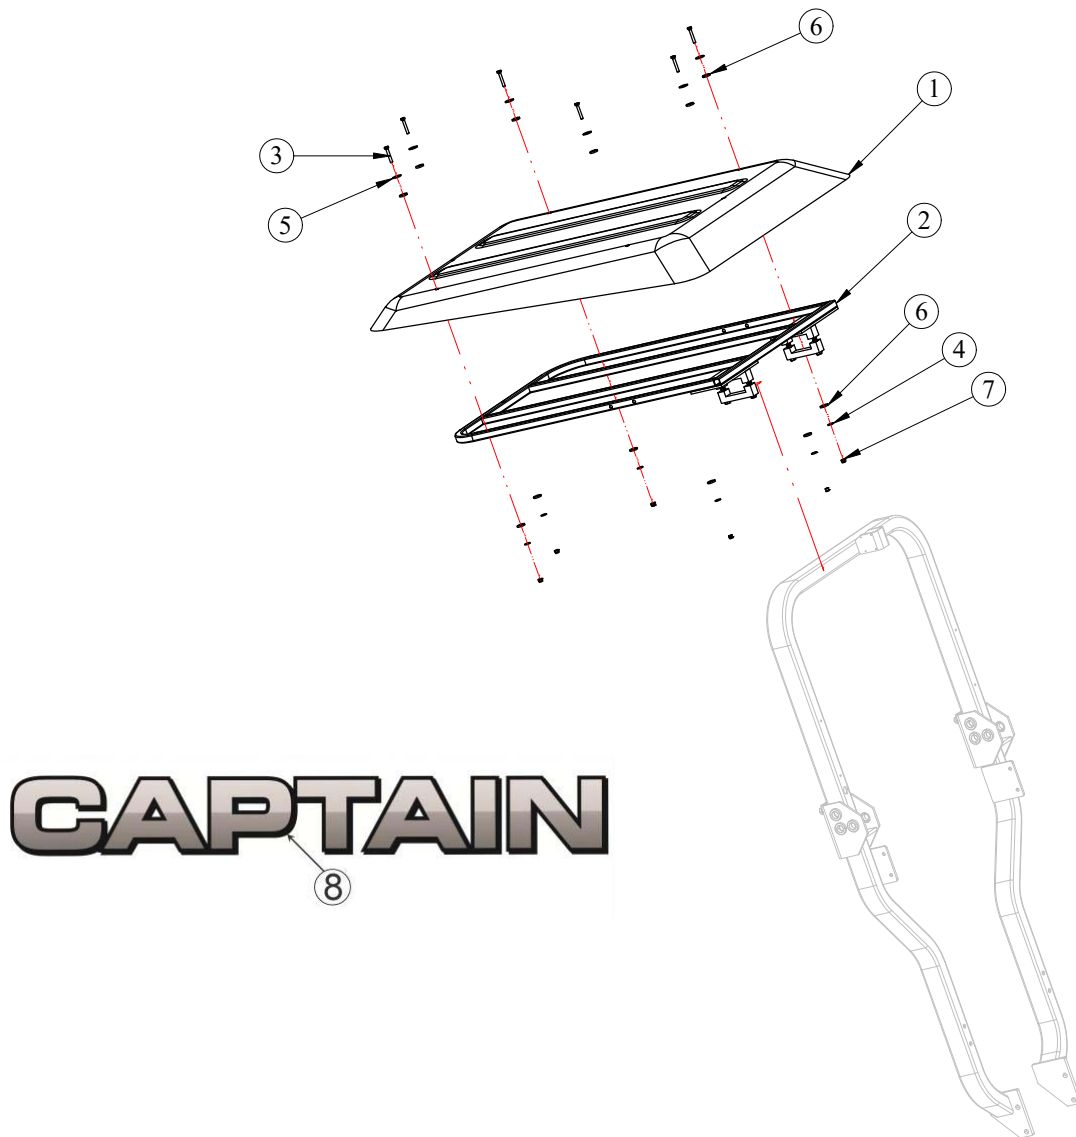

CANOPY FRAME ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305637


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	10901915	CANOPY	1	
2	11205601	FRAME CANOPY MOUNTING	1	
3	11501077	HEX. BOLT M6x40 (F.T.) 8.8	6	
4	11501015	PLAIN WASHER Ø6.5xØ15x1.5	6	
5	11500485	PLAIN WASHER Ø6.5 X Ø23 X 1.5	6	
6	11201535	RUBBER WAHSER Ø9xØ22x3.5	12	
7	11500947	NYLOCK NUT M6	6	
8	11202093	DECALS, 2D CAPTAIN	2	

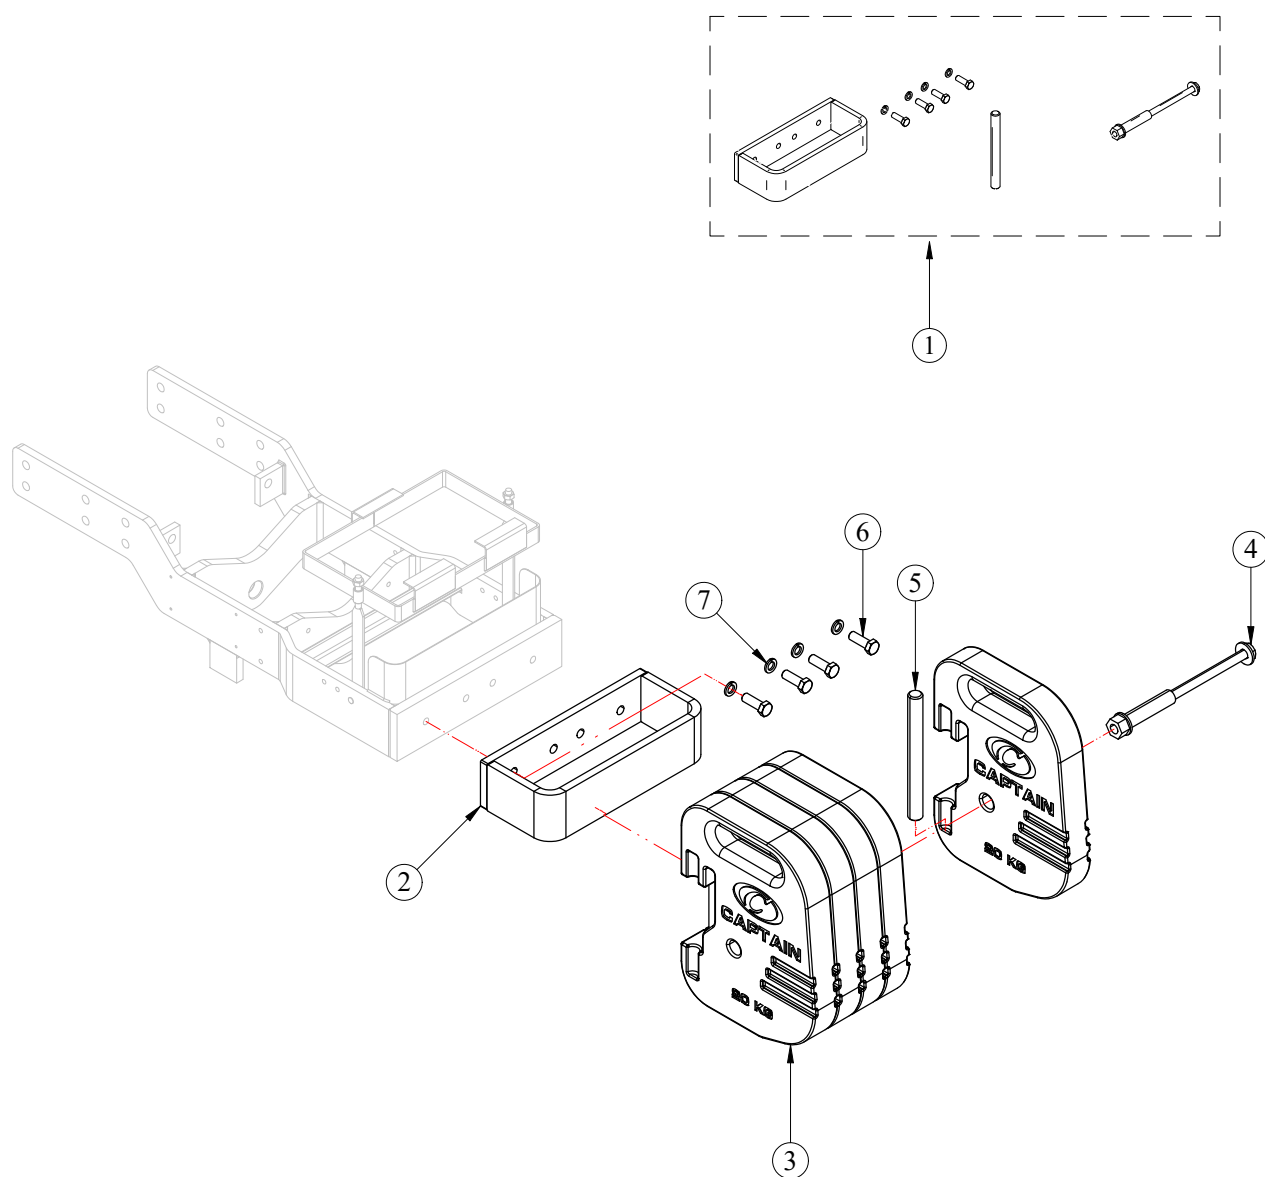

FRONT WEIGHT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305636


SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11304856	FRAME,FRONT WEIGHT ASSEMBLY 273	1	
2	11203142	FRAME ,FRONT WEIGHT (273)	1	
3	10902167	FRONT WEIGHT (20KG)	5	
4	10902169	ADJUSTABLE LOCKING BOLT	1	
5	10902168	ROD LOCKING (FRONT WEIGHT)	4	
6	11500768	HEX BOLT M12X35 (F.T.) [10.9]	4	
7	11500118	SPRING WASHER 12 mm	4	

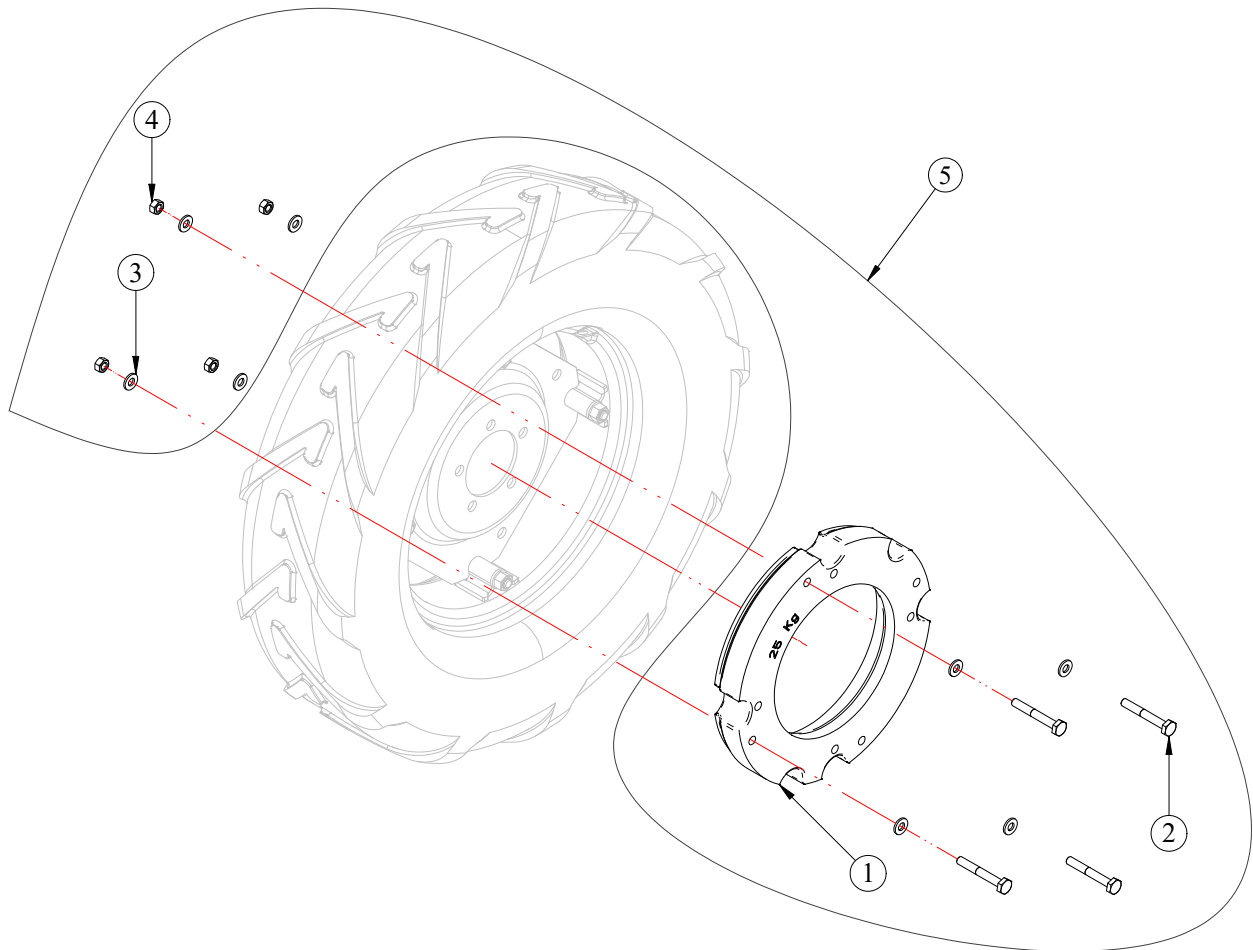

REAR WHEEL WIEGHT ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11305746

SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	10900698	WHEEL WEIGHT REAR	2	
2	11500404	BOLT M12X90	8	
3	11500080	PLAIN WASHER Ø12.5xØ26x3	16	
4	11500117	HEX NUT M12	8	
5	11304861	REAR WEIGHT ASSEMBLY	1	

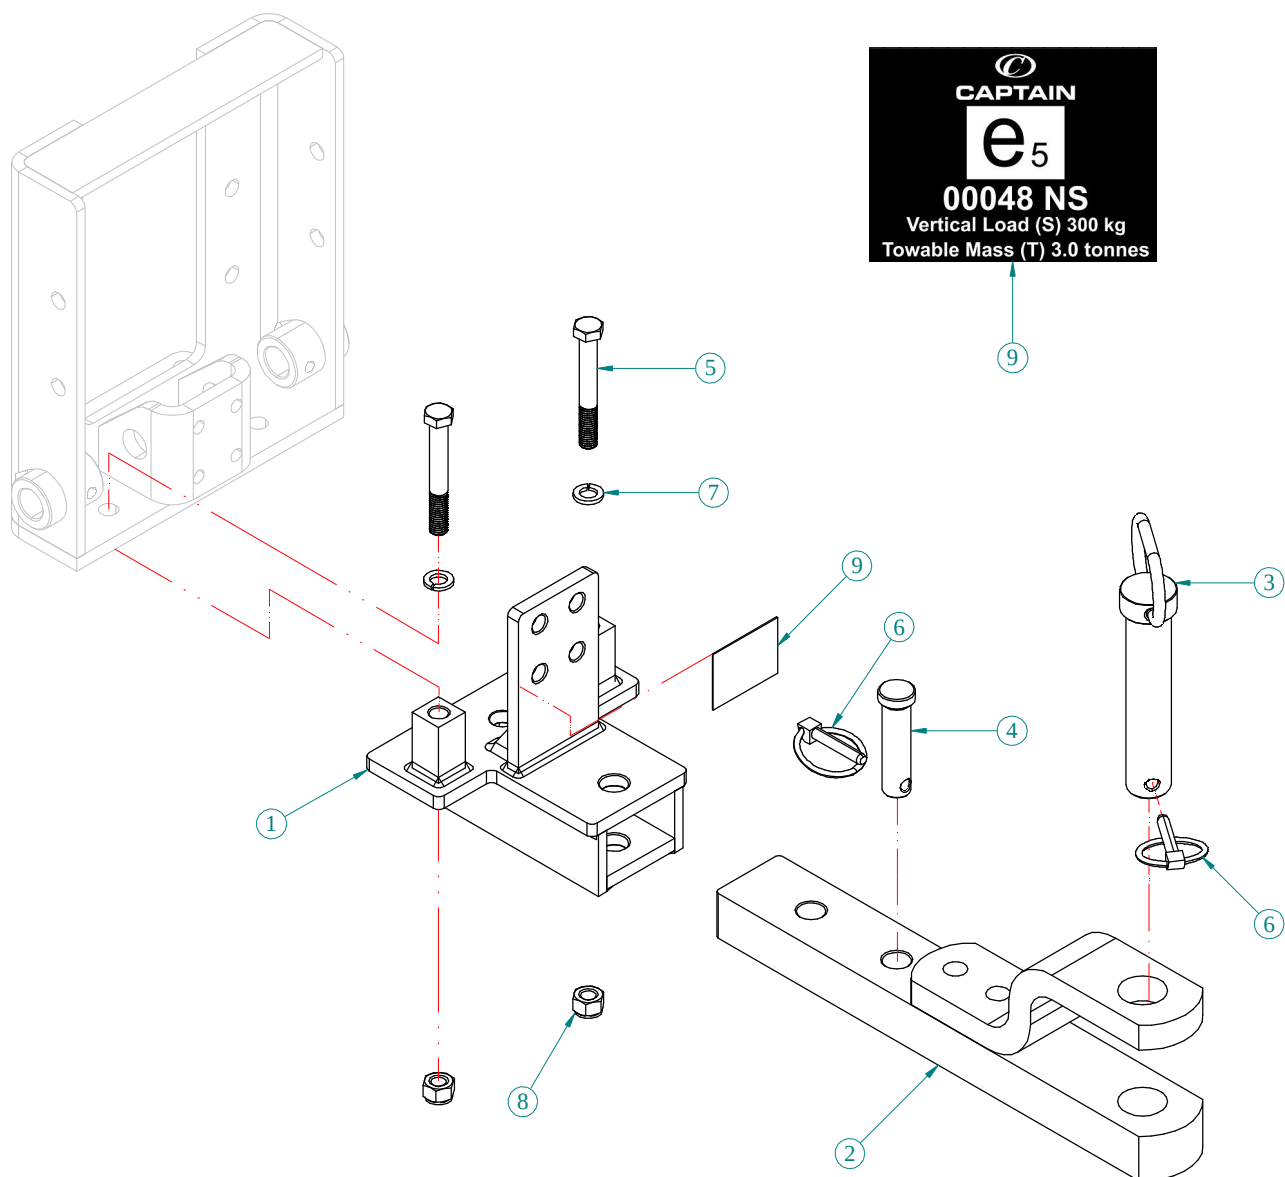

TOW HOOK ASSEMBLY

MODEL :- 263
ASSEMBLY NO. :- 11307698



SR. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	11207265	BRACKET TOW HOOK	1	
2	11207264	TOW HOOK	1	
3	11206643	HITCH PIN REAR COUPLE	1	
4	11207622	HITCH PIN TOW HOOK	1	
5	11507743	HEX BOLT M12X90 (H.T)- GRADE-10.9	2	
6	11200590	LINCH PIN	2	
7	11500118	SPRING WASHER 12 mm	2	
8	11501024	NYLOCK HEX. NUT M12	2	
9	11207742	DECAL REAR COUPLING	1	

CONTENTS


Sr. No.	Group Name	Page No.
ENGINE BODY		
1.	CYLINDER HEAD	108
2.	LIFTING EYE	110
3.	VALVE MECHANISM	112
4.	ROCKER COVER	114
5.	CAMSHAFT & TAPPET	116
6.	CRANKCASE (ASSY)	118
7.	CRANKCASE (OIL SEAL CASE)	120
8.	DRAIN COCK & PIPE	122
9.	MAIN BEARING	124
10.	TIMING GEAR CASE	126
11.	FLYWHEEL HOUSING	128
12.	OIL PAN	130
13.	ENGINE SUPPORT	132
14.	PISTON	134
15.	CONNECTING ROD	136
16.	CRANKSHAFT	138
17.	CRANK PULLEY	140
18.	FLYWHEEL	142
19.	TIMING GEAR	144
INLET & EXHAUST SYSTEM		
20.	INLET SYSTEM	146
21.	EXHAUST SYSTEM	148
OIL SYSTEM		
22.	OIL PUMP	150
23.	OIL STRAINER	152
24.	OIL SYSTEM	154
25.	OIL FILTER	156
26.	OL FILLER & GAME	158
27.	BREATHER	160
COOLING SYSTEM		
28.	WATER PUMP	162
29.	WATER PUMP PULLEY	164
30.	COOLING SYSTEM	166

31.	FAN	168
32.	FAN SPACER	170
33.	V-BELT	172
FUEL SYSTEM		
34.	FUEL SYSTEM	174
35.	FUEL SYSTEM (NOZZLE ASSY)	176
36.	FUEL FILTER	178
37.	GOVERNOR	180
38.	INJECTION PUMP	182
39.	FUEL INJECTION PUMP DRIVE	184
STARTING SYSTEM		
40.	STARTER (12V-1.7KW)	186
41.	GLOW PLUG & WIRE	148
42.	ALTERNATOR (12V-65A)	190
CONTROL SYSTEM		
43.	ENGINE CONTROL (STOP)	192
ACCESSORY		
44.	INSTRUMENT	194
45.	ACCESSORY	196
NAME PLATE		
46.	NAME PLATE	198
SPARE PARTS		
47.	OVERHAUL GASKET KIT	200

CYLINDER HEAD

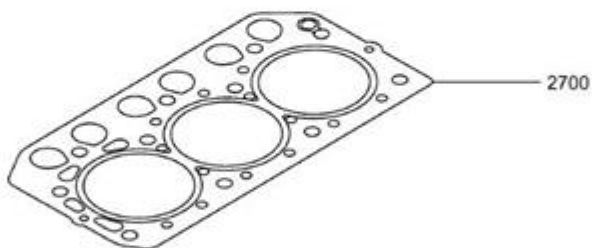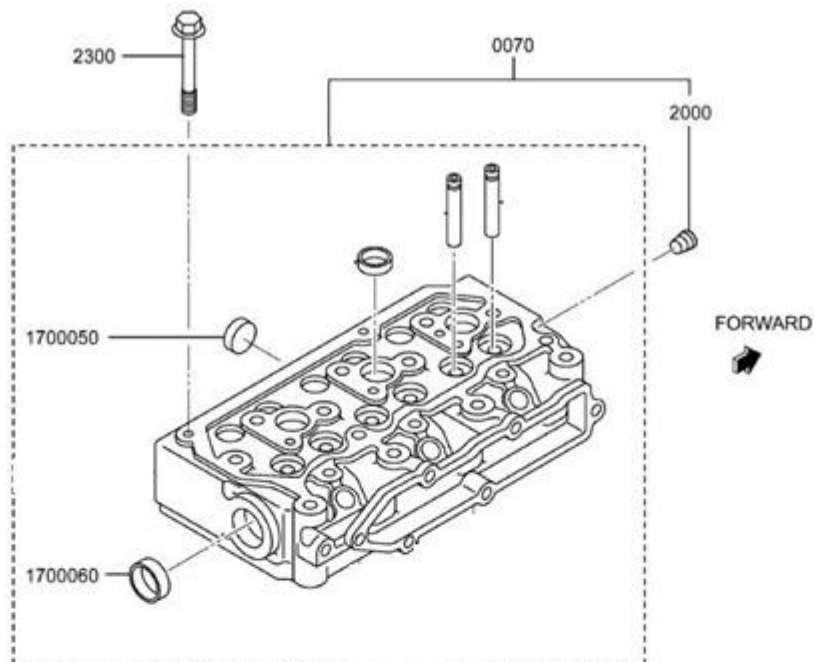


SUPPLY PARTS

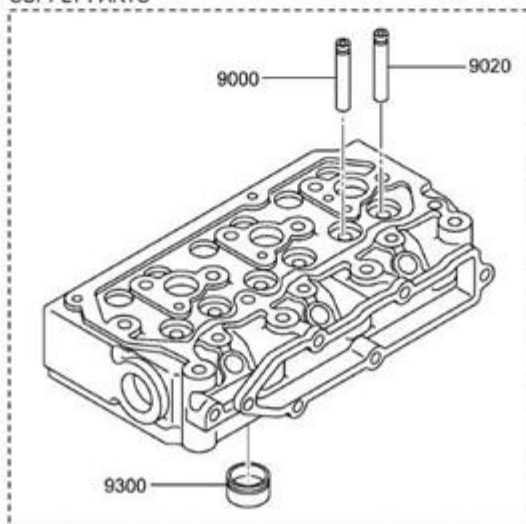

1. CYLINDER HEAD

Ref.No	Part No	Part Name	Description	Qty
0070	39207505	HEAD ASSY,CYLINDER		1
1700050	39207379	CAP,SEALING		5
1700060	39207407	CAP,SEALING		1
2000	39207398	PLUG,TAPERED	1/8	1
2300	39207447	BOLT,CYLINDER HEAD		11
2700	39204430	GASKET,CYLINDER HEAD		1
9000	39206435	GUIDE,EXHAUST VALVE	FINISHED	3
9020	39206434	GUIDE,INLET VALVE	FINISHED	3
9300	39207483	JET,COMBUSTION	FINISHED	3


LIFTING EYE

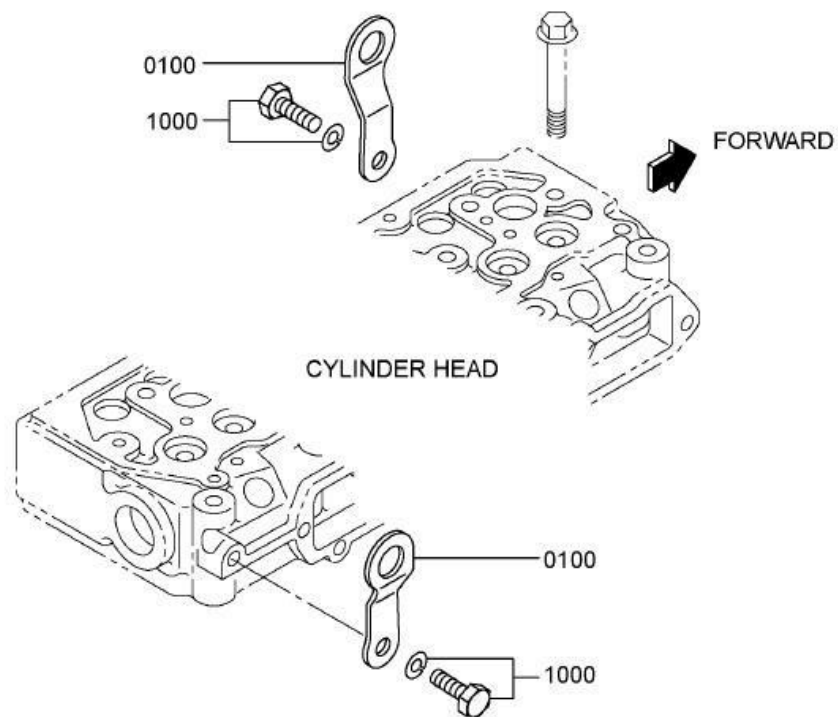

2. LIFTING EYE

Ref. No.	Part No	Part Name	Description	Qty
0100	39207421	HANGER, ENGINE		2
1000	39207395	BOLT, W/WASHER	B/W	2


VALVE MECHANISM

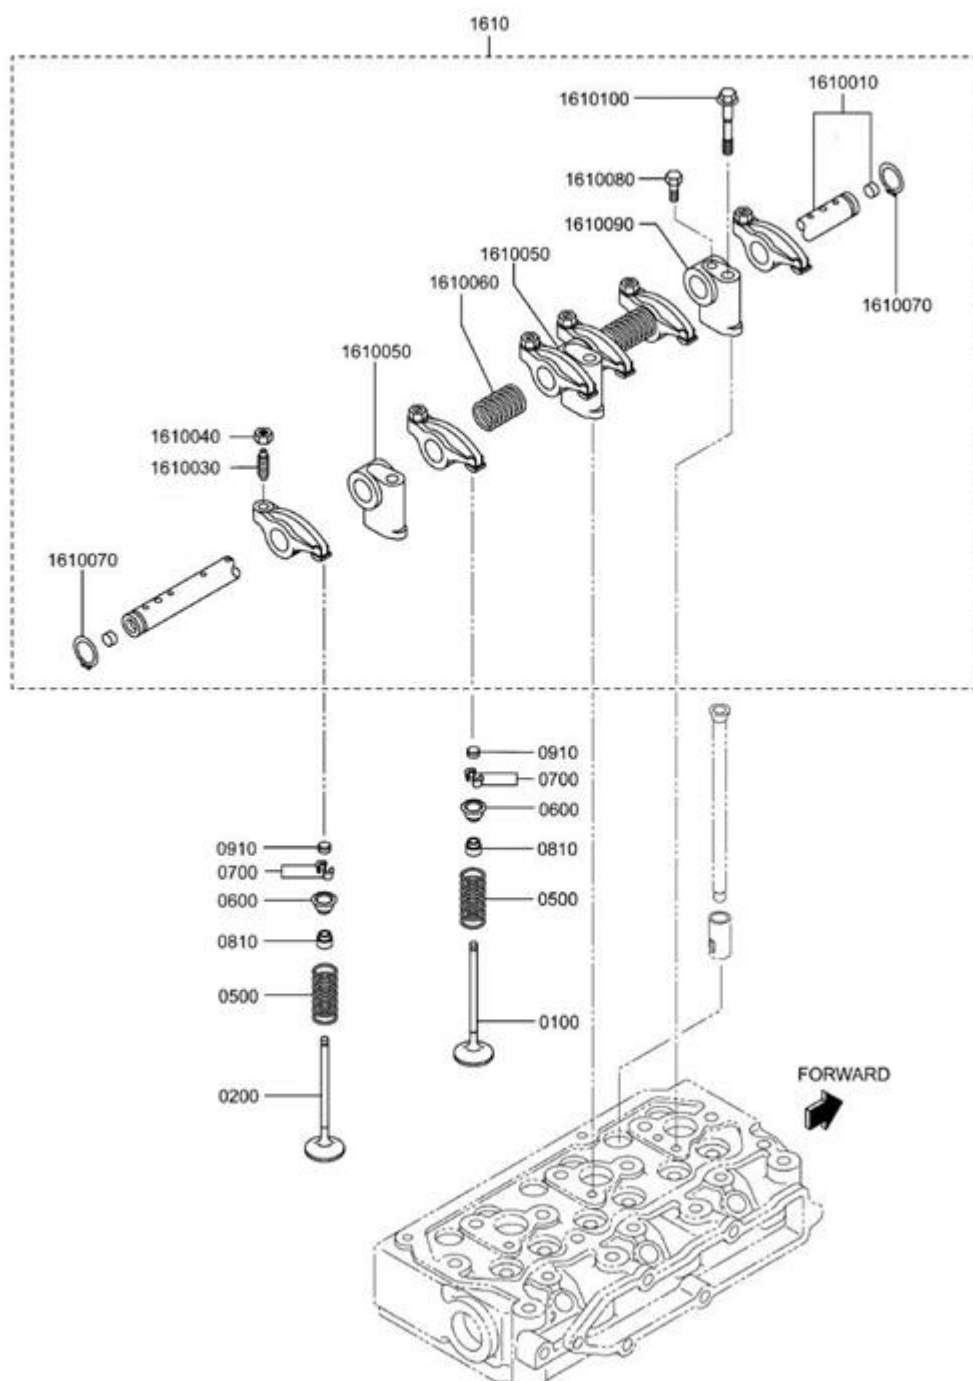

3. VALVE MECHANISM

Ref.No	Part No	Part Name	Description	Qty
0100	39205720	VALVE,INLET		3
0200	39205721	VALVE,EXHAUST		3
0500	39205722	SPRING,VALVE		6
0600	39207496	RETAINER,VALVE SPRING		6
0700	39205723	LOCK,SPRING RETAINER		12
0810	39204454	SEAL,VALVE STEM		6
0910	39205927	CAP,VALVE STEM		6
1610	39207503	SHAFT ASSY,ROCKER		1
1610010	39207484	SHAFT ASSY,ROCKER		1
1610030	39206363	SCREW,ROCKER		6
1610040	39206364	NUT,JAM		6
1610050	39207465	BRACKET,ROCKER SHAFT		2
1610060	39207461	SPRING,ROCKER SHAFT		2
1610070	39207415	RING,SNAP		2
1610080	39207409	BOLT		1
1610090	39207467	BRACKET,ROCKER SHAFT		1
1610100	39207488	BOLT,ROCKER BRACKET		3


4.ROCKER COVER

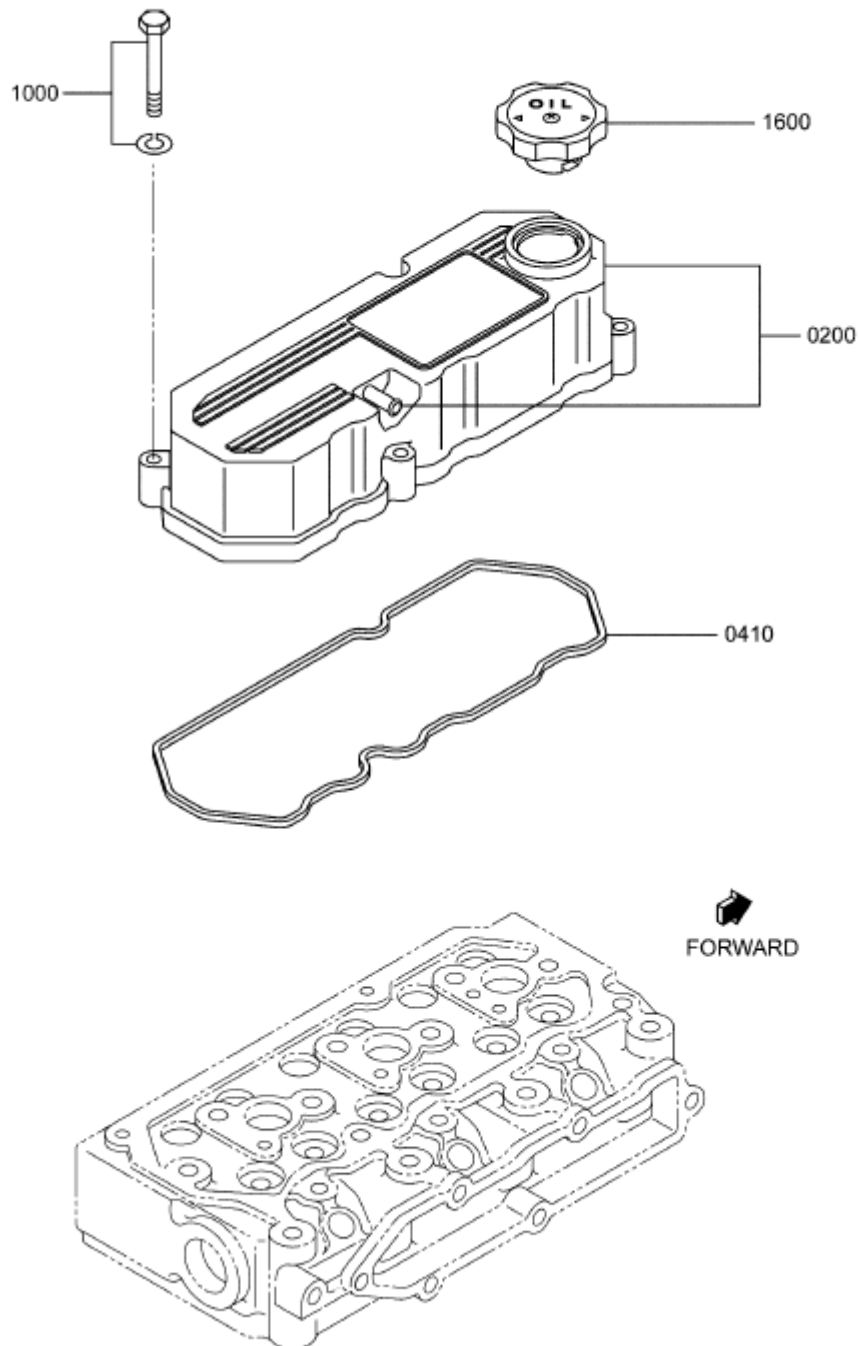

4. ROCKER COVER

Ref.No	Part No	Part Name	Description	Qty
0200	39205979	COVER ASSY,ROCKER		1
0410	39204431	GASKET,ROCKER COVER		1
1000	39207414	BOLT,W/WASHER	B/W	4
1600	39206095	CAP,OIL FILLER		1


CAMSHAFT & TAPPET

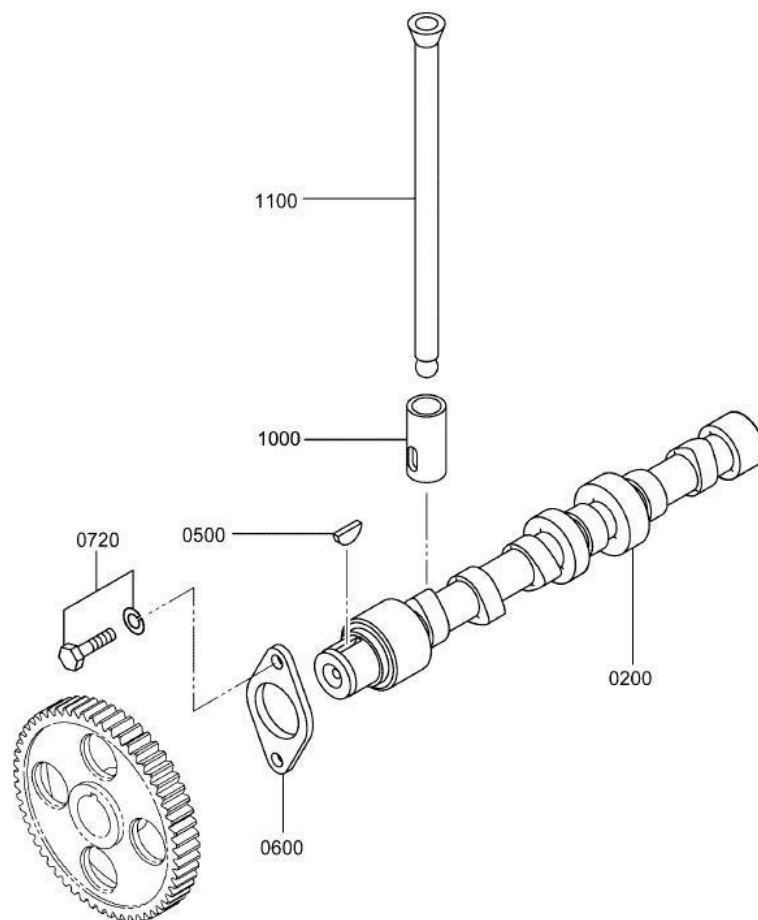

5. CAMSHAFT & TAPPET

Ref.No	Part No	Part Name	Description	Qty
0200	39206436	CAMSHAFT		1
0500	39206386	KEY,WOODRUFF		1
0600	39207472	PLATE,THRUST		1
0720	39207384	BOLT,W/WASHER	B/W	2
1000	39206437	TAPPET		6
1100	39206438	ROD,PUSH		6


CRANKCASE (ASSY)

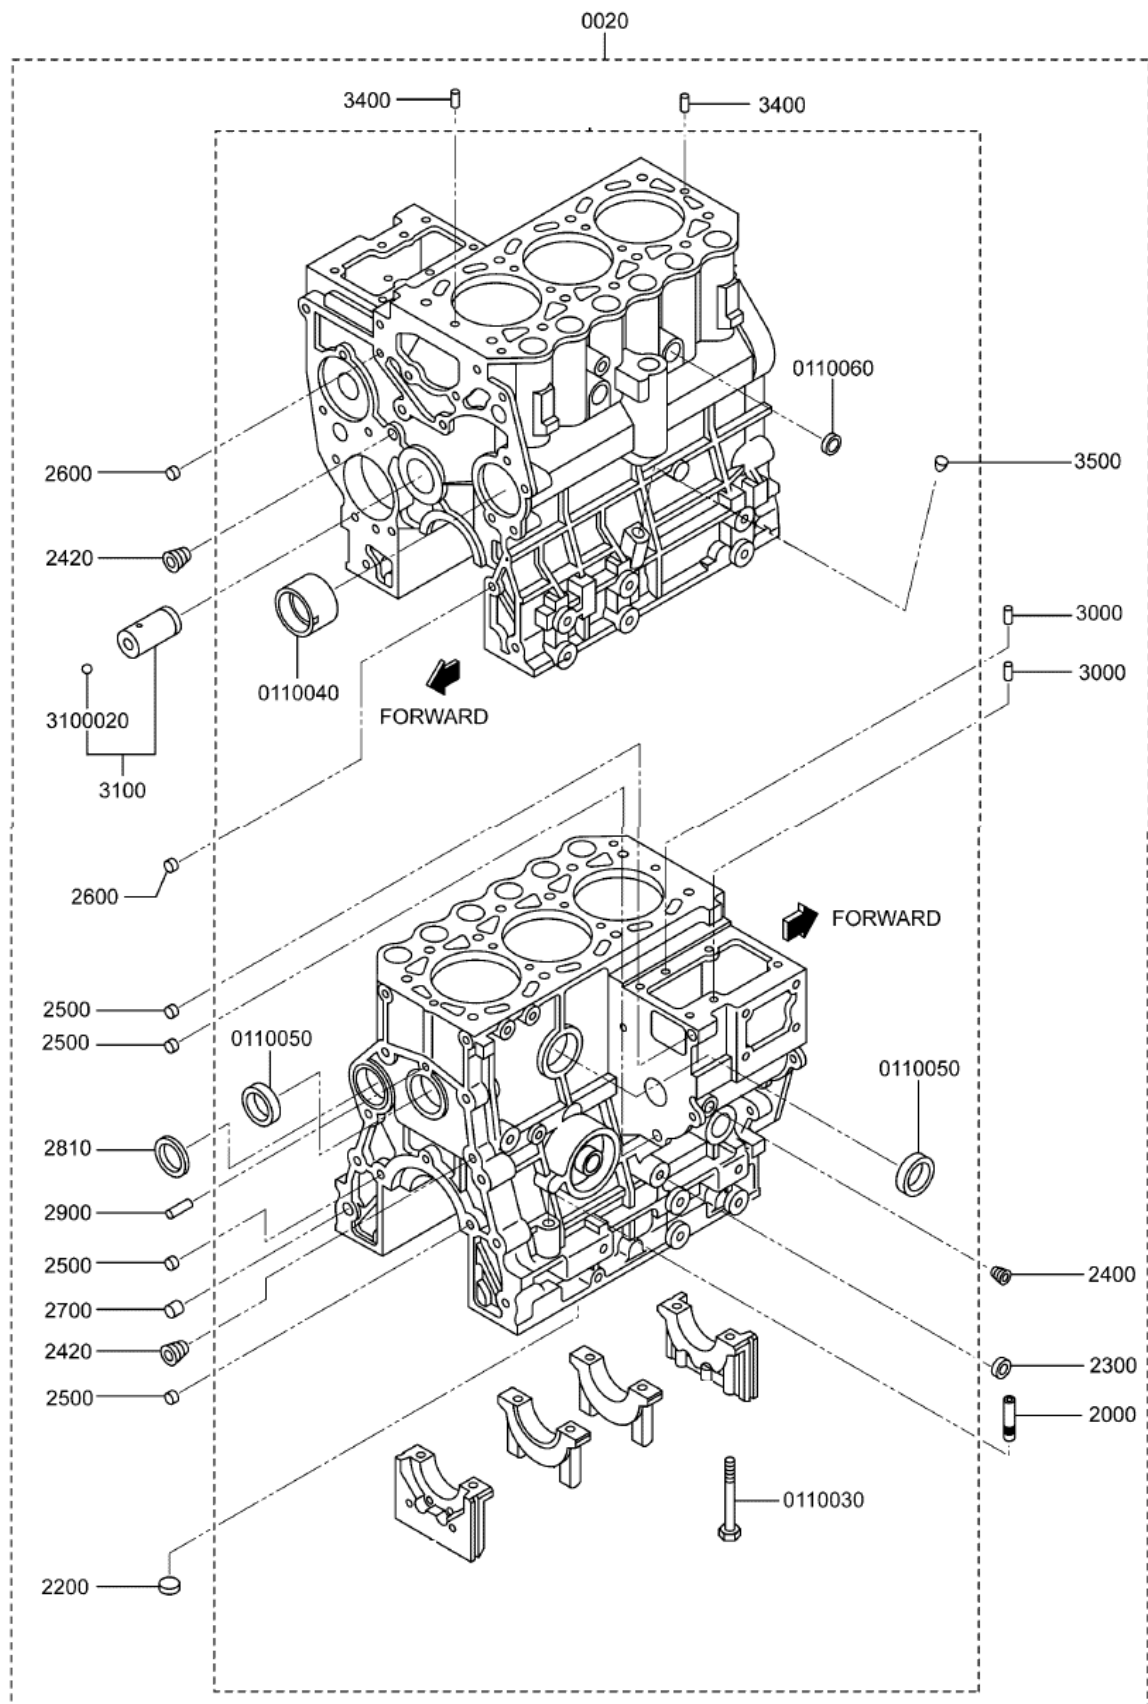

6. CRANKCASE (ASSY)

Ref.No	Part No	Part Name	Description	Qty
0020	39207504	BLOCK ASSY,CYLINDER		AR
0110030	39207448	BOLT,BEARING CAP		8
0110040	39206366	BUSH,CAMSHAFT		1
0110050	39207433	CAP,SEALING		2
0110060	39207378	CAP,SEALING		2
2000	39207424	GUIDE,OIL LEVEL GAUGE		1
2200	39207377	CAP,SEALING		1
2300	39207375	CAP,SEALING		1
2400	39207398	PLUG,TAPERED	1/8	1
2420	39207411	PLUG,TAPERED MEC.		2
2500	39207494	BUSHING,KNOCK	8X9	4
2600	39207493	BUSHING,KNOCK	8X13	2
2700	39207495	BUSHING,KNOCK	12X9	1
2810	39207425	PLUG,EXPANSION		1
2900	39207491	PIN,DOWEL		1
3000	39207489	PIN,DOWEL		2
3100	39207459	SHAFT ASSY,IDLER		1
3100020	39207405	STEEL BALL,BEARING		1
3400	39207408	PIN,DOWEL		2
3500	39207432	PLUG,TAPERED		1


CRANKCASE (OIL SEAL CASE)

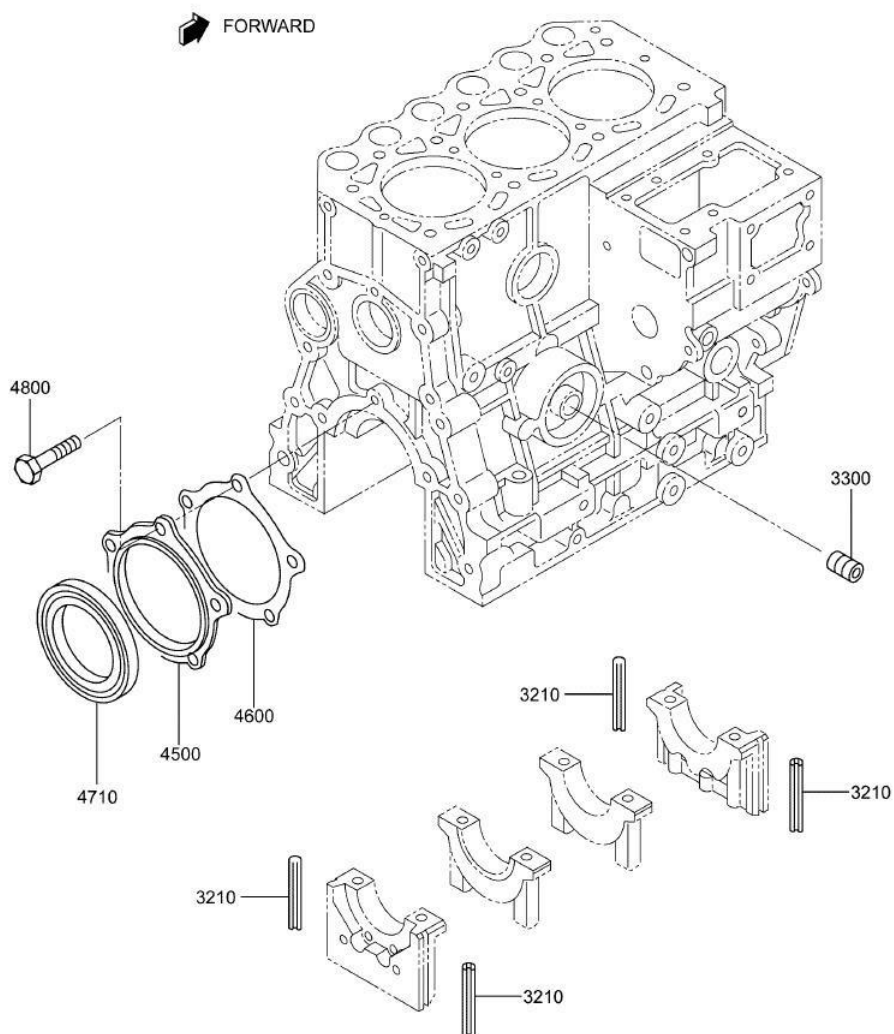

7. CRANKCASE (OIL SEAL CASE)

Ref.No	Part No	Part Name	Description	Qty
3210	39204425	SEAL,SIDE		4
3300	39207420	SHAFT,OIL FILTER		1
4500	39207466	CASE,OIL SEAL		1
4600	39204433	GASKET,OIL SEAL CASE		1
4710	39204424	SEAL,OIL		1
4800	39207371	BOLT	8X20	5


DRAIN COCK & PIPE

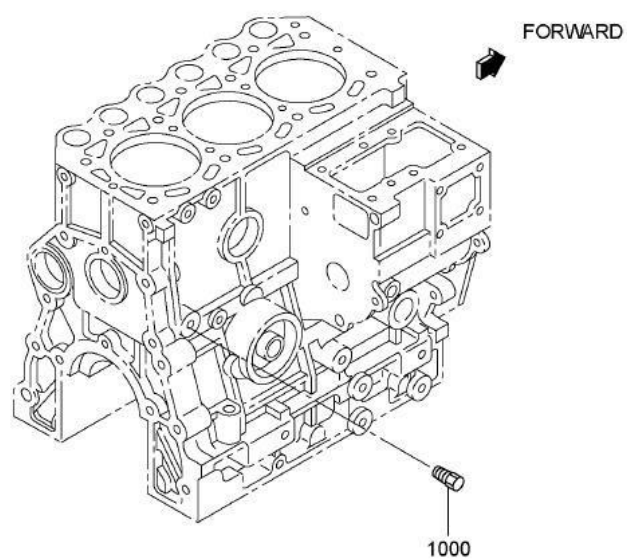

8. DRAIN COCK & PIPE



Ref.No	Part No	Part Name	Description	Qty
1000	39207410	PLUG,TAPERED	1/4NPTF	1

MAIN BEARING

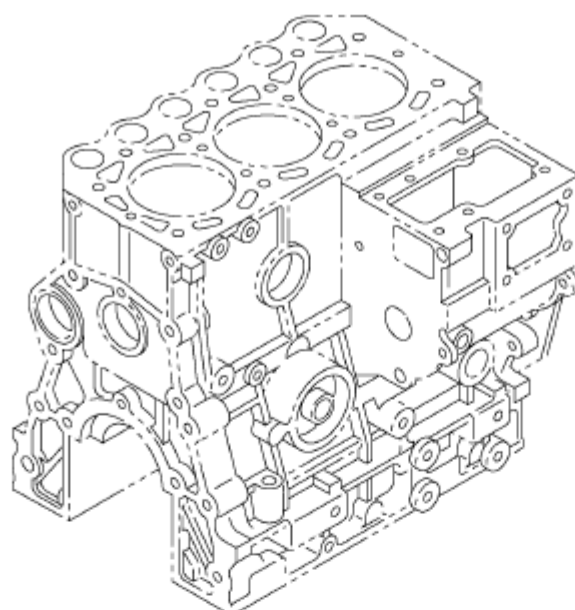

FORWARD


9100 · 9200
9300 · 9400

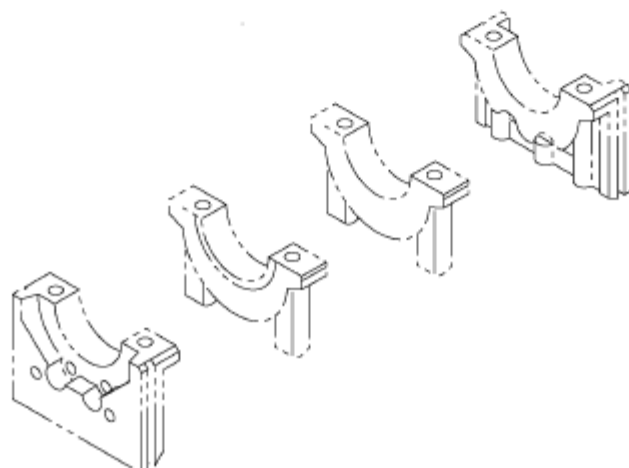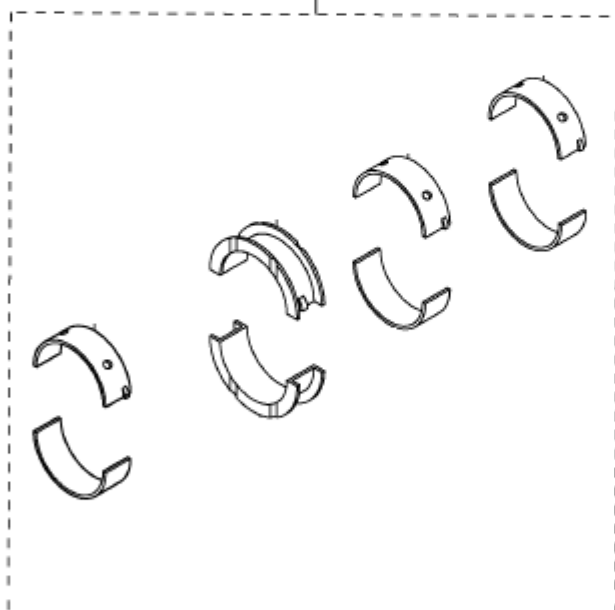

9. MAIN BEARING

Ref.No	Part No	Part Name	Description	Qty
9100	39206369	BEARING SET,CRANKSHAFT		1
9200	39206370	BEARING SET,CRANKSHAFT	U.S 0.25	1
9300	39206371	BEARING SET,CRANKSHAFT	U.S 0.50	1
9400	39206372	BEARING SET,CRANKSHAFT	U.S 0.75	1


TIMING GEAR CASE

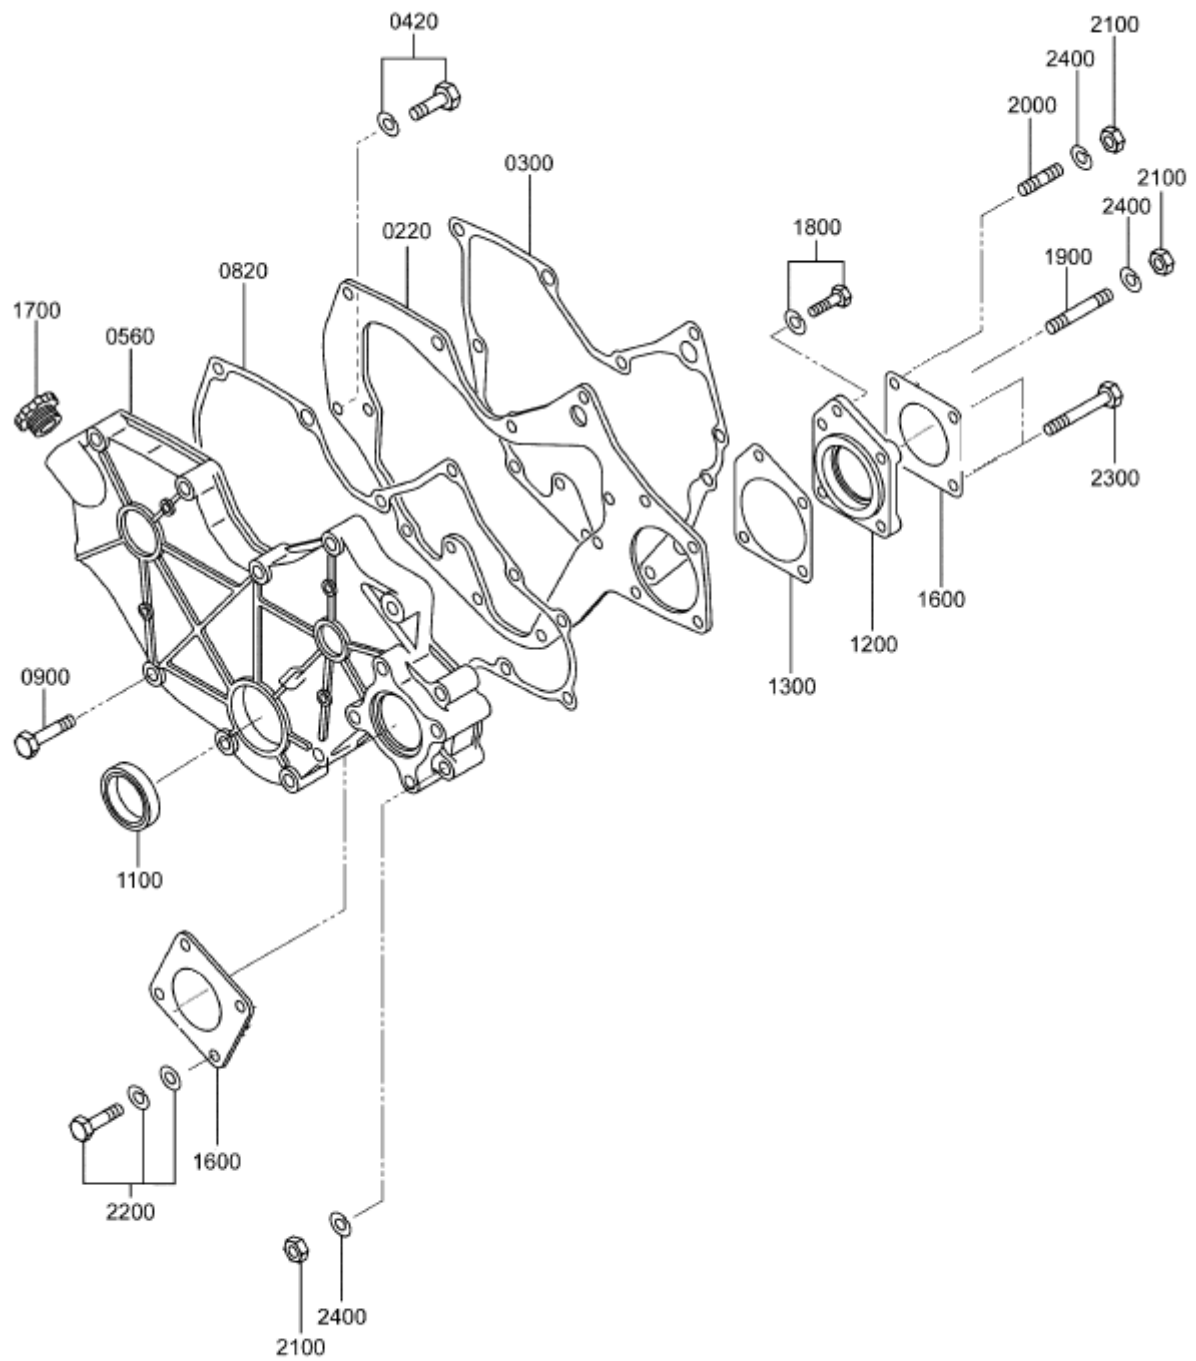

10. TIMING GEAR CASE

Ref.No	Part No	Part Name	Description	Qty
0220	39207474	PLATE,FRONT		1
0300	39204434	GASKET,FRONT PLATE		1
0420	39207384	BOLT,W/WASHER		5
0560	39205980	CASE,GEAR		1
0820	39207463	GASKET,GEAR CASE		1
0900	39206432	BOLT	8X45	8
1100	39204451	SEAL,OIL		1
1200	39207471	HOUSING,GEAR PUMP		1
1300	39204435	GASKET,HOUSING		1
1600	39204415	GASKET,OIL PUMP		2
1700	39205994	CAP,FILLER		1
1800	39207385	BOLT,W/WASHER	B/W	1
1900	39207412	STUD	8X40	1
2000	39207418	STUD	8X22	1
2100	39207368	NUT		4
2200	39207403	BOLT,W/WASHER	B/W	4
2300	39207393	BOLT		2
2400	39207370	WASHER,SPRING		4


FLYWHEEL HOUSING

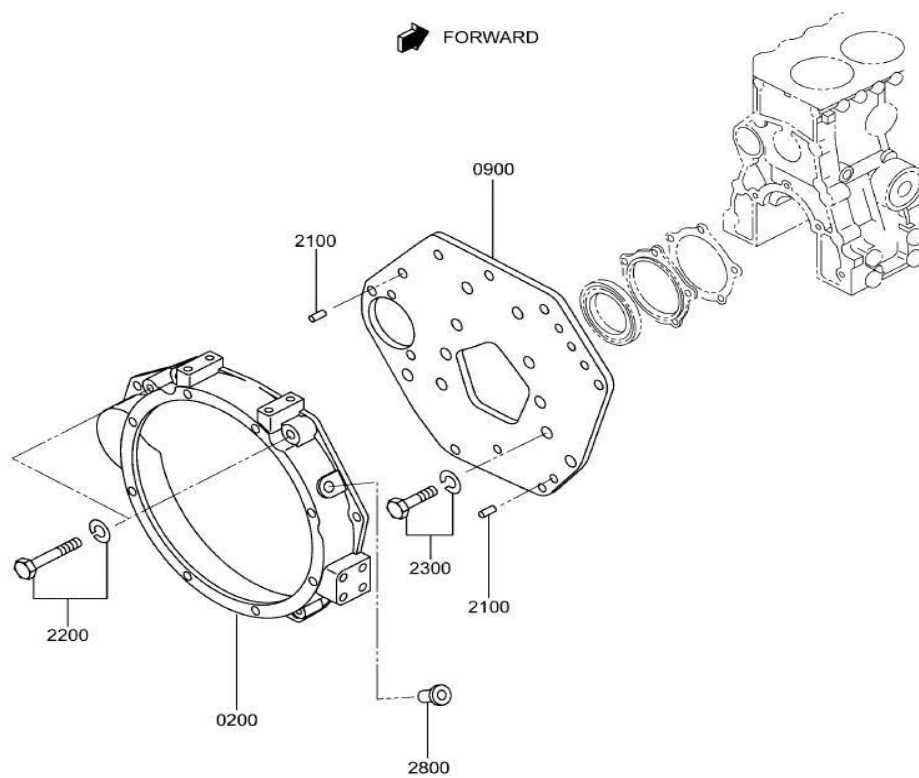

11. FLYWHEEL HOUSING

Ref.No	Part No	Part Name	Description	Qty
0200	39205073	HOUSING,FLYWHEEL		1
0900	39207485	PLATE,REAR		1
2100	39207564	PIN,KNOCK		2
2200	39207565	BOLT,W/WASHER	B/W	2
2300	39207566	BOLT,W/WASHER	B/W	13
2800	39207567	PLUG		1


OIL PAN

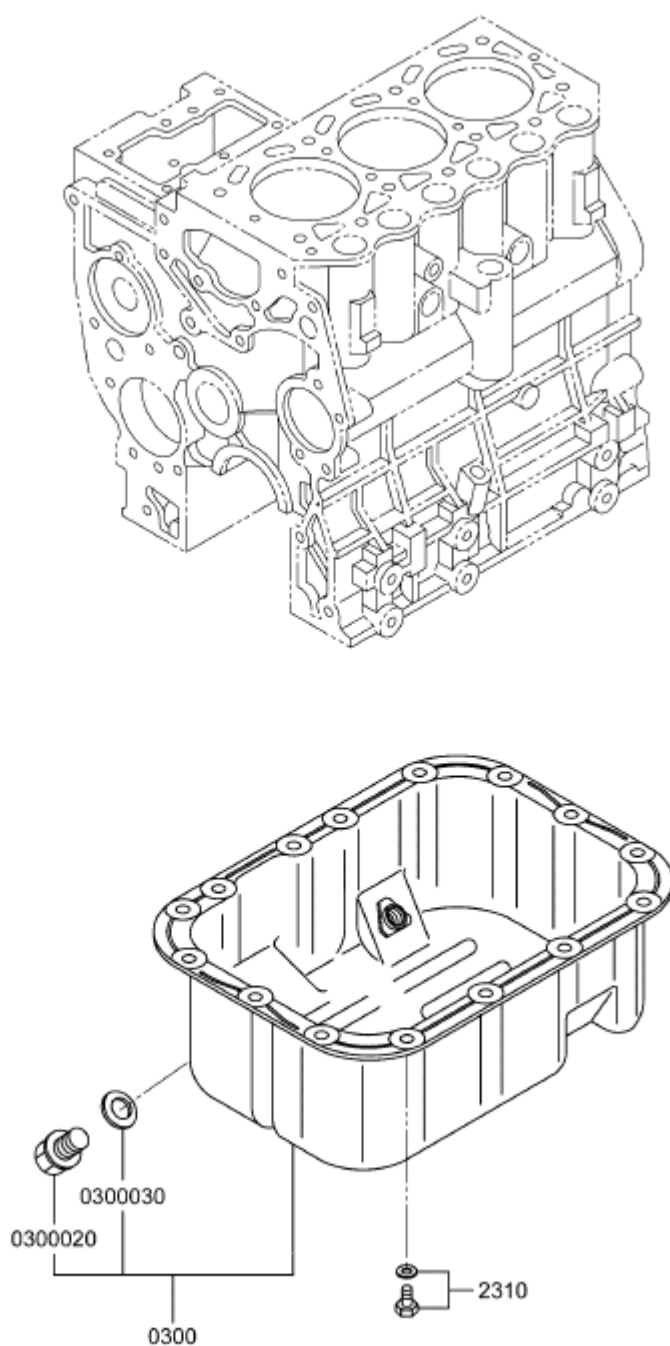

12. OIL PAN

Ref.No	Part No	Part Name	Description	Qty
0300	39206439	PAN ASSY,OIL		1
0300020	39204436	PLUG OIL DRAIN		1
0300030	39204452	GASKET,OIL DRAIN		1
2310	39207384	BOLT,W/WASHER	B/W	15


ENGINE SUPPORT

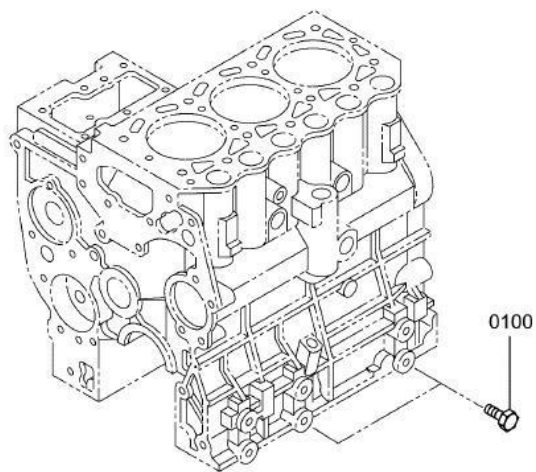

13. ENGINE SUPPORT

Ref.No	Part No	Part Name	Description	Qty
0100	39207400	BOLT		4


PISTON

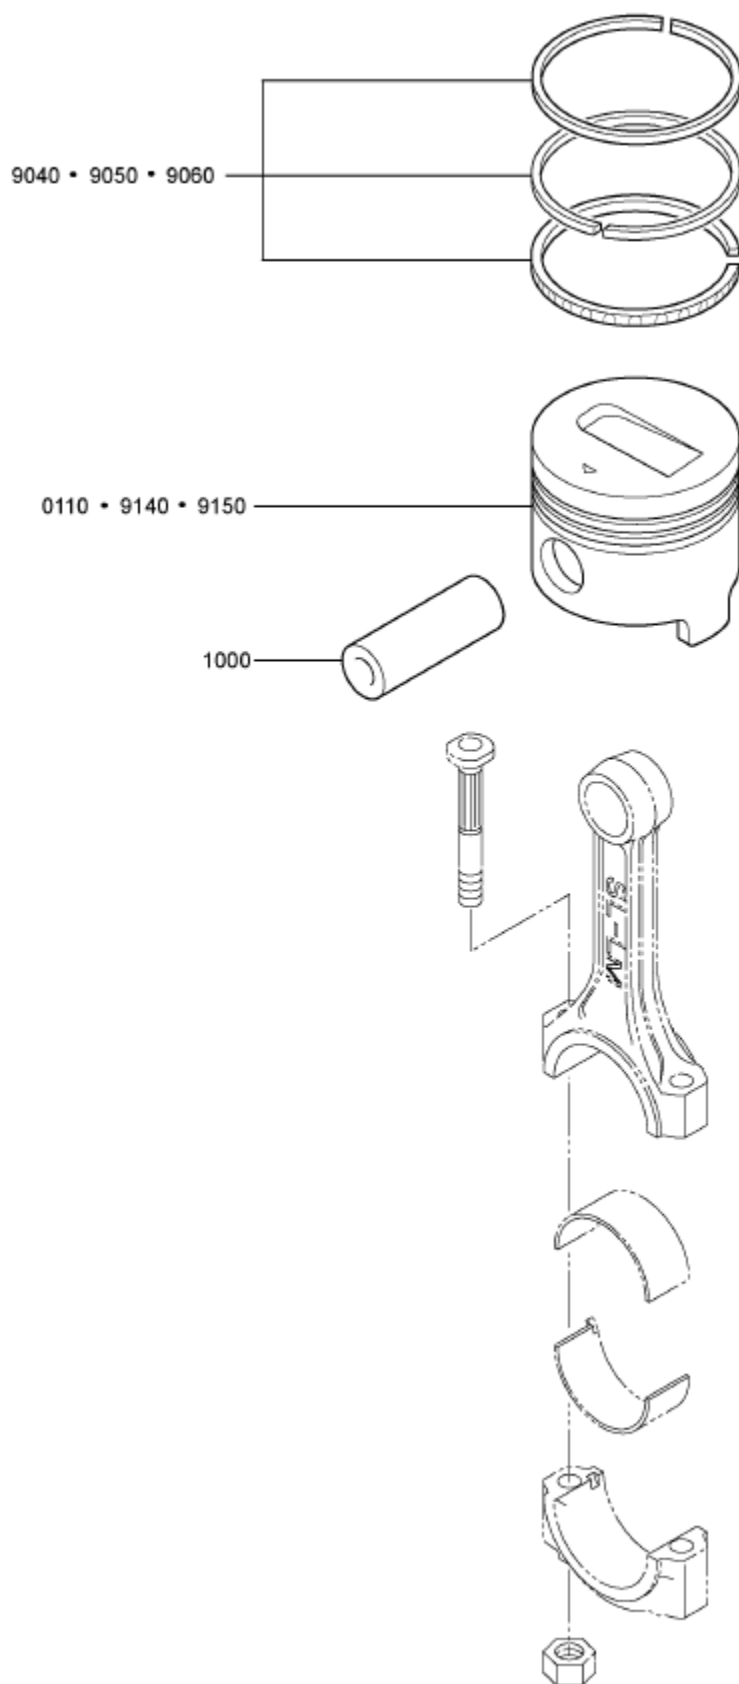

14. PISTON

Ref.No	Part No	Part Name		Qty
0110	39206433	PISTON		3
1000	39206376	PIN,PISTON		3
9040	39206377	RING SET,PISTON		3
9050	39206378	RING SET,PISTON	O.S 0.25	3
9060	39206379	RING SET,PISTON	O.S 0.50	3
9140	39207481	PISTON	O.S 0.25	3
9150	39206381	PISTON	O.S 0.50	3


CONNECTING ROD

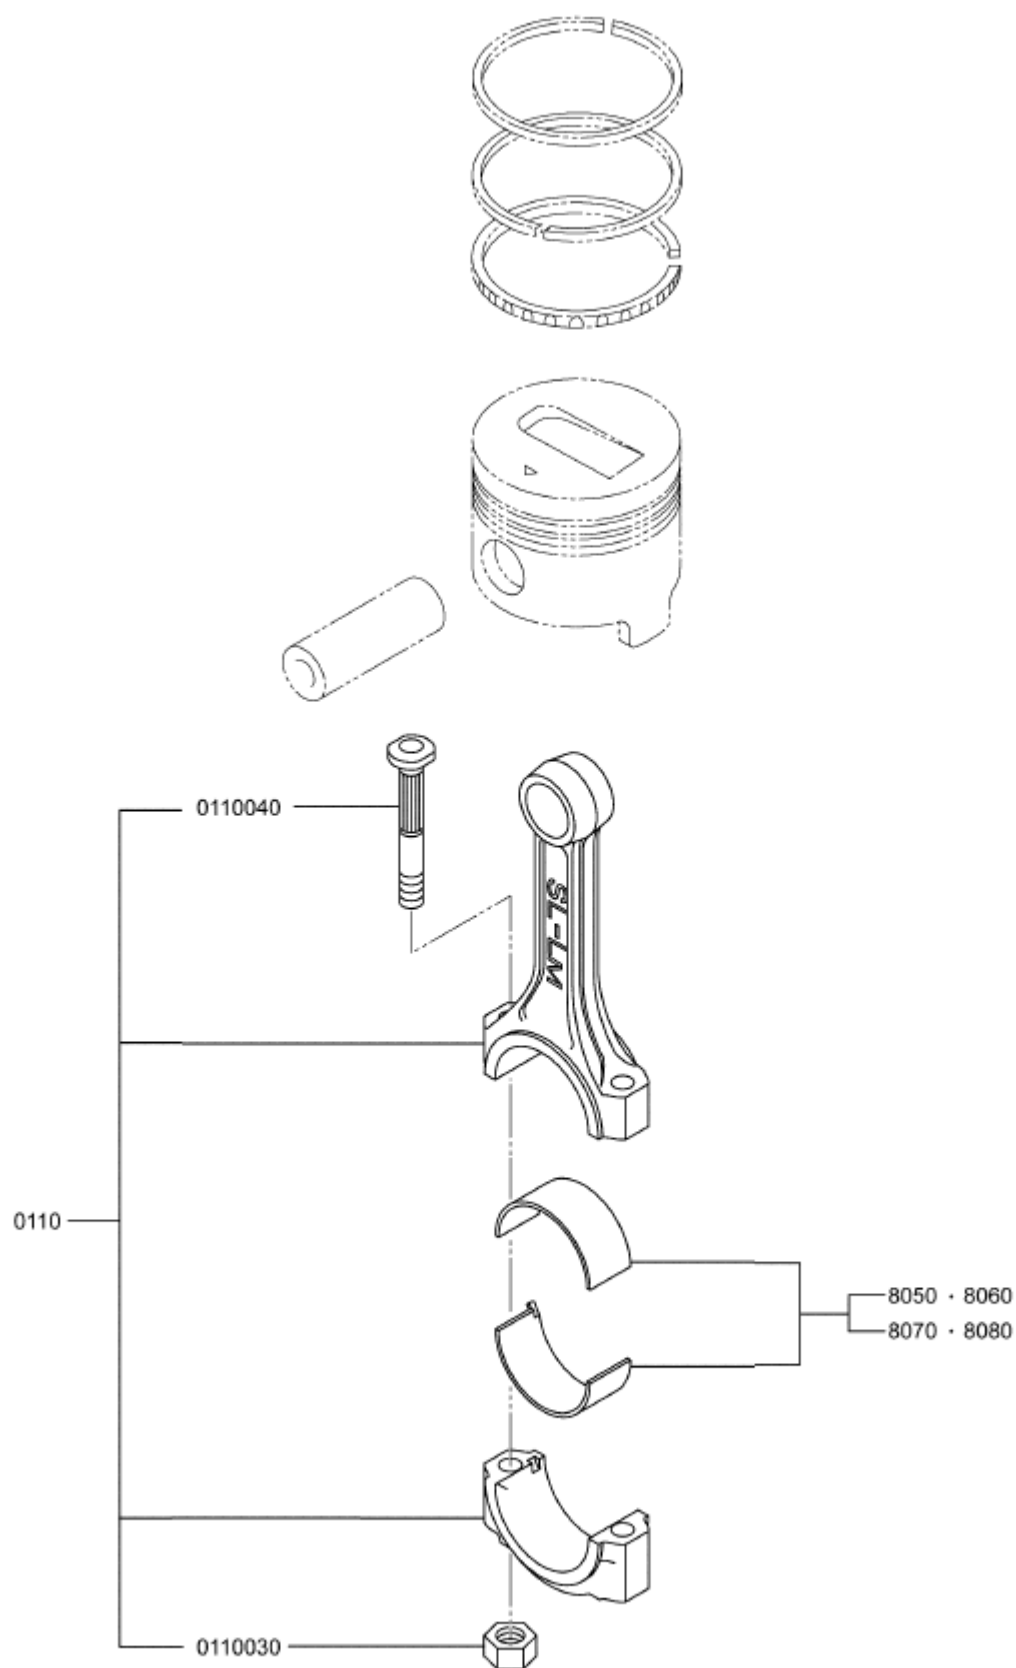

15. CONNECTING ROD

Ref.No	Part No	Part Name		Qty
0110	39206440	ROD ASSY,CONNECTING		3
0110030	39207430	NUT,CONNECTING ROD		6
0110040	39207454	BOLT,CONNECTING ROD		6
8050	39206382	BEARING SET,CON-ROD		3
8060	39206383	BEARING SET,CON-ROD	U.S 0.25	3
8070	39206384	BEARING SET,CON-ROD	U.S 0.50	3
8080	39206385	BEARING SET,CON-ROD	U.S 0.75	3


CRANKSHAFT

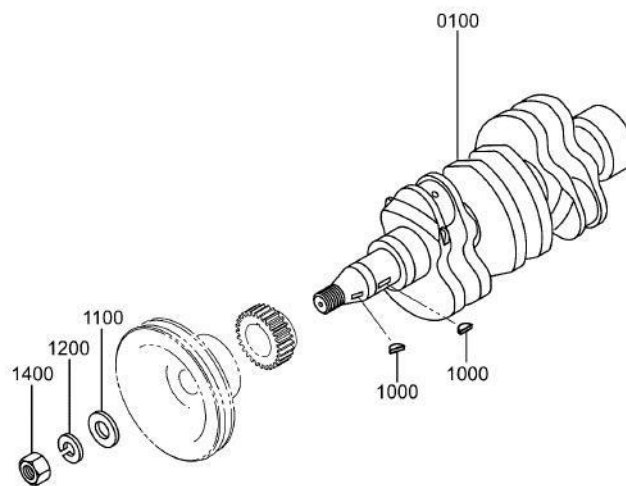

16. CRANKSHAFT

Ref.No	Part No	Part Name	Description	Qty
0100	39206441	CRANKSHAFT		1
1000	39206386	KEY,WOODRUFF		2
1100	39207417	WASHER,PLAIN		1
1200	39207388	WASHER,SPRING		1
1400	39207490	NUT		1


CRANK PULLEY

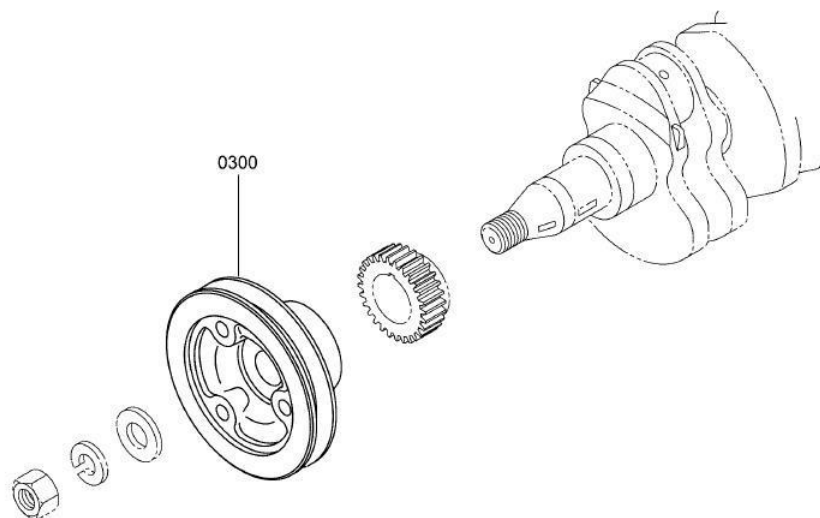

17. CRANK PULLEY

Ref.No	Part No	Part Name	Description	Qty
0300	39205982	PULLEY,CRANK		1


FLYWHEEL

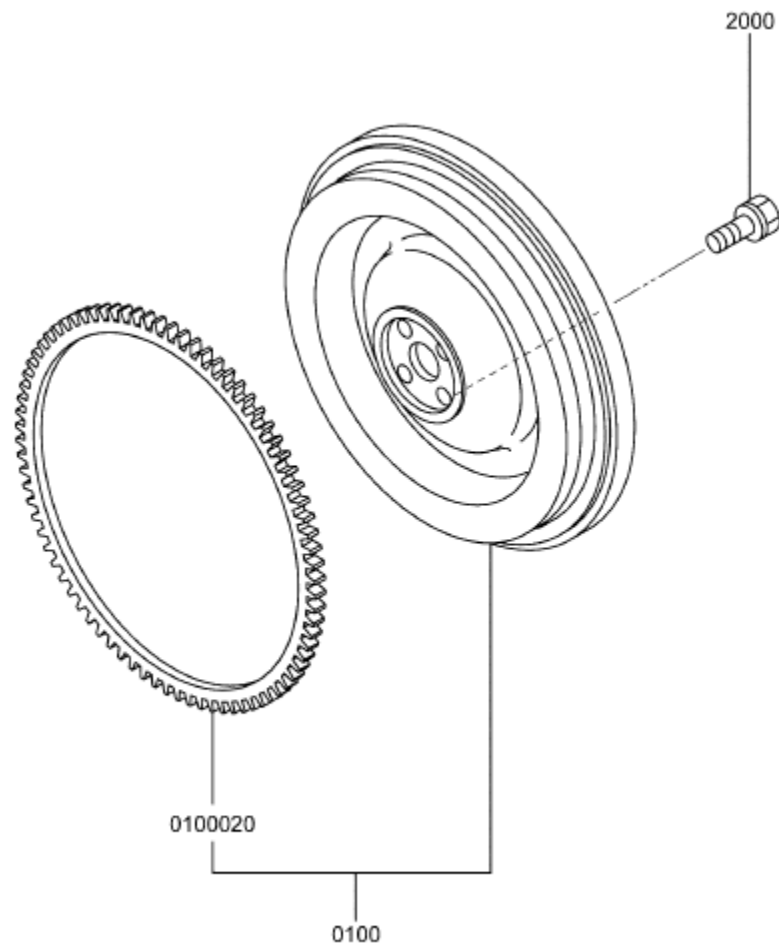

18. FLYWHEEL

Ref.No	Part No	Part Name	Description	Qty
0100	39206442	FLYWHEEL SUB ASSY		1
0100020	39205928	GEAR,RING	Z=120	1
2000	39207303	BOLT,DRIVE PLATE		4


TIMING GEAR

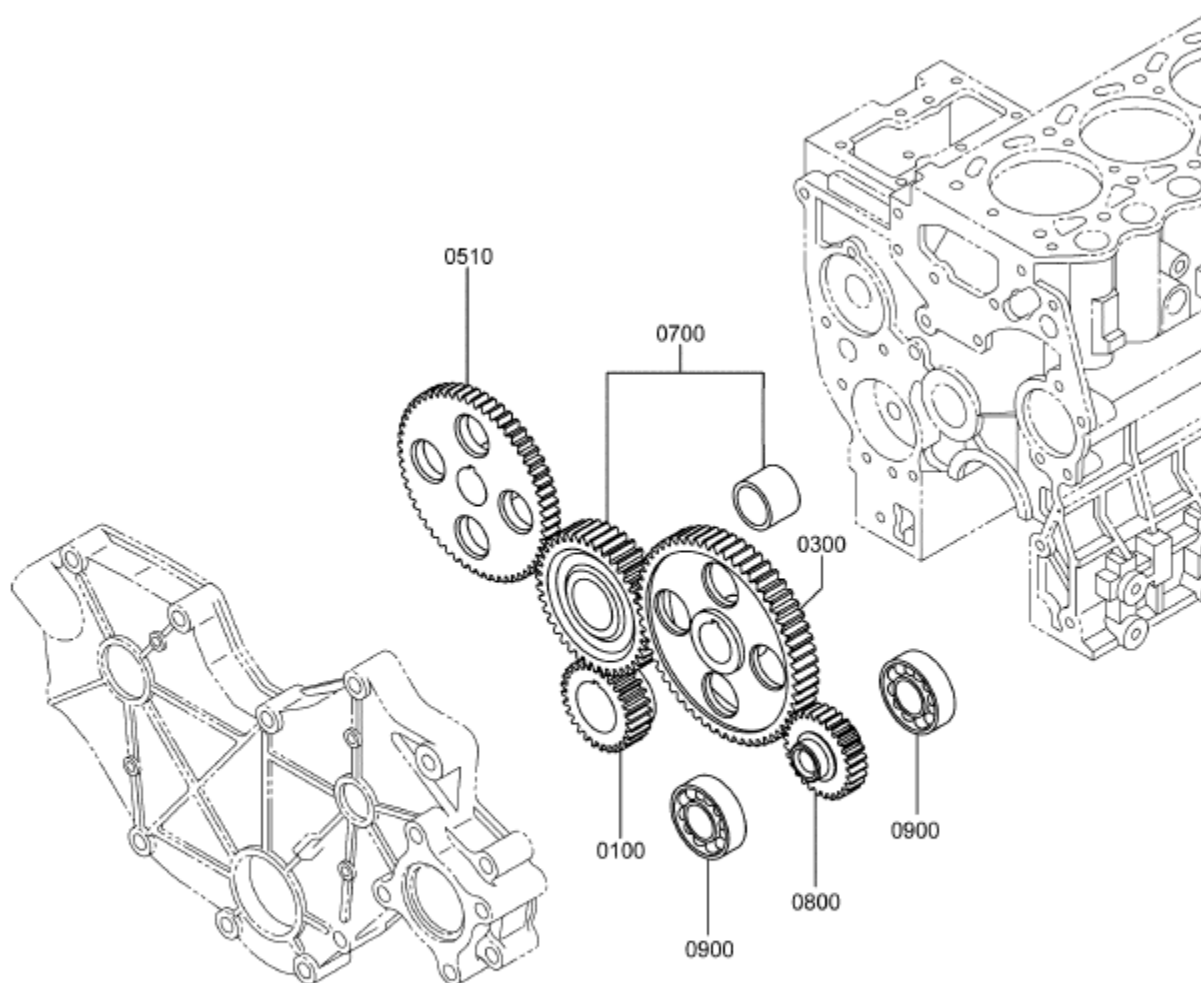

19. TIMING GEAR

Ref.No	Part No	Part Name	Description	Qty
0100	39206448	GEAR,CRANKSHAFT	Z=28	1
0300	39206447	GEAR,CAMSHAFT	Z=56	1
0510	39206446	GEAR,INJECTION PUMP	Z=56	1
0700	39206445	GEAR ASSY,IDLER	Z=39	1
0800	39206444	GEAR,OIL PUMP	Z=28	1
0900	39206443	BEARING,BALL		2


INLET SYSTEM

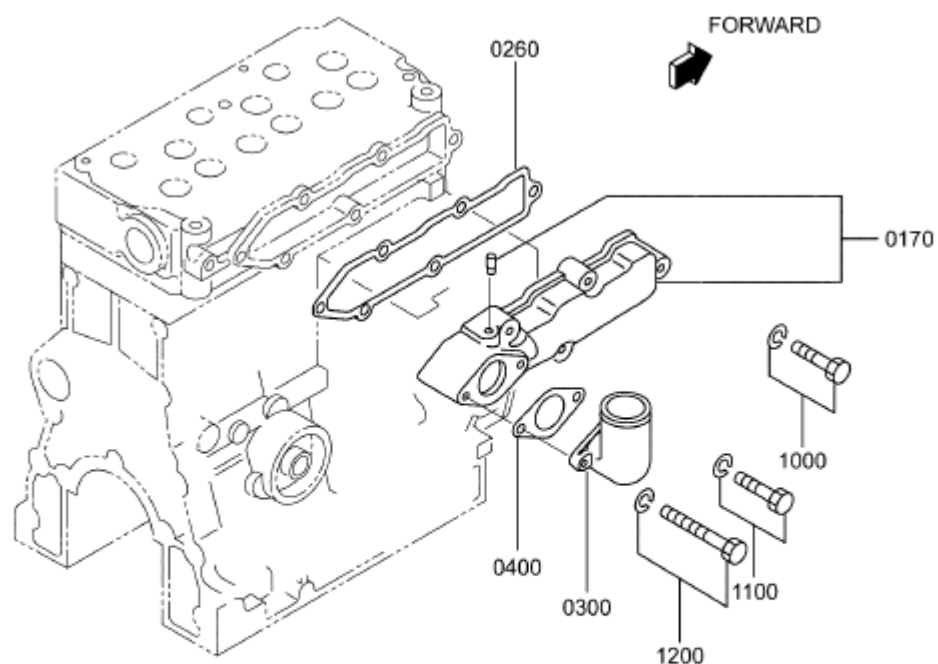

20. INLET SYSTEM

Ref.No	Part No	Part Name	Description	Qty	
0170	39207473	COVER ASSY,INLET		1	
260	39204437	GASKET,INLET COVER		1	
300	39205993	PIPE,INLET		1	
400	39205929	GASKET,INLET PIPE		1	
1000	39207390	BOLT,W/WASHER	B/W	5	
1100	39207559	BOLT,W/WASHER	B/W	1	
1200	39207399	BOLT,W/WASHER	B/W	1	


EXHAUST SYSTEM

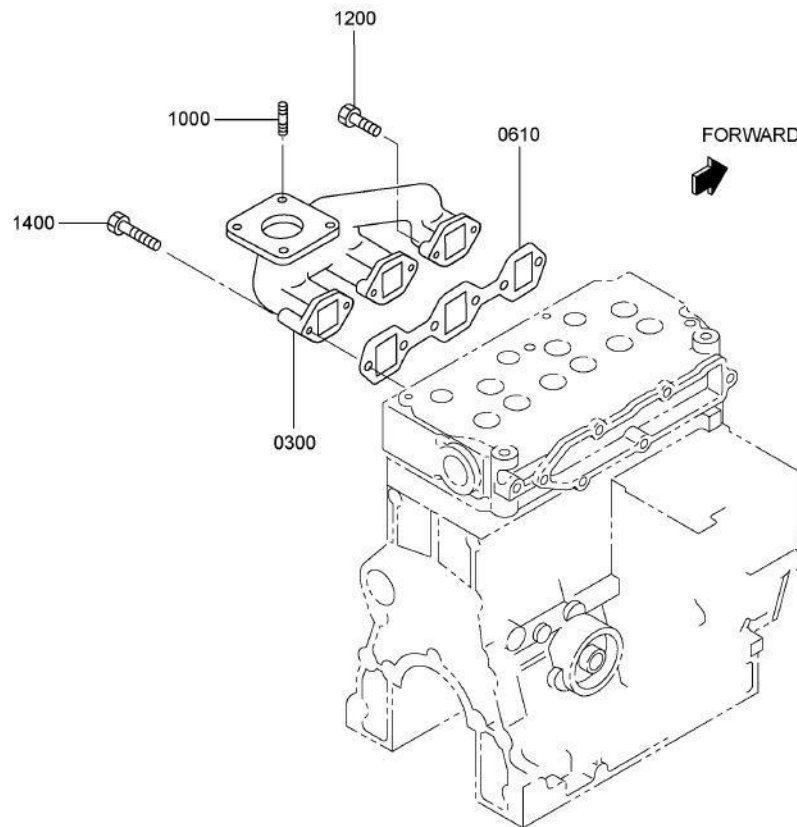

21. EXHAUST SYSTEM

Ref.No	Part No	Part Name	Description	Qty
0300	39204438	MANIFOLD,EXHAUST		1
0610	39204432	GASKET,EXHAUST MANIFOLD		1
1000	39207392	STUD		4
1200	39207389	BOLT		4
1400	39207406	BOLT		2

OIL PUMP


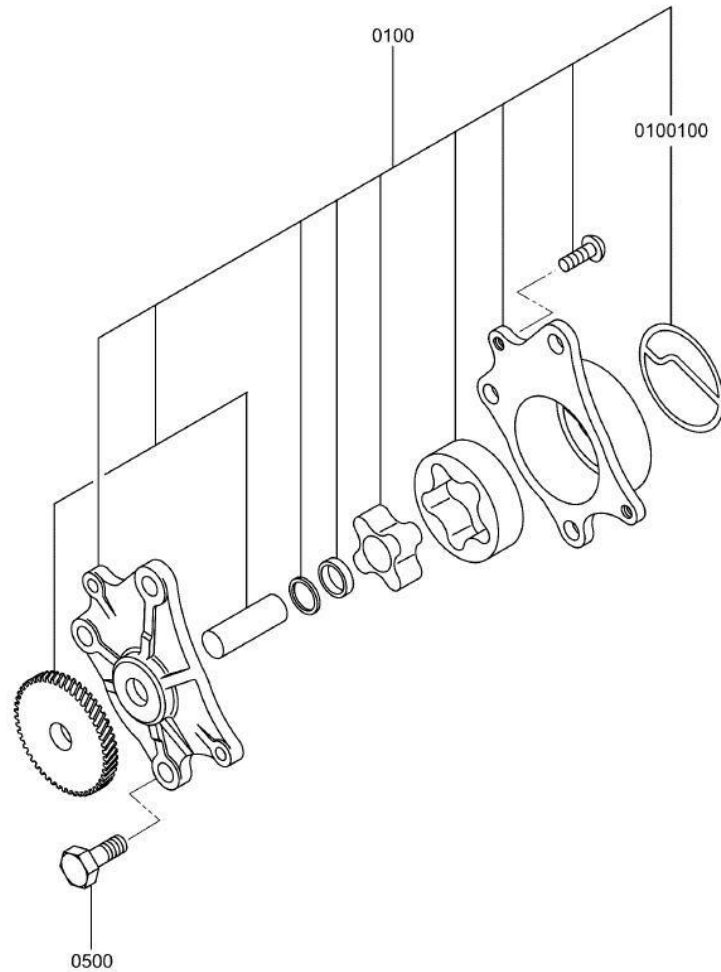


NOTE ; The shaft and inner rotor and gear which are force fitted to each other are not to be supplied individually.

22. OIL PUMP

Ref.No	Part No	Part Name	Description	Qty
0100	39205930	PUMP ASSY,OIL		1
100100	39204427	PACKING,BODY		1
500	39207373	BOLT		3


OIL STRAINER

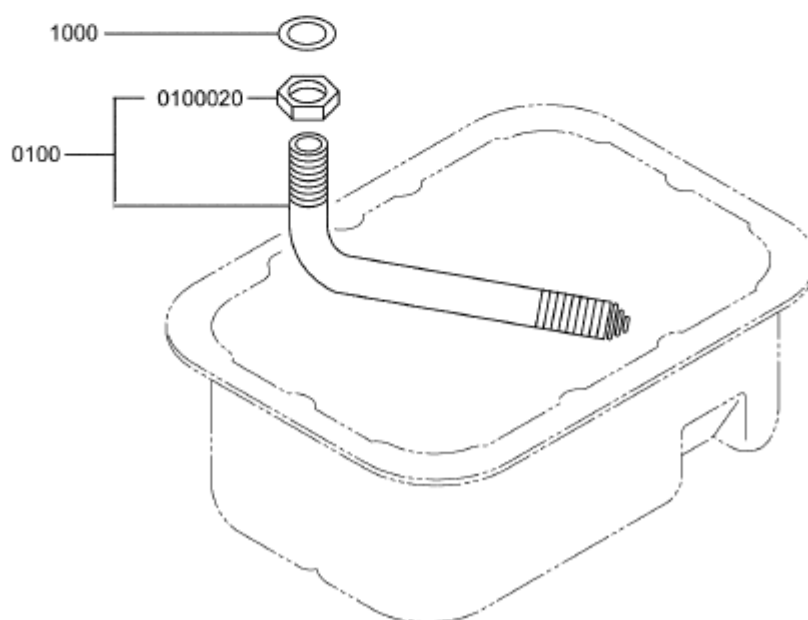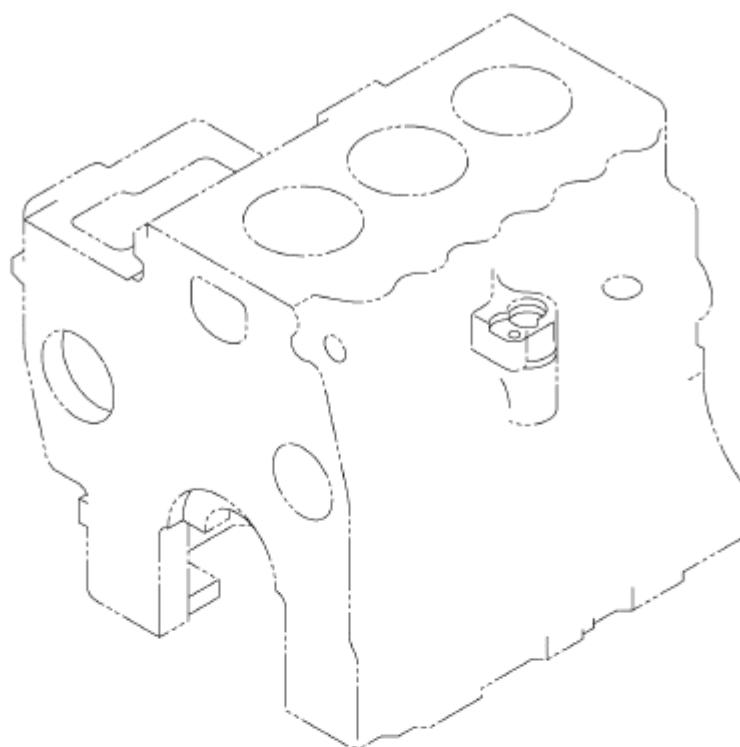

23. OIL STRAINER

Ref.No	Part No	Part Name	Description	Qty
0100	39206390	STRAINER ASSY		1
0100020	39207396	NUT,JAM		1
1000	39204439	GASKET		1


OIL SYSTEM

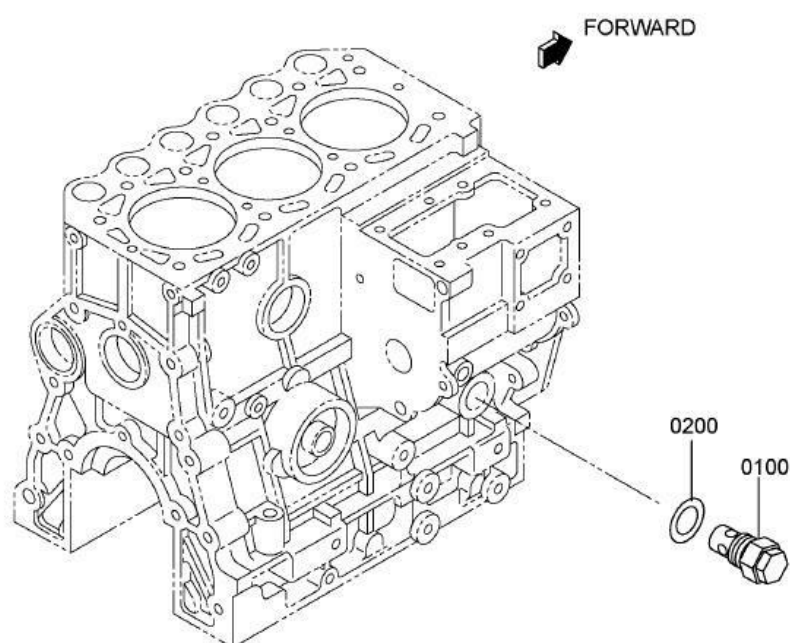

24. OIL SYSTEM

Ref.No	Part No	Part Name	Description	Qty
0100	39205931	VALVE ASSY,RELIEF		1
200	39204440	GASKET		1


OIL FILTER

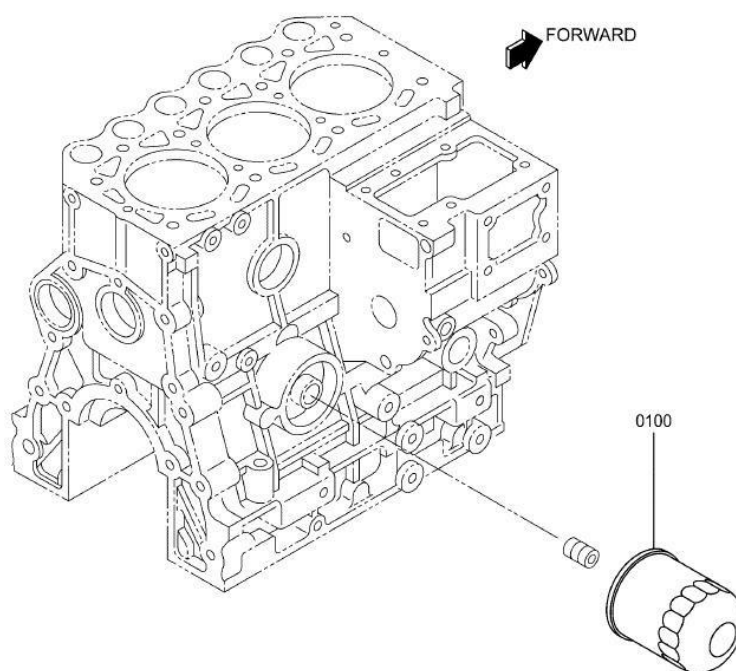

25. OIL FILTER

Ref.No	Part No	Part Name	Description	Qty
0100	39204417	FILTER ASSY,OIL		1


OIL FILLER & GAGE

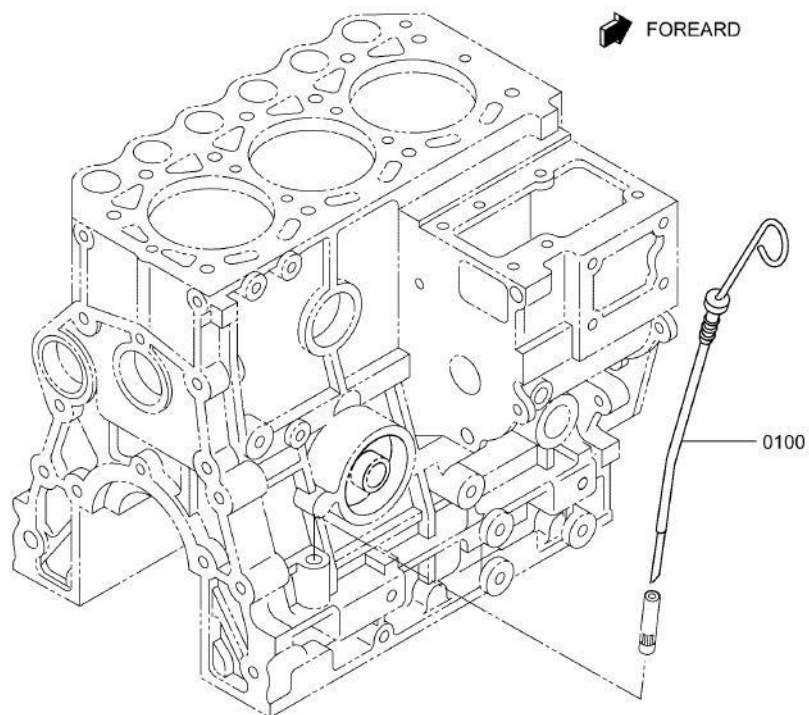

26. OIL FILLER & GAGE

Ref.No	Part No	Part Name	Description	Qty
0100	39206449	GAGE,OIL LEVEL		1


BREATHER

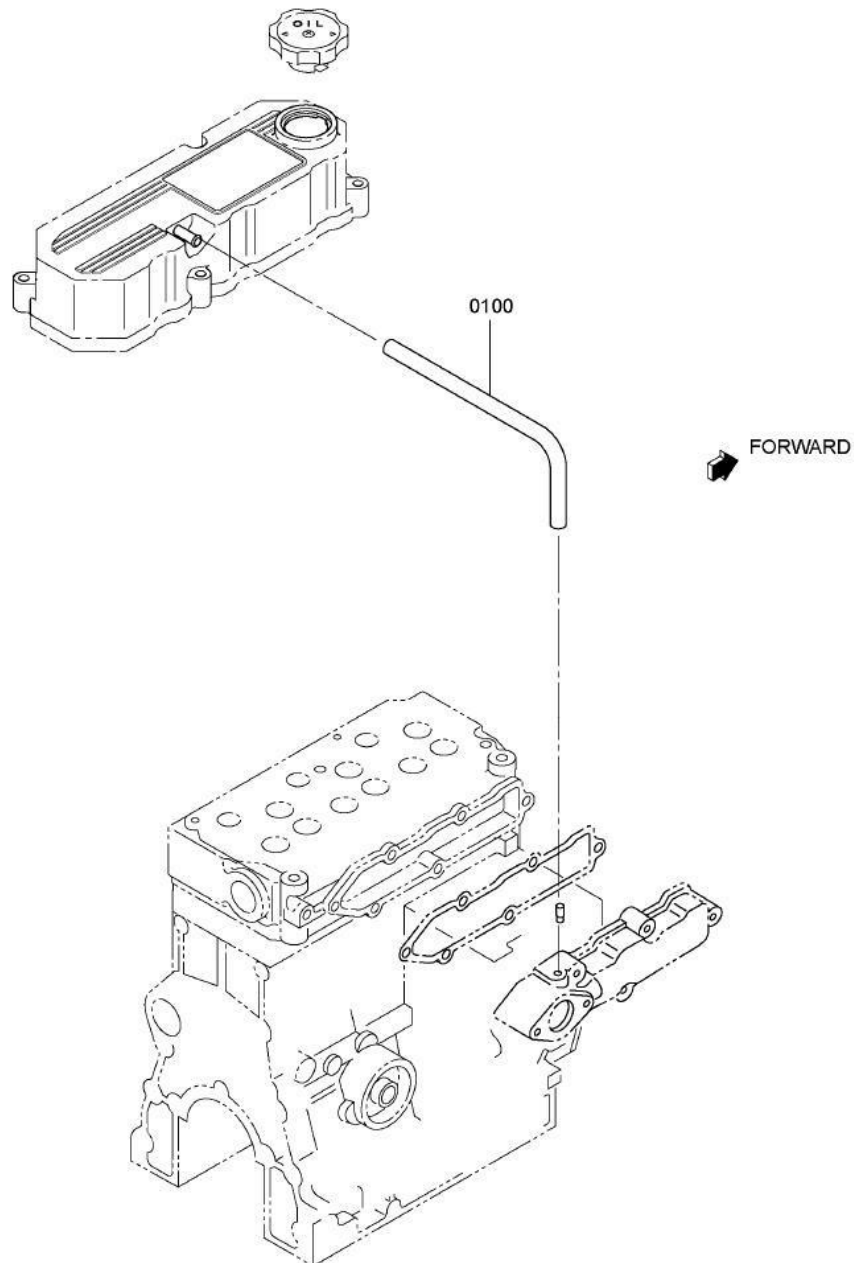

27. BREATHER

Ref.No	Part No	Part Name	Description	Qty
0100	39204441	PIPE,AIR BREATHER		1


WATER PUMP

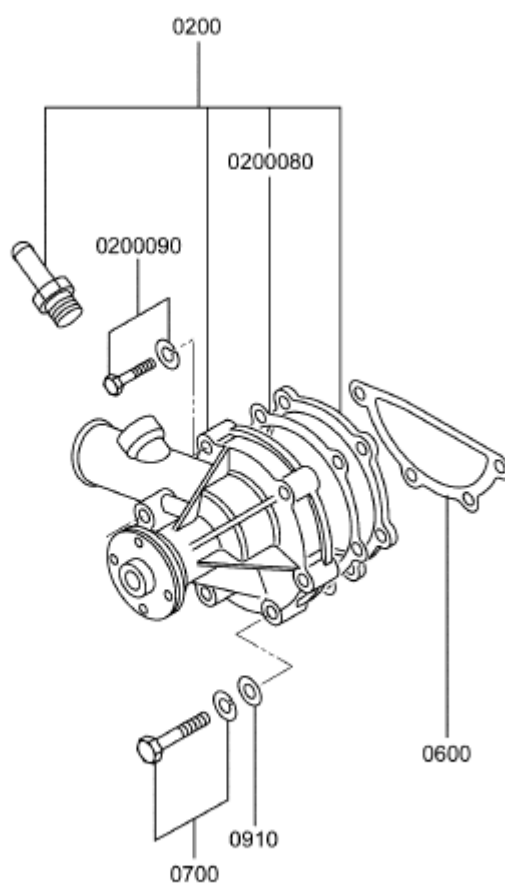

28. WATER PUMP

Ref.No	Part No	Part Name	Description	Qty
0200	39206392	PUMP ASSY,WATER		1
0200080	39205367	GASKET,WATER PUMP		1
0200090	39207383	BOLT,W/WASHER	B/W	2
0600	39204442	GASKET,WATER PUMP		1
0700	39207394	BOLT,W/WASHER	B/W	3
0910	39207372	WASHER,PLAIN		4


WATER PUMP PULLEY

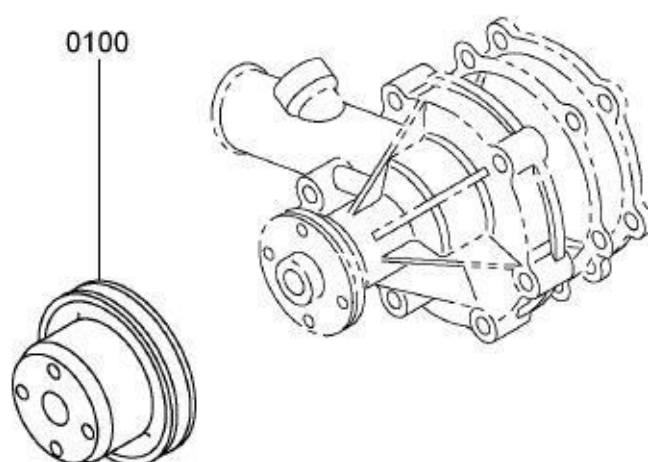

29. WATER PUMP PULLEY

Ref.No	Part No	Part Name	Description	Qty
0100	39206450	PULLEY,WATER PUMP		1


COOLING SYSTEM

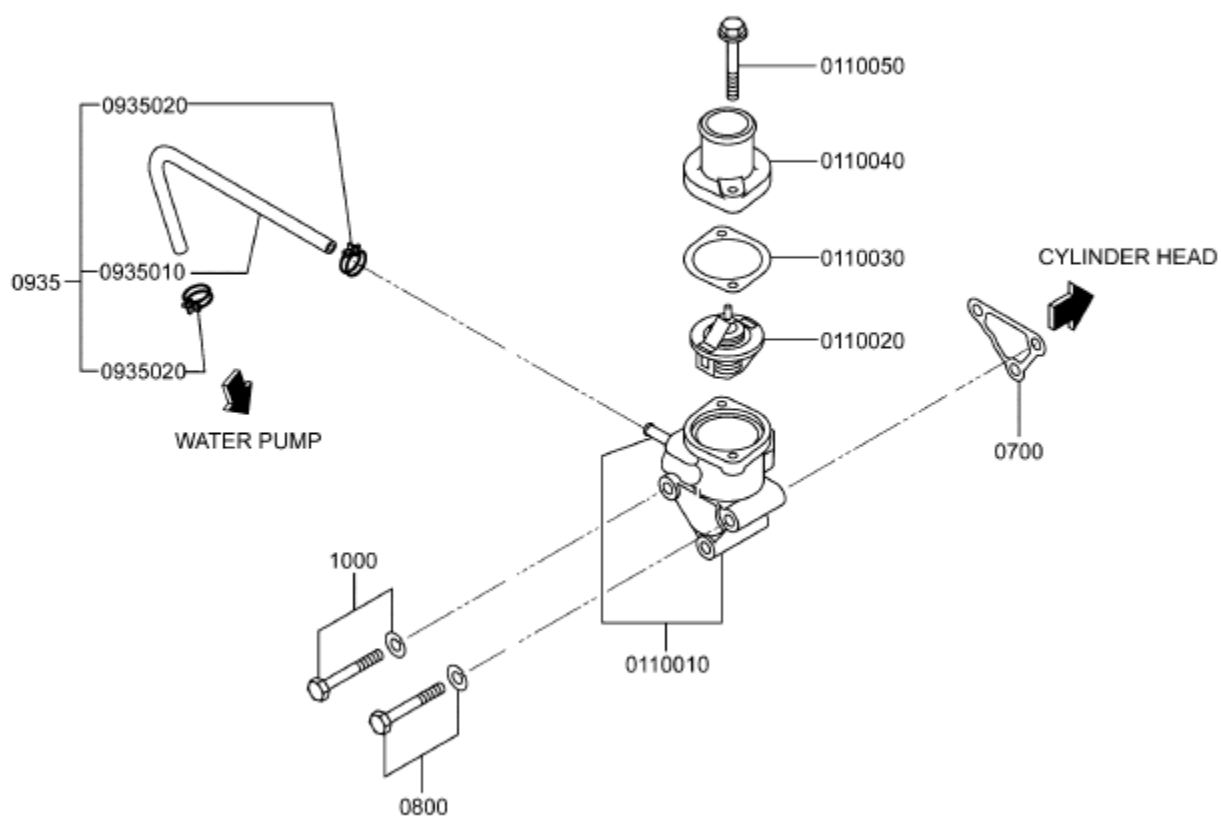

30. COOLING SYSTEM

Ref.No	Part No	Part Name	Description	Qty
110010	39207480	CASE ASSY,THERMOSTAT		1
110020	39205932	THERMOSTAT		1
110030	39206394	GASKET,THERMOSTAT		1
110040	39207460	COVER,THERMOSTAT		1
110050	39205991	BOLT,FLANGE		2
700	39204444	GASKET,THERMO CASE		1
800	39207399	BOLT,W/WASHER	B/W	2
935	39207458	HOSE ASSY,BY-PASS		1
935010	39204443	HOSE,BY-PASS		1
935020	39206396	CLAMP,HOSE		2
1000	39207401	BOLT,W/WASHER	B/W	1


FAN

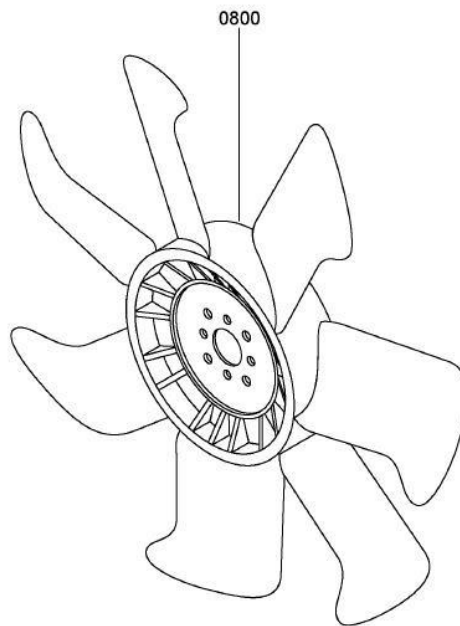

31. FAN

Ref.No	Part No	Part Name	Description	Qty
0800	39205202	FAN,COOLING		1


FAN SPACER

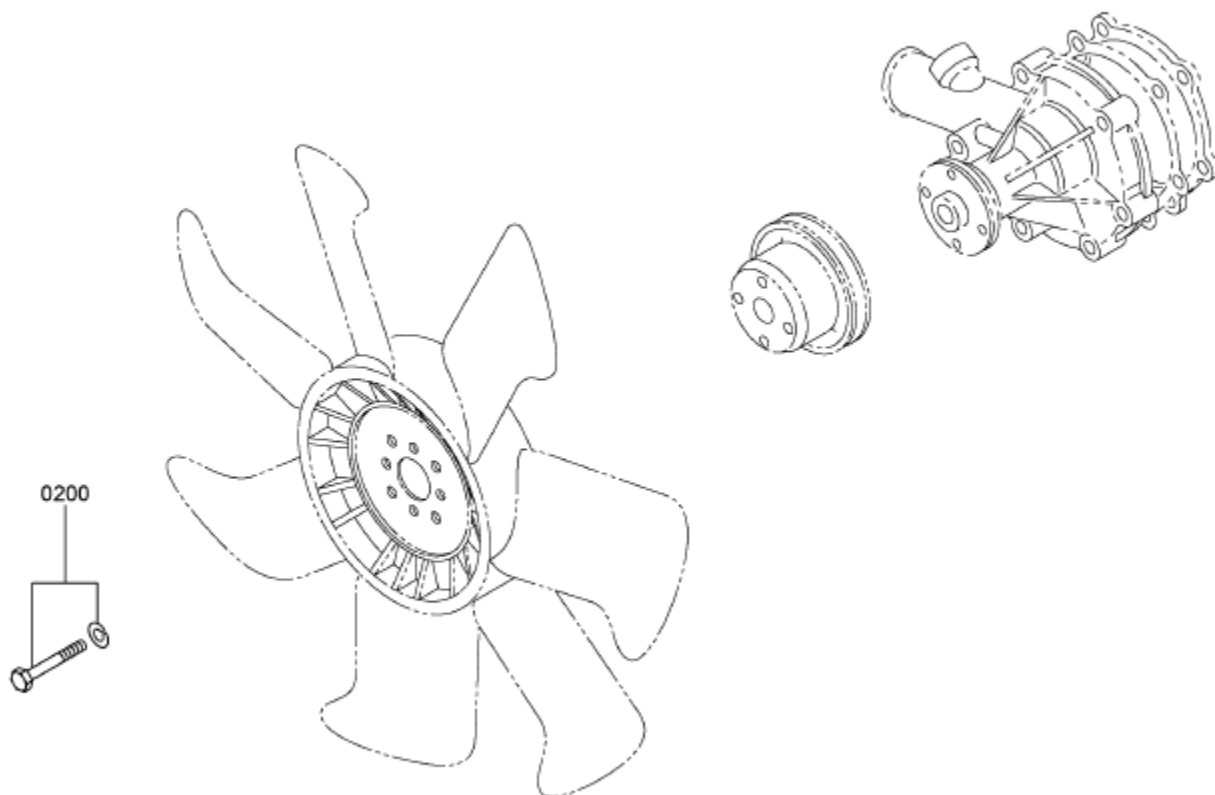

32. FAN SPACER

Ref.No	Part No	Part Name	Description	Qty
0200	39207380	BOLT,W/WASHER	B/W	4


V-BELT

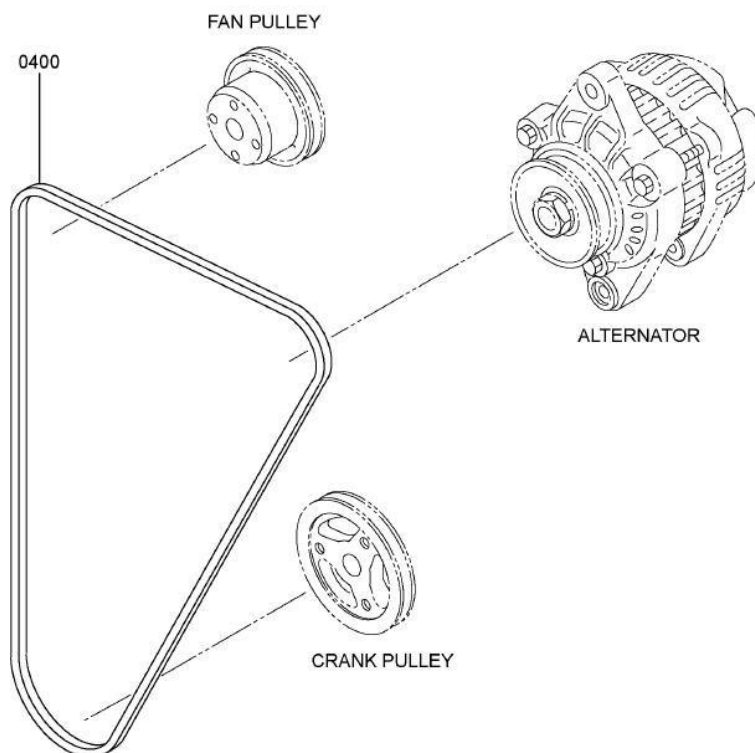

33. V-BELT

Ref.No	Part No	Part Name	Description	Qty
0400	39204607	V-BELT	L=970	1


FUEL SYSTEM

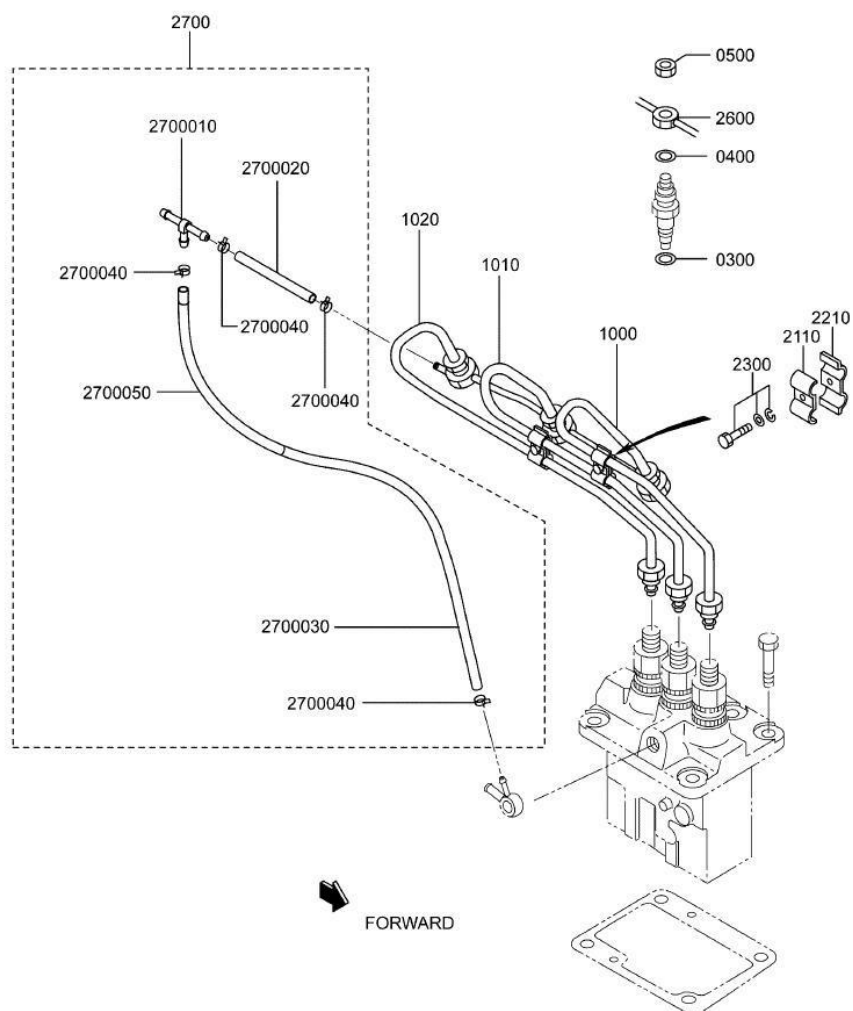

34. FUEL SYSTEM

Ref.No	Part No	Part Name	Description	Qty
0300	39204420	GASKET,HOLDER		3
400	39204453	GASKET,FUEL RETURN PIPE		3
500	39207382	NUT		3
1000	39205933	PIPE,INJECTION	NO.1	1
1010	39205934	PIPE,INJECTION	NO.2	1
1020	39205935	PIPE,INJECTION	NO.3	1
2110	39207442	CLAMP		2
2210	39207419	CLAMP		2
2300	39207402	BOLT,W/WASHER	B/W	2
2600	39207501	PIPE,FUEL LEAK OFF		1
2700	39205995	HOSE ASSY,AIR VENT		1
2700010	39205440	JOINT,THREE WAY		1
2700020	39204446	HOSE,FUEL	5X80	1
2700030	39207427	HOSE,FUEL	5X330	1
2700040	39207386	CLIP,HOSE		4
2700050	39207416	HOSE,RUBBER		1


FUEL SYSTEM (NOZZLE ASSY)

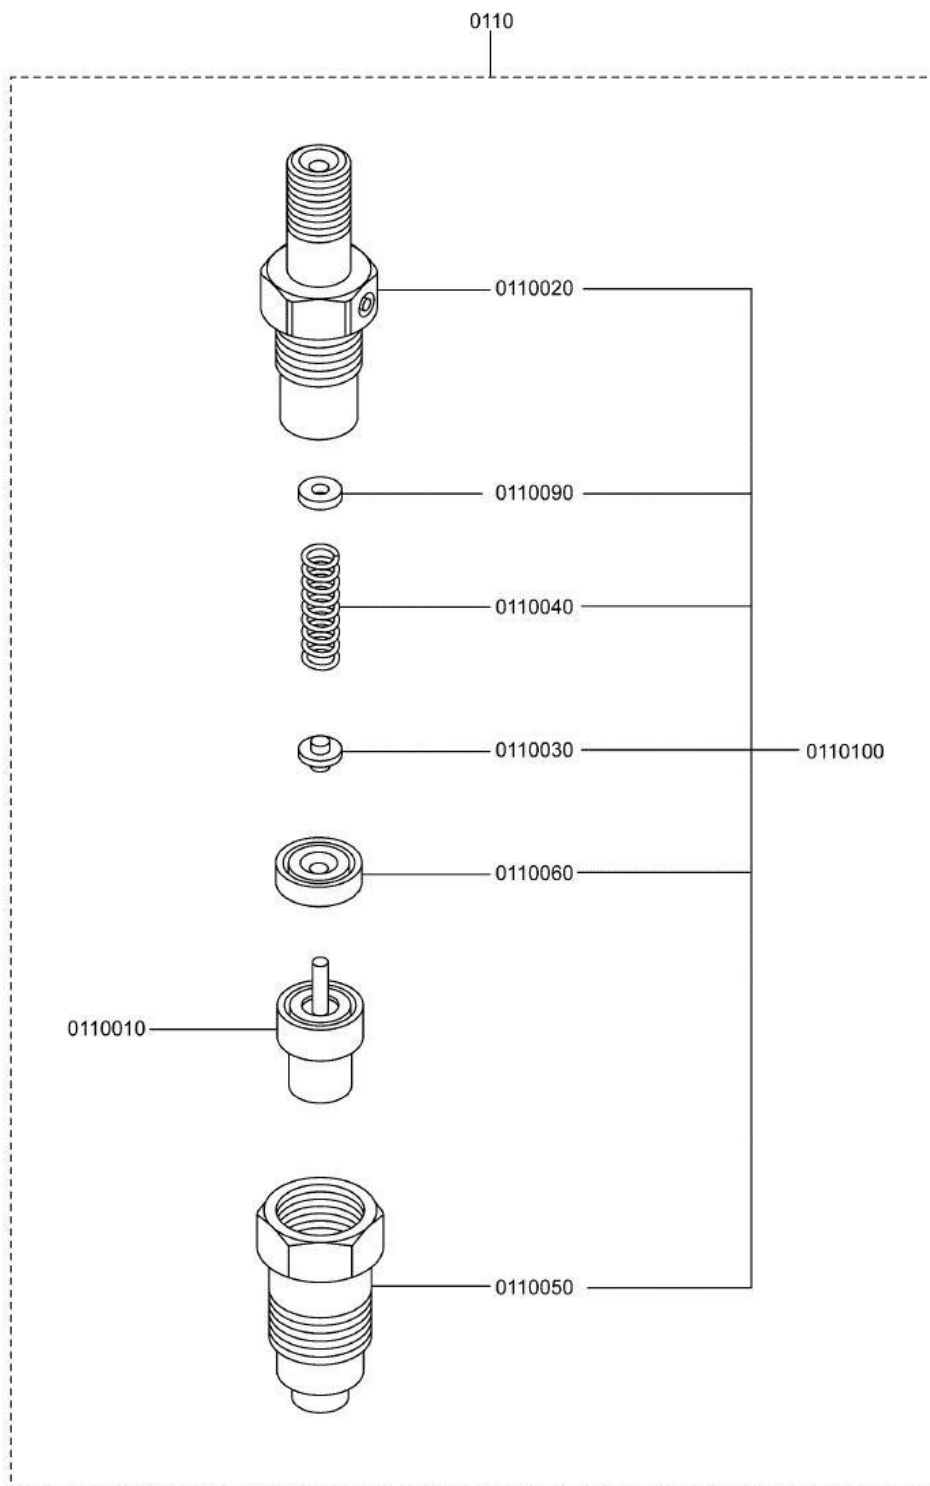

35. FUEL SYSTEM (NOZZLE ASSY)

Ref.No	Part No	Part Name	Description	Qty
0110	39205936	NOZZLE ASSY.INJECTION		3
110010	39207478	NOZZLE ASSY		3
110020	39207477	BODY SUB ASSY		3
110030	39207434	PIN,PRESSURE		3
110040	39207457	SPRING,PRESSURE		3
110050	39207468	NUT,NOZZLE RETAINING		3
110060	39207456	PIECE,DISTANCE		3
110090	39207449	SHIM	T=1.25	AR
	39207450	SHIM	T=1.30	AR
	39207451	SHIM	T=1.35	AR
	39207452	SHIM	T=1.40	AR
	39207453	SHIM	T=1.45	AR
	39207441	SHIM	T=1.50	AR
	39207435	SHIM	T=1.55	AR
	39207436	SHIM	T=1.60	AR
110100	39207437	SHIM	T=1.65	AR
	39207438	SHIM	T=1.70	AR
	39207487	HOLDER ASSY		3


FUEL FILTER

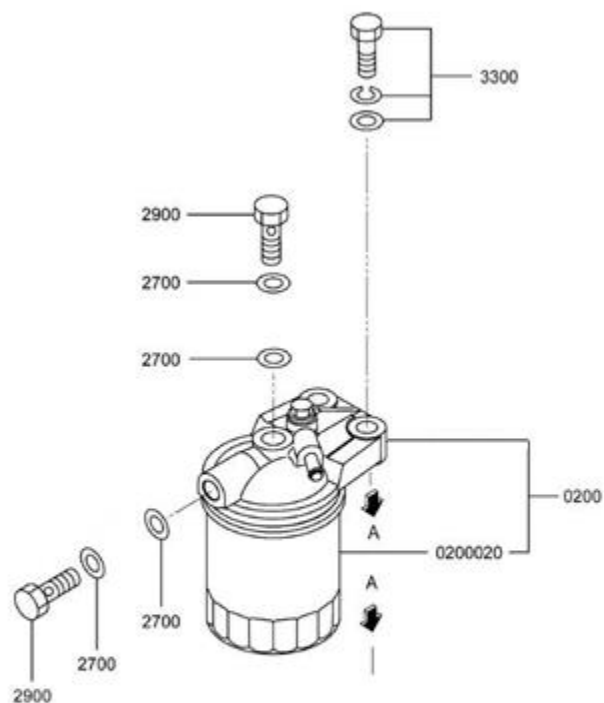

36. FUEL FILTER

Ref.No	Part No	Part Name	Description	Qty
0200	39205981	FILTER ASSY,FUEL		1
200020	39204422	CARTRIDGE,FUEL		1
2700	11500462	WASHER,SEAL		4
2900	11500461	BOLT,EYE		2
3300	39207560	BOLT, WASHER		1


GOVERNOR

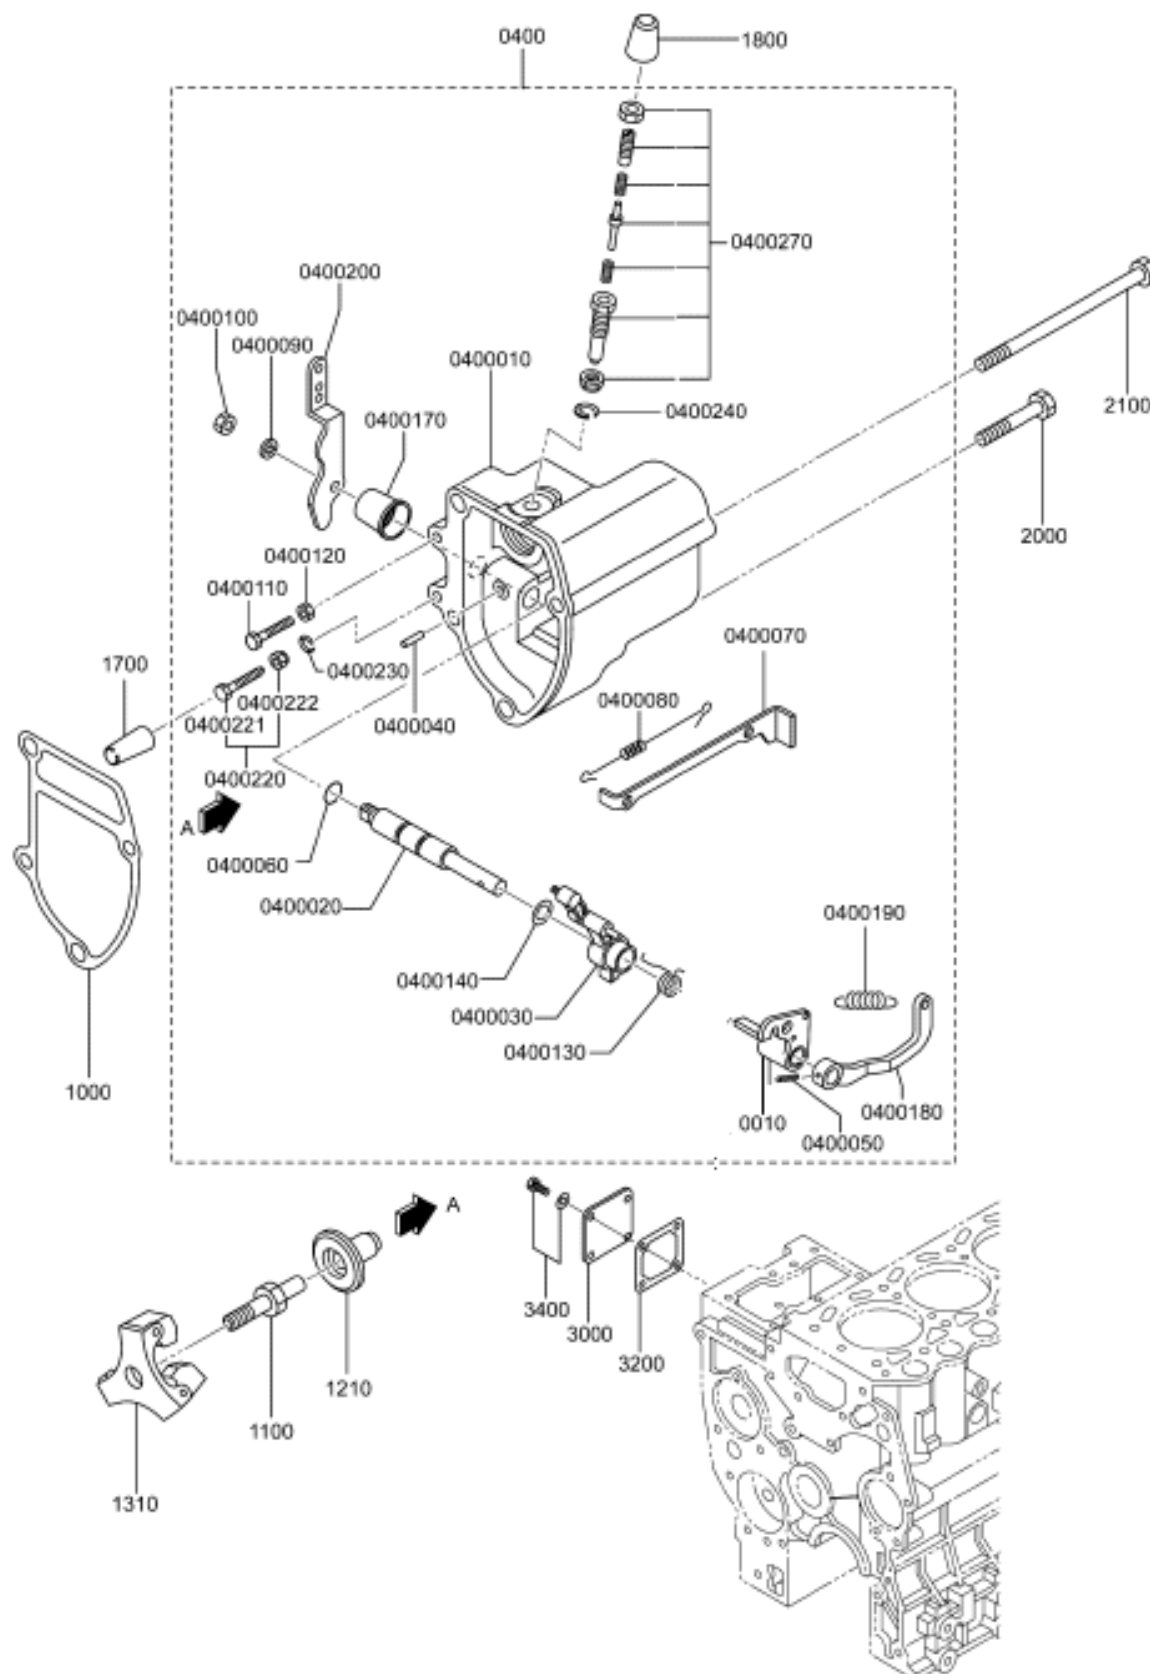

37. GOVERNOR

Ref.No	Part No	Part Name	Description	Qty
0010	39206362	LEVER ASSY,TENSION		AR
400	39207561	CASE ASSY,GOVERNOR		1
400010	39207476	CASE,GOVERNOR		1
400020	39207479	SHAFT,GOVERNOR		1
400030	39207475	LEVER,GOVERNOR		1
400040	39207397	PIN,GROOVED		1
400050	39207391	PIN,SPRING		1
400060	39206365	O-RING		1
400070	39206367	TIE-ROD		1
400080	39205937	SPRING,TIE ROD		1
400090	39207370	WASHER,SPRING		1
400100	39207369	NUT,JAM		1
400110	39205983	BOLT,LOW IDLE SET		1
400120	39207367	NUT		1
400130	39206387	SPRING,START		1
400140	39207387	SHIM,GOVERNOR SHAFT		1
400170	39207492	COVER,GOVERNOR SHAFT		1
400180	39207464	LEVER,GOVERNOR SPRING		1
400190	39205938	SPRING,GOVERNOR		1
400200	39207445	LEVER,SPEED CONTROL		1
400220	39207446	BOLT ASSY,HIGH SPEED		1
400221	39207376	BOLT,HIGH SPEED SET		1
400222	39207426	NUT,HIGH SPEED SET		1
400230	39207429	C-RING,HIGH SPEED SET		1
400240	39207431	C-RING,TORQUE SET		1
400270	39207486	SPRING SET,TORQUE		1
1000	39204447	GASKET,GOVERNOR CASE		1
1100	39207469	SHAFT,SLIDING SLEEVE		1
1210	39207470	SLEEVE,SLIDING		1
1310	39207502	WEIGHT ASSY,GOVERNOR		1
1700	39207440	COVER,HIGH SPEED SET		1
1800	39207444	COVER,TORQUE SET		1
2000	39206432	BOLT	8X45	3
2100	39207413	BOLT,GOVERNOR CASE		1
3000	39207439	COVER,TIE ROD		1
3200	39204448	GASKET,TIE ROD COVER		1
3400	39207374	BOLT,W/WASHER	B/W	4


INJECTION PUMP

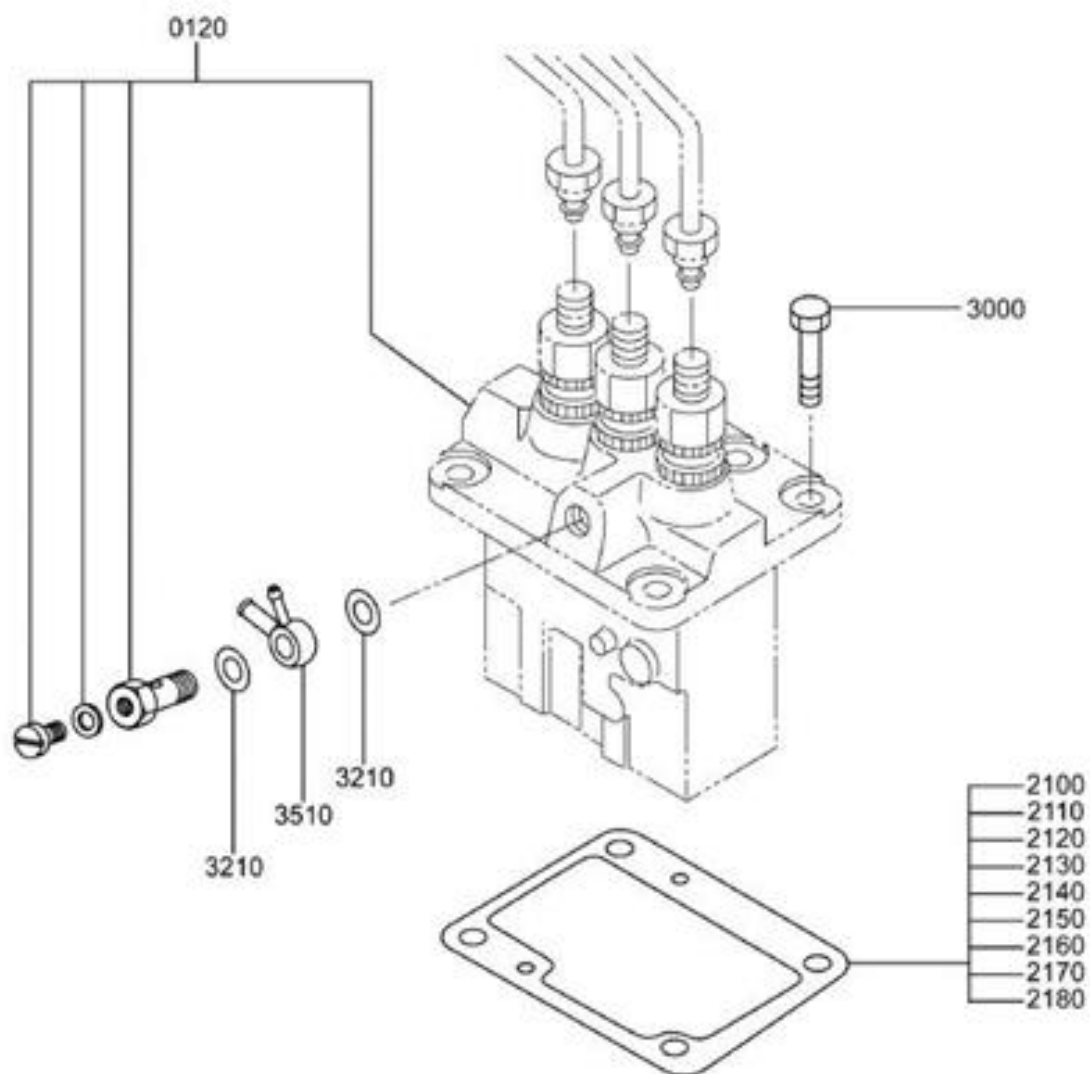

38. INJECTION PUMP

Ref.No	Part No	Part Name	Description	Qty
0120	39206373	PUMP ASSY,FUEL INJECTION		1
2100	39207256	SHIM,ADJUSTING	T=0.20	AR
2110	39206374	SHIM,ADJUSTING	T=0.30	AR
2120	39207597	SHIM,ADJUSTING	T=0.40	AR
2130	39207598	SHIM,ADJUSTING	T=0.50	AR
2140	39207599	SHIM,ADJUSTING	T=0.60	AR
2150	39207600	SHIM,ADJUSTING	T=0.70	AR
2160	39207601	SHIM,ADJUSTING	T=0.80	AR
2170	39207602	SHIM,ADJUSTING	T=0.90	AR
2180	39207603	SHIM,ADJUSTING	T=1.00	AR
3000	39207371	BOLT	8X20	4
3210	39206395	WASHER,SEAL		2
3510	39206828	COLLAR,UNION		1


FUEL INJECTION PUMP DRIVE

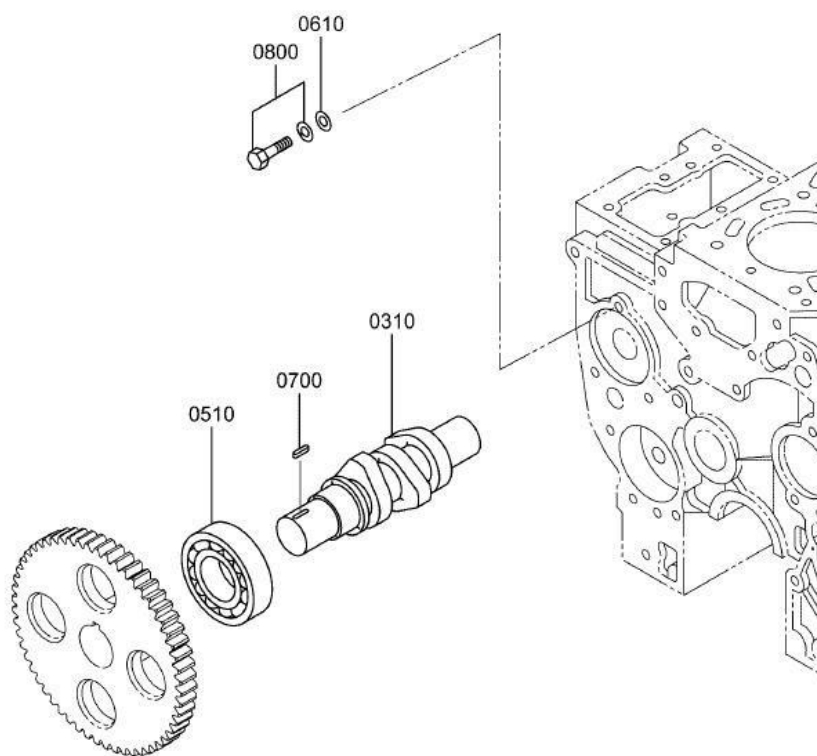

39. FUEL INJECTION PUMP DRIVE

Ref.No	Part No	Part Name	Description	Qty
0310	39207482	SHAFT,FUEL INJECTION PUMP		1
510	39207462	BEARING,RADIAL BALL		1
610	39207423	WASHER		1
700	39206388	KEY,SUNK		1
800	39207384	BOLT,W/WASHER	B/W	1


STARTER (12V-1.7kW)

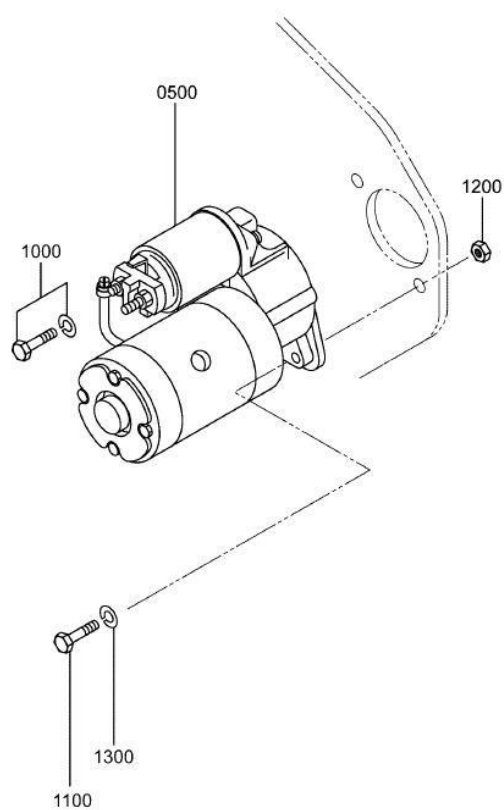

40. STARTER (12V-1.7kW)

Ref.No	Part No	Part Name	Description	Qty
0500	39205207	STARTER ASSY		1
1000	39205824	BOLT,W/WASHER	B/W	1
1100	39205823	BOLT,STARTER	10X45	1
1200	39205990	NUT		1
1300	39205989	WASHER,SPRING		1


GLOW PLUG & WIRE

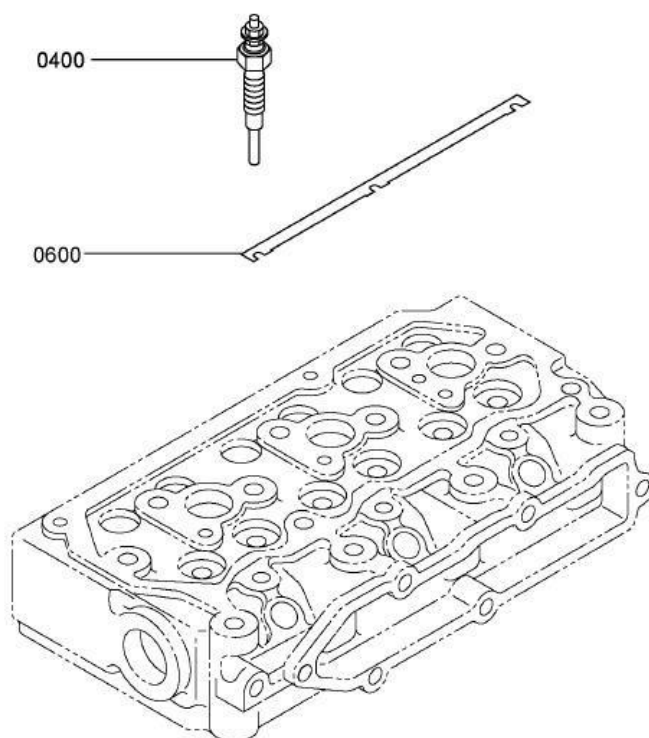

41. GLOW PLUG & WIRE

Ref.No	Part No	Part Name	Description	Qty
0400	39205725	PLUG,GLOW	12V	3
600	39205939	PLATE,CONNECTION		1


ALTERNATOR (12V-65A)

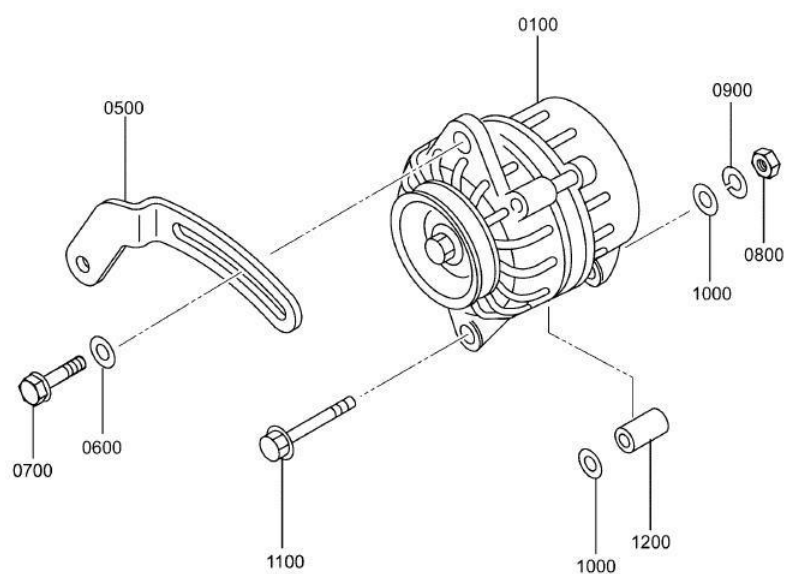

42. ALTERNATOR (12V-65A)

Ref.No	Part No	Part Name	Description	Qty
0100	39205206	ALTERNATOR		1
500	39206451	PLATE,ADJUSTING		1
600	39205992	WASHER		1
700	39205991	BOLT,FLANGE		1
800	39205990	NUT		1
900	39205989	WASHER,SPRING		1
1000	39205987	WASHER,PLAIN		2
1100	39205986	BOLT,FLANGE		1
1200	39205988	SPACER,ALTERNATOR		1



ENGINE CONTROL (STOP)

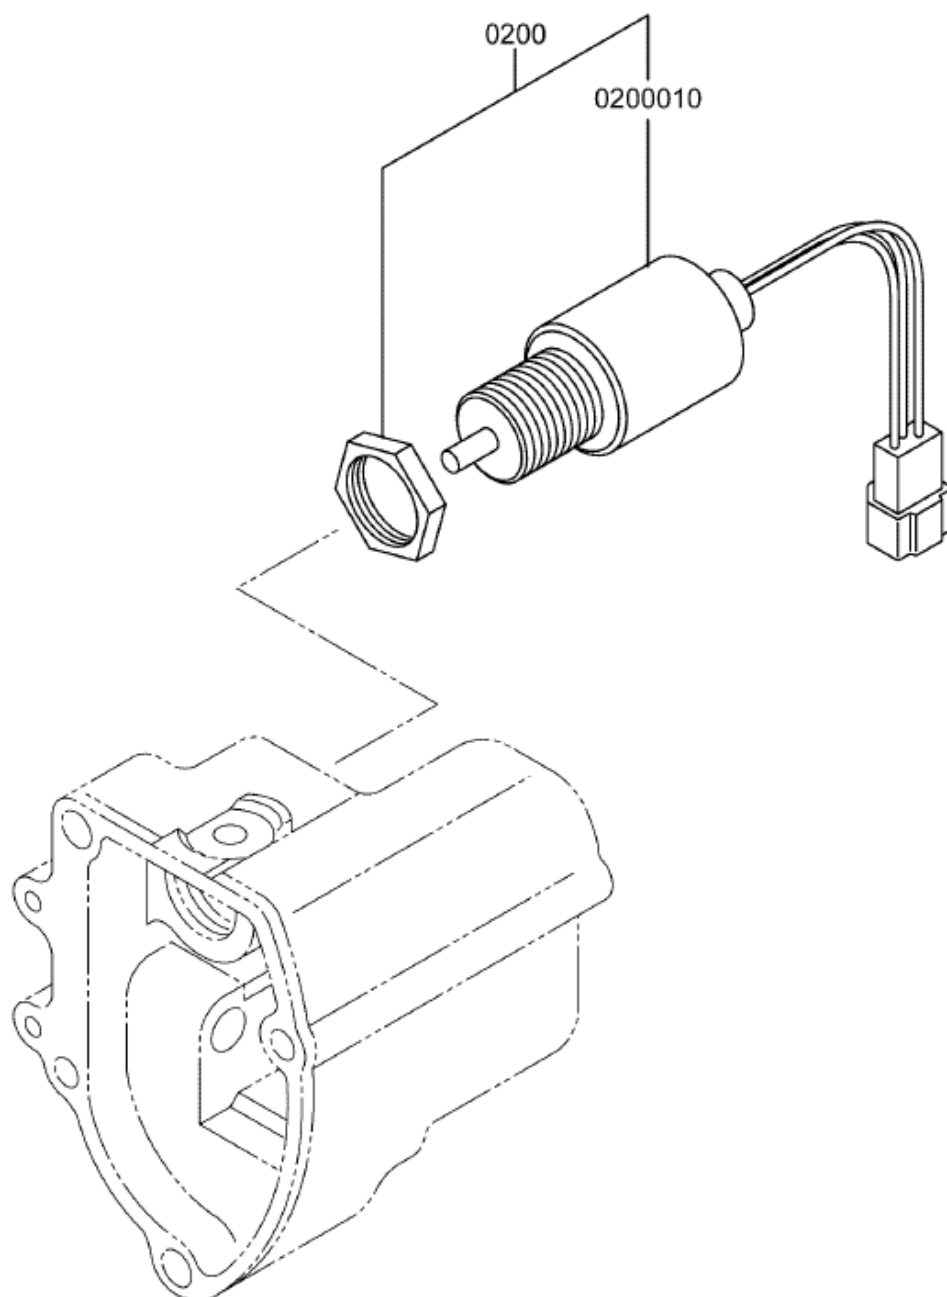

43. ENGINE CONTROL (STOP)

Ref.No	Part No	Part Name	Description	Qty
0200	39206368	SOLENOID & NUT SET		1





INSTRUMENT

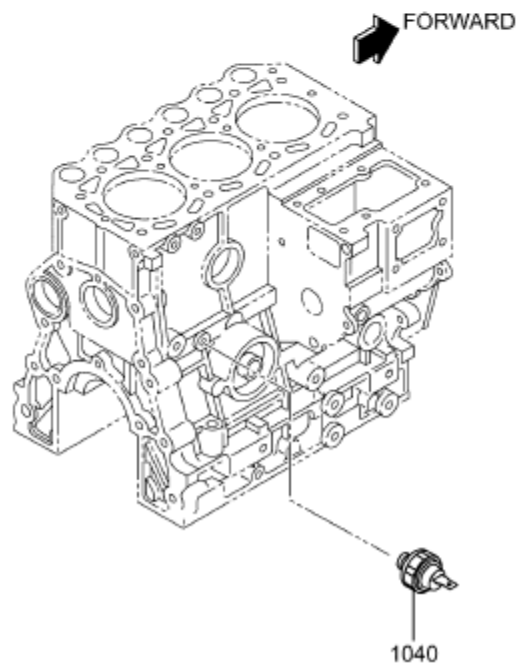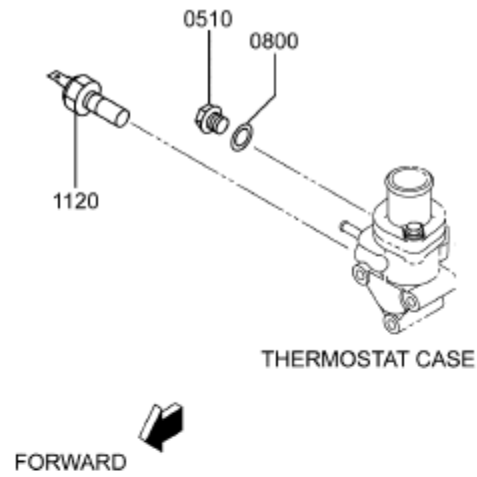

44. INSTRUMENT

Ref.No	Part No	Part Name	Description	Qty
510	39206452	PLUG,DRAIN		1
800	39204455	WASHER,SEALING		2
1040	39204429	SWITCH,OIL PRESSURE		1
1120	39204423	SENSOR,TEMPERATURE		1


ACCESSORY

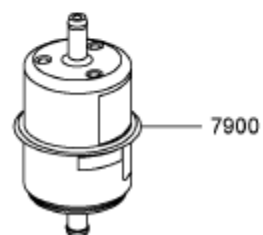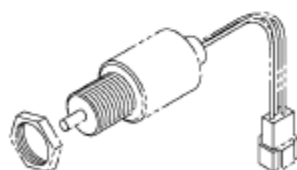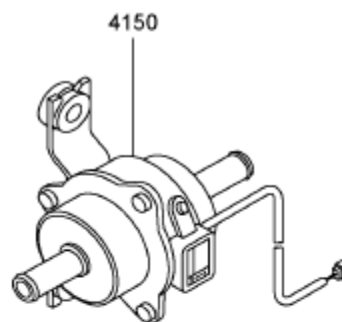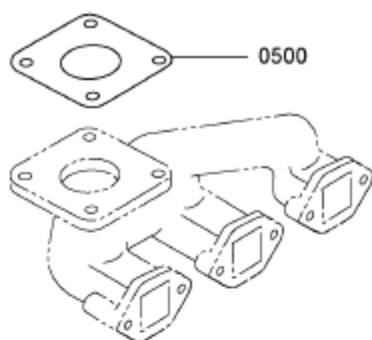

45. ACCESSORY

Ref.No	Part No	Part Name	Description	Qty
0500	39204106	GASKET,MUFFLER		1
4150	39205109	PUMP ASSY,FUEL		1
7900	39204421	PRE FILTER,FUEL		1


NAME PLATE

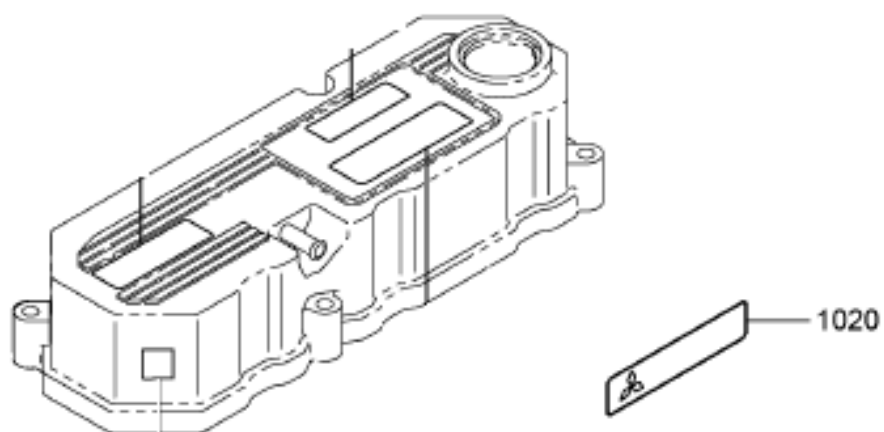

46. NAME PLATE

Ref.No	Part No	Part Name	Description	Qty
1020	39207573	PLATE,NAME		1

OVERHAUL GASKET KIT

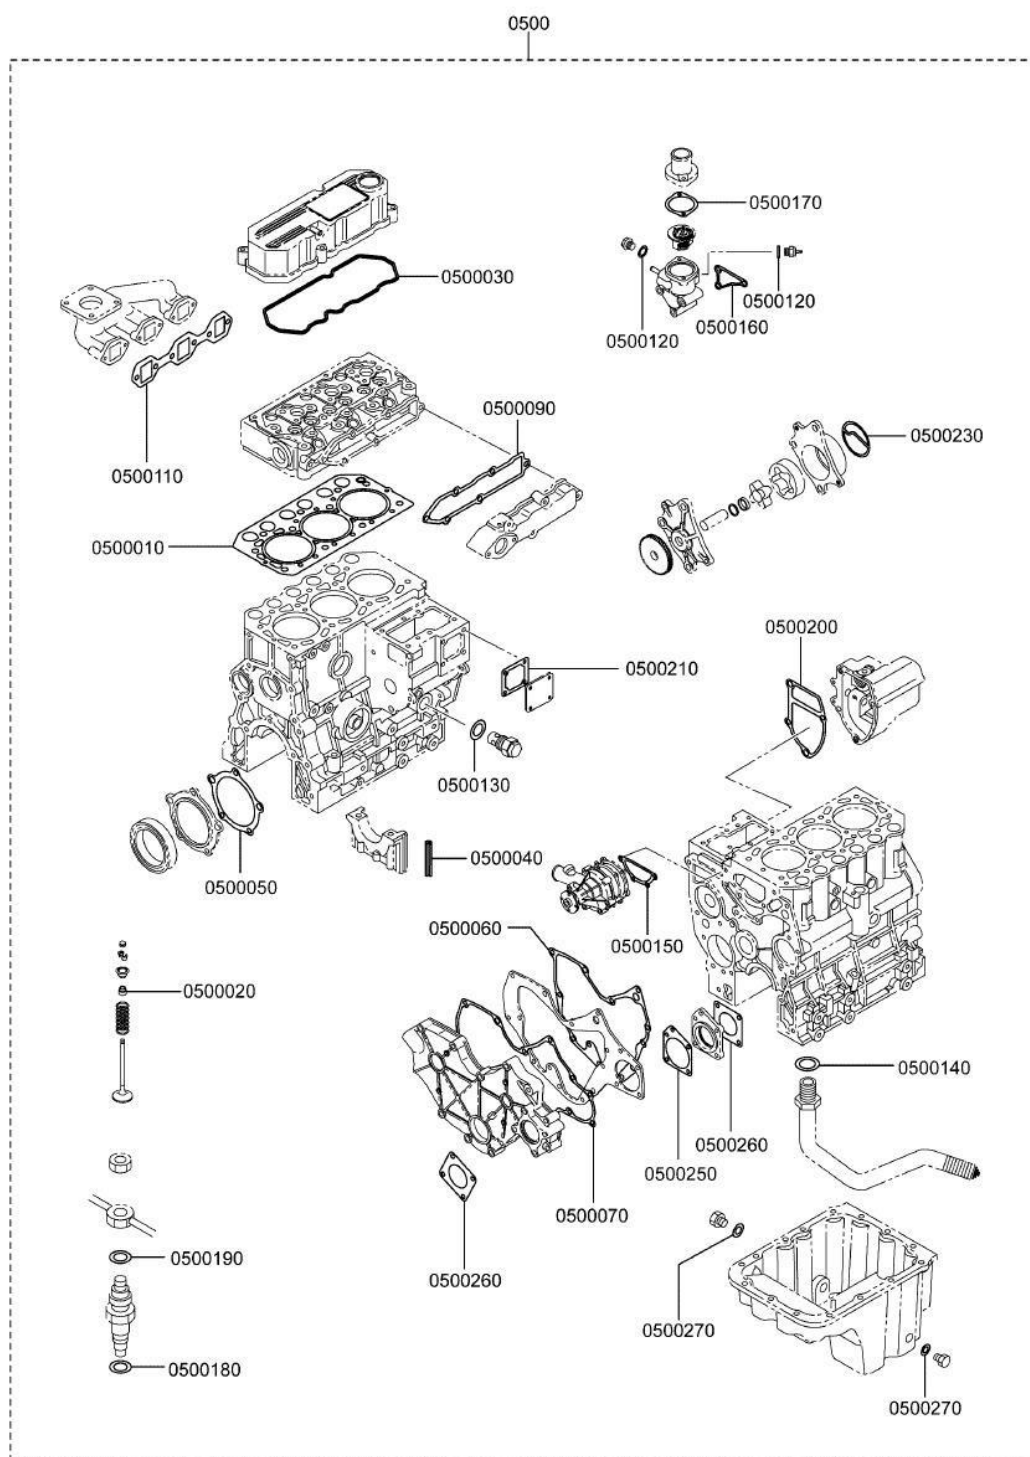

47. OVERHAUL GASKET KIT

Ref.No	Part No	Part Name	Description	Qty
0500	39206393	GASKET KIT,OVERHAUL		1
500010	39204430	GASKET,CYLINDER HEAD		1
500020	39204454	SEAL,VALVE STEM		6
500030	39204431	GASKET,ROCKER COVER		1
500040	39204425	SEAL,SIDE		4
500050	39204433	GASKET,OIL SEAL CASE		1
500060	39204434	GASKET,FRONT PLATE		1
500070	39207463	GASKET,GEAR CASE		1
500090	39204437	GASKET,INLET COVER		1
500110	39204432	GASKET,EXHAUST MANIFOLD		1
500120	39204455	WASHER,SEALING		3
500130	39204440	GASKET		1
500140	39204439	GASKET		1
500150	39204442	GASKET,WATER PUMP		1
500160	39204444	GASKET,THERMOCASE		1
500170	39206394	GASKET,THERMOSTAT		1
500180	39204420	GASKET,HOLDER		3
500190	39204453	GASKET,FUEL RETURN PIPE		3
500200	39204447	GASKET,GOVERNOR CASE		1
500210	39204448	GASKET,TIE ROD COVER		1
500230	39204427	PACKING,BODY		1
500250	39204435	GASKET,HOUSING		1
500260	39204415	GASKET,OIL PUMP COVER		2
500270	39204452	GASKET		2

